

# Norman 3 & 5 Port Rectangular Canopy

7449603, 7449605 | 1.0

## GENERATION LIGHTING PENDANT

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.



This instruction shows a typical installation.

### CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°c supply conductors.

**SAVE THESE INSTRUCTIONS!**

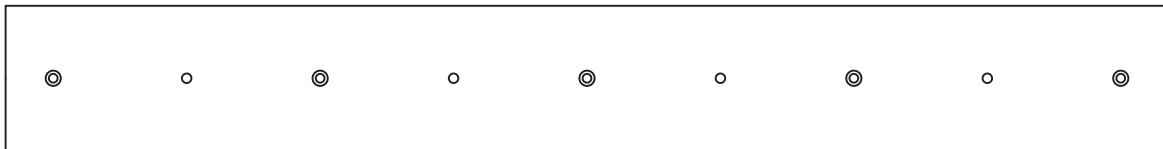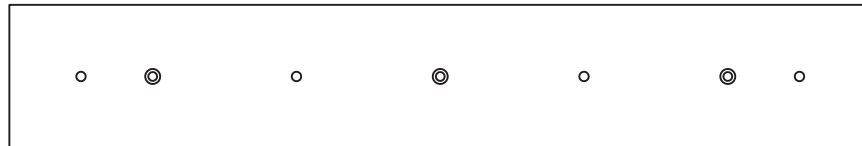

GENERATION LIGHTING  
 7400 Linder Ave., Skokie, IL 60077  
 T 847.410.4400 | F 847.410.4500  
 www.generationlighting.com

# Install the Fixture

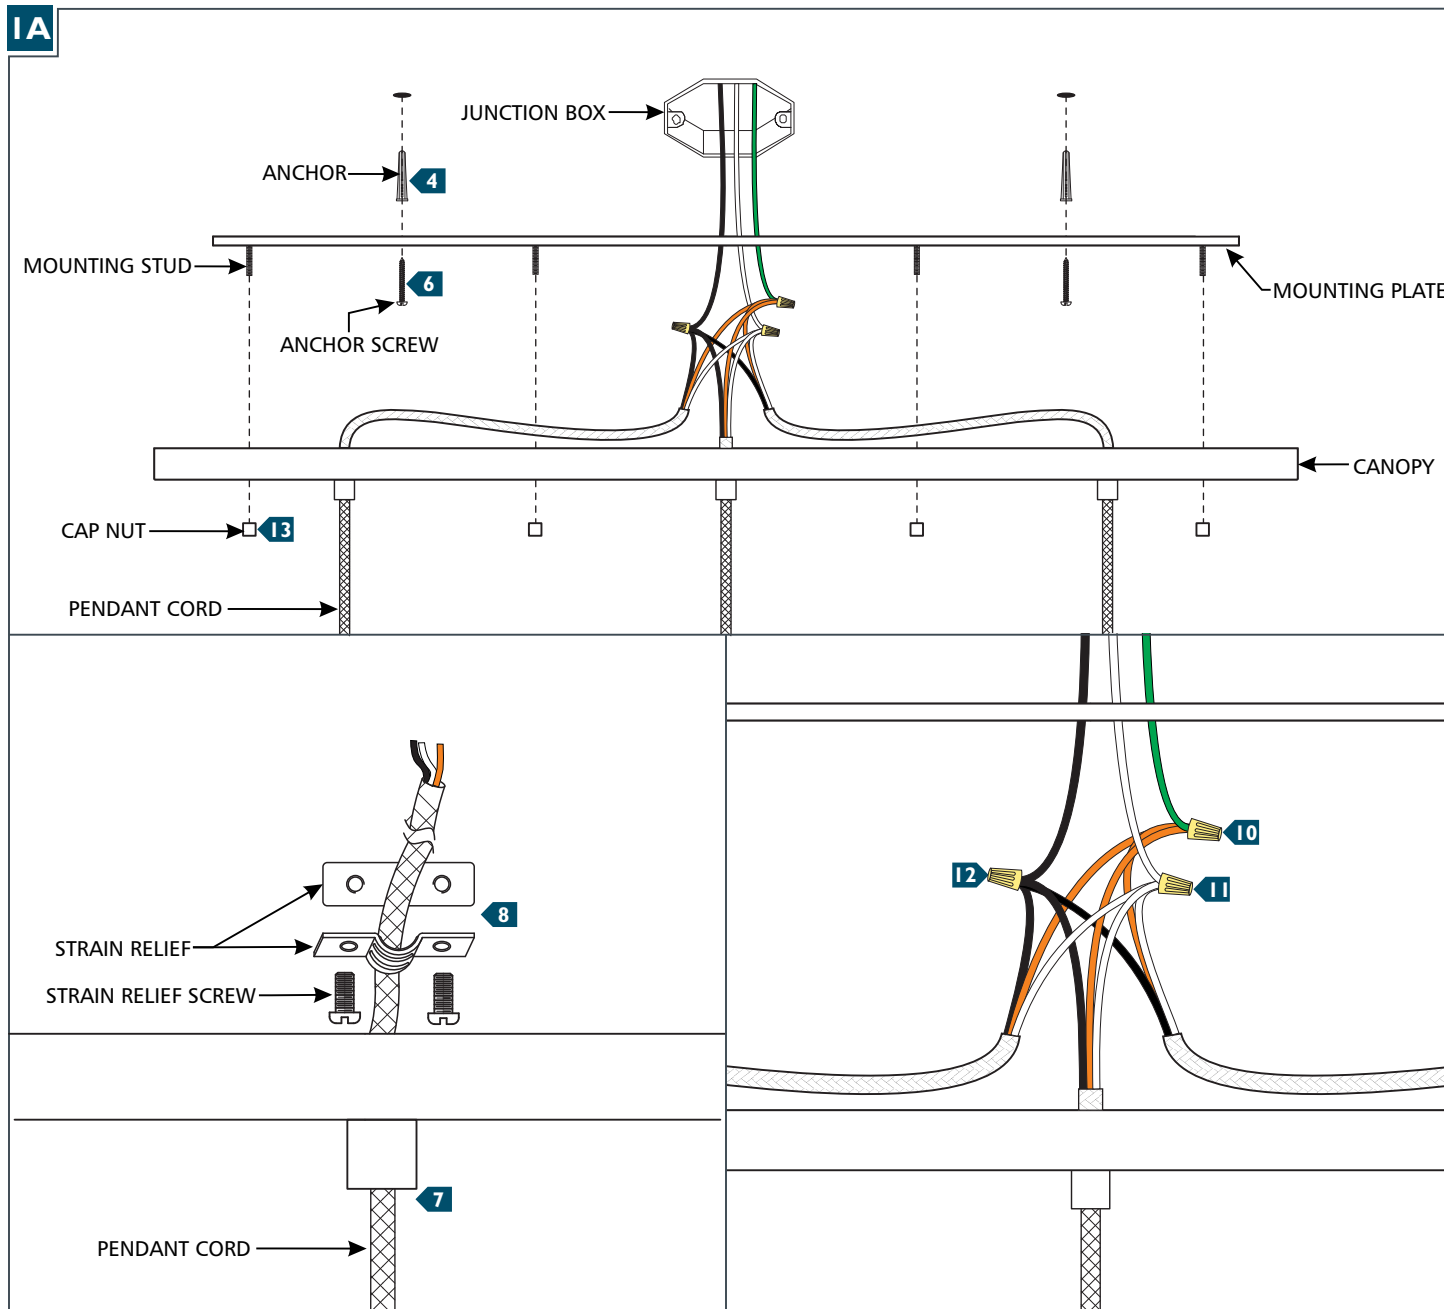

- 1** If necessary, separate the mounting plate from the canopy by unscrewing and removing the cap nuts.
- 2** Temporarily install the mounting plate to the junction box.
- 3** Mark the anchor hole locations through the holes on the mounting plate. Remove the mounting plate.
- 4** Drill appropriate sized holes at the marked locations and install the anchors.
- 5** Secure the mounting plate to the junction box.
- 6** Screw the anchor screws into the anchors.
- 7** Feed the pendant cords through the canopy and determine the desired height.
- 8** Install the strain relief on the cord, inside the canopy, by tightly screwing both pieces together.
- 9** Trim the cord leaving enough for electrical connections. From the end of the cord, strip the insulation 4" and then strip the end of the wires.  
**NOTE: Make sure not to nick the inner wires.**
- 10** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 11** Connect the white pendant wires (square and/or rigid) to the neutral power line wire with a wire nut.
- 12** Connect the black pendant wires (round and/or smooth) to the hot power line wire with a wire nut.
- 13** Properly place all wires and wire nut connections into the junction box/canopy, place the canopy onto the mounting studs, and secure in place by screwing the cap nuts onto the studs.
- 14** Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.