
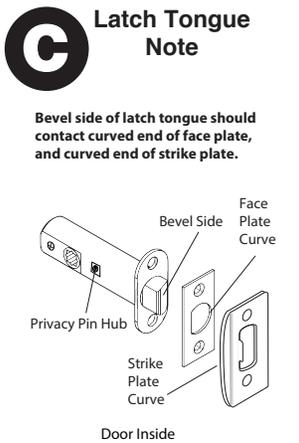
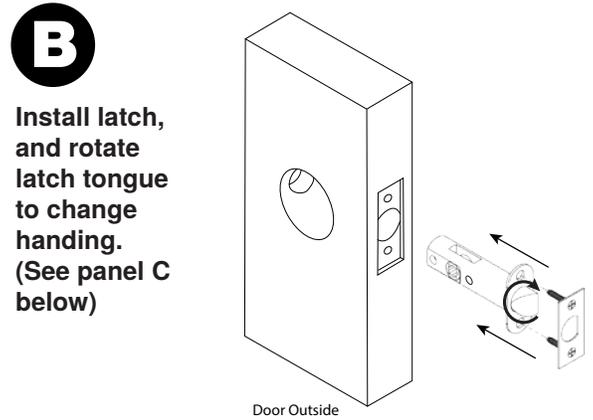


Tall Plate Door Hardware Installation Instructions





Passage/Privacy

Note: Passages and privacies for doors 1-3/8" to 2" thick

Tools Required: Drill, 1/4" drill bit, #2 Phillips screwdriver

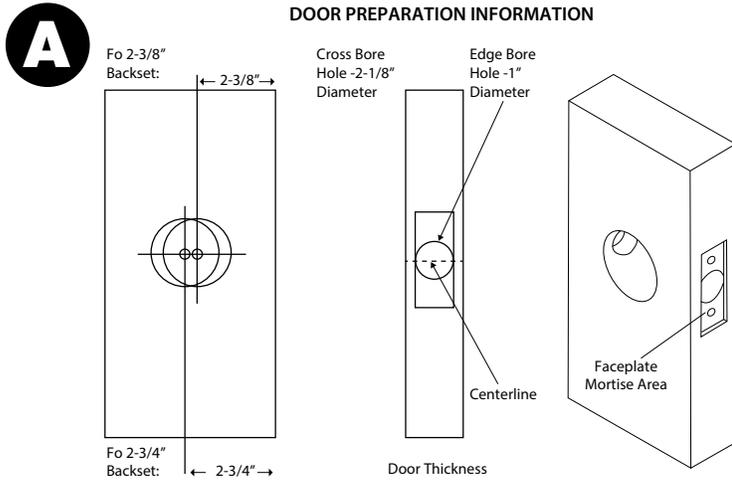

IMPORTANT:
The privacy pin hub with threads goes on the inside of the door so it can accept the privacy pin.

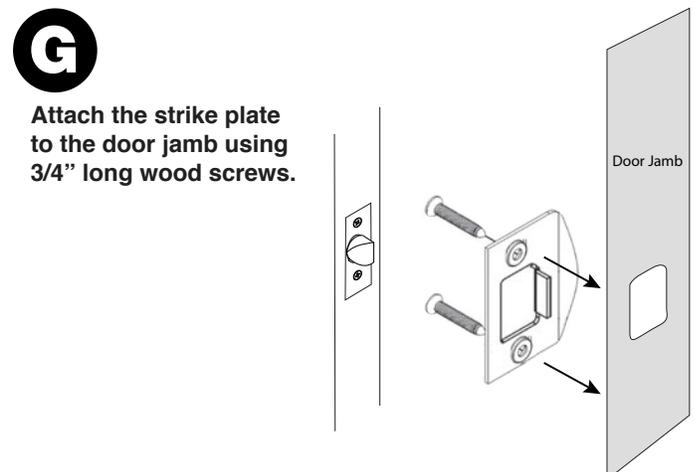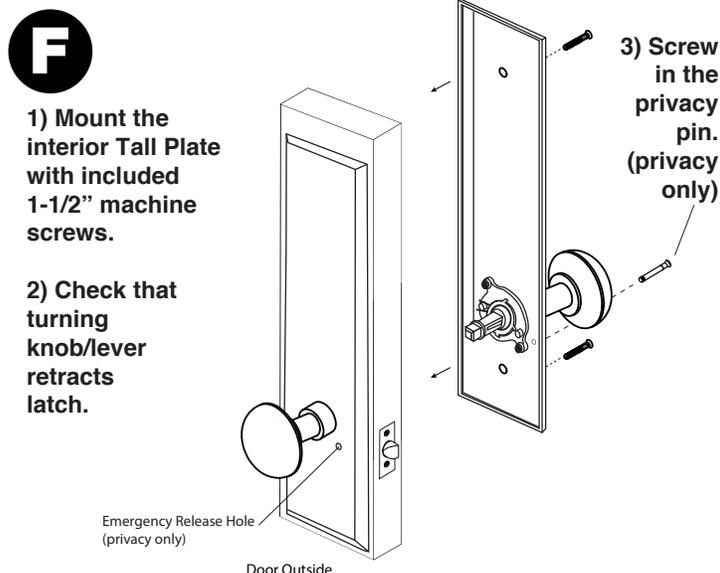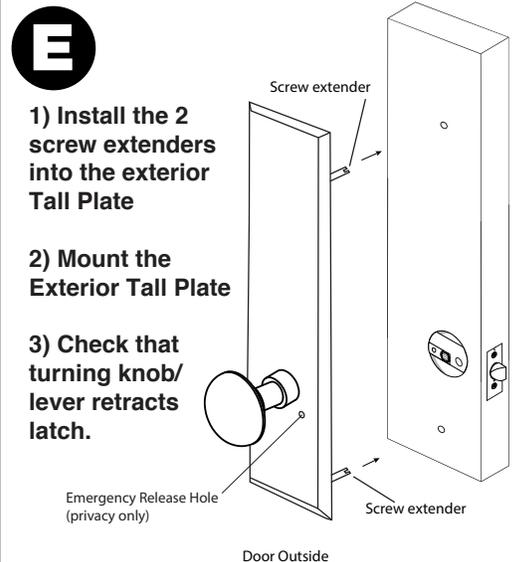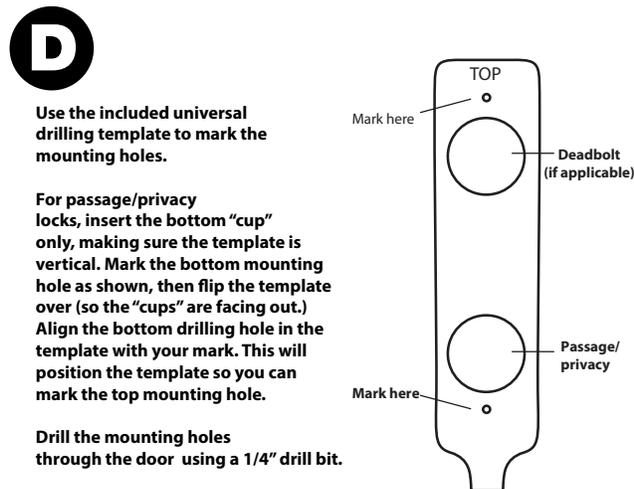

Exploded Drawing for Tall Plate Passage/Privacy

