

ASSEMBLY INSTRUCTION










ITEM :


5180-90267; 5280-90267 6/6 PANEL BED HEADBOARD

5180-90268; 5280-90268 6/6 PANEL BED FOOTBOARD



5180-90269; 5280-90269 6/6 PANEL BED RAILS

Thank you for purchasing this quality product. Be sure to unpack material carefully for small parts which may have come loose during shipment. Identify and count all parts and compare with the Part-List below. Read all instruction and study the drawing carefully before starting the assembly process:

| HARDWARE PART | | | | |
|---------------|---|-----------------------|---------------|--------|
| A |  | THREADED ROD | Ø5/16" X 3" | 8 Pcs |
| B |  | HEX NUT | Ø 5/16" | 8 Pcs |
| C |  | CURVED SLOTTED WASHER | Ø 5/16" | 8 Pcs |
| D |  | WOOD SCREW | Ø 8x35mm | 10 Pcs |
| E |  | WRENCH | 12mm | 1 Pc |
| F |  | HEX HEAD BOLT | Ø 1/4"x1-1/2" | 10 Pcs |
| G |  | LOCK WASHER | Ø 1/4"mm | 10 Pcs |
| H |  | FLAT WASHER | Ø 1/4"mm | 10 Pcs |
| I |  | WRENCH | 10mm | 1 Pc |

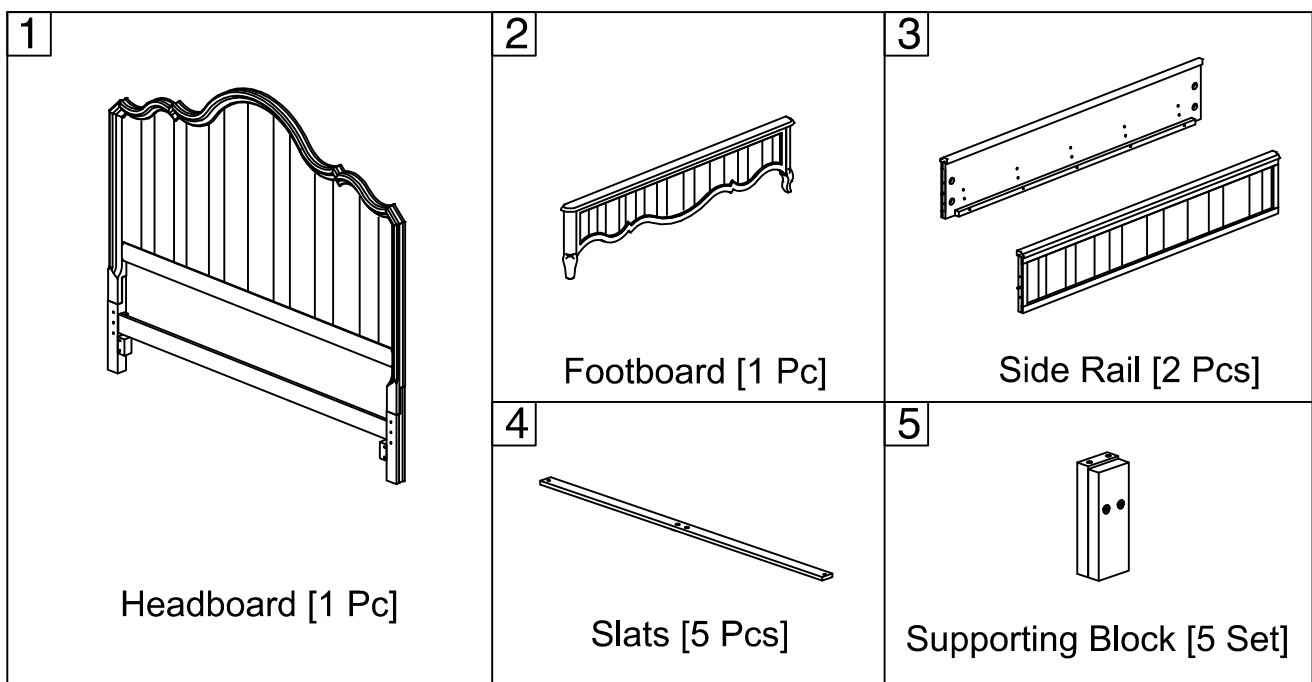

STEP 1

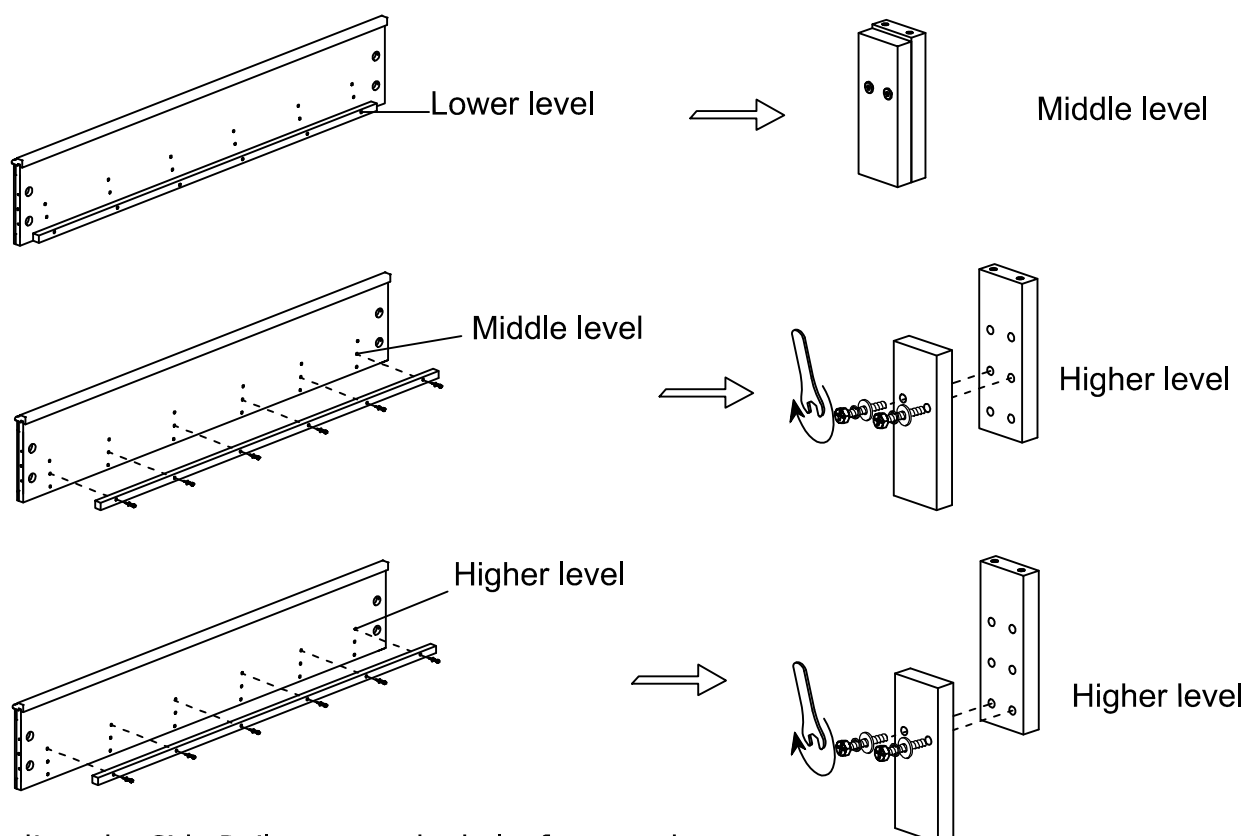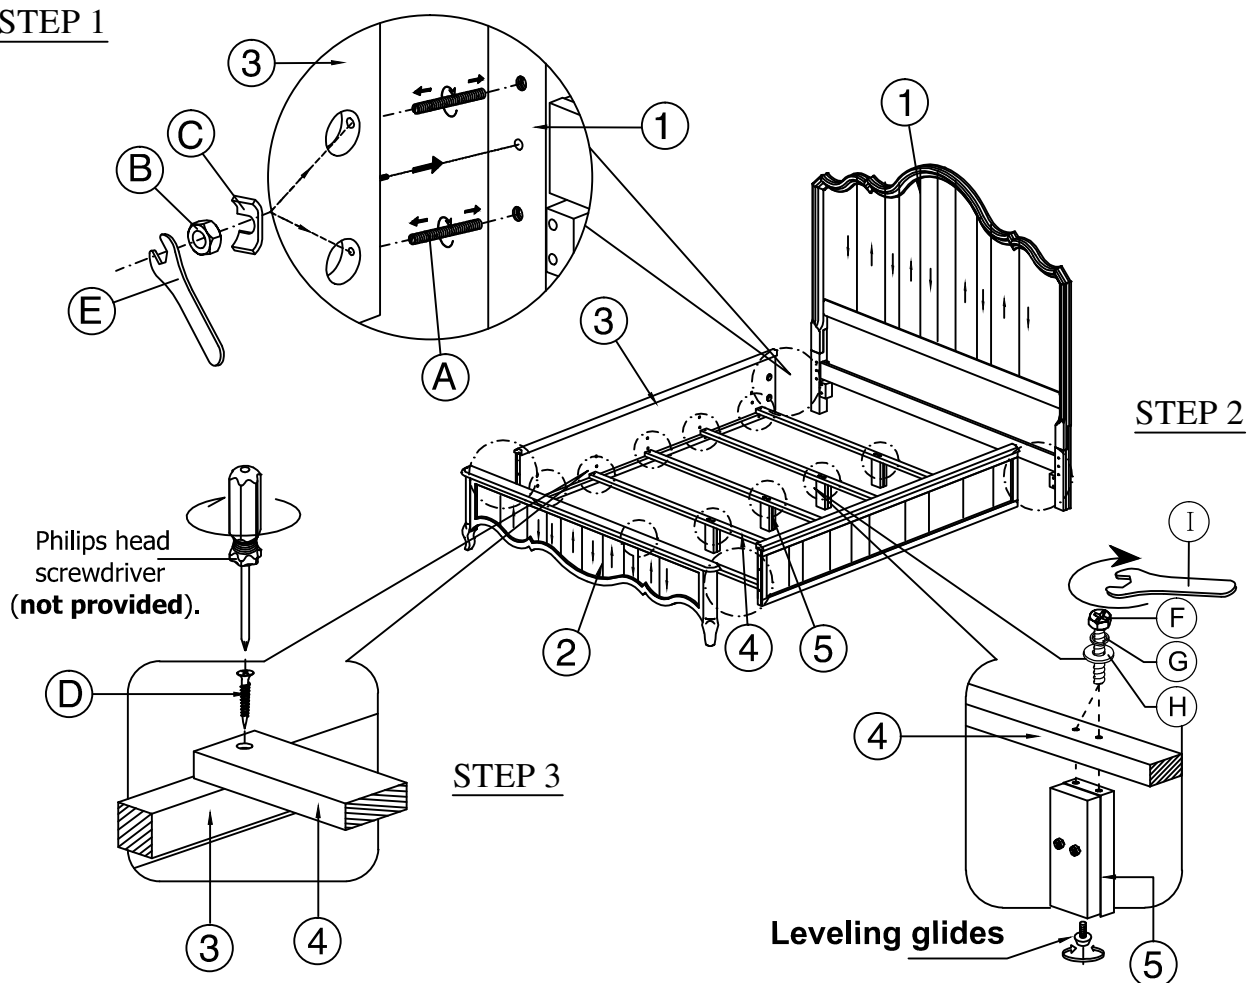

To adjust the Side Rail, remove the bolts from on the wooden rail.