




ASSEMBLY INSTRUCTION

ITEM: 6950-90005-80 Pole Rattan Accent Mirror
 6950-90005-99 Pole Rattan Accent Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Hook	4*53MM	2 PCS
B		Plastic Anchor	∅ 9*30MM	2 PCS

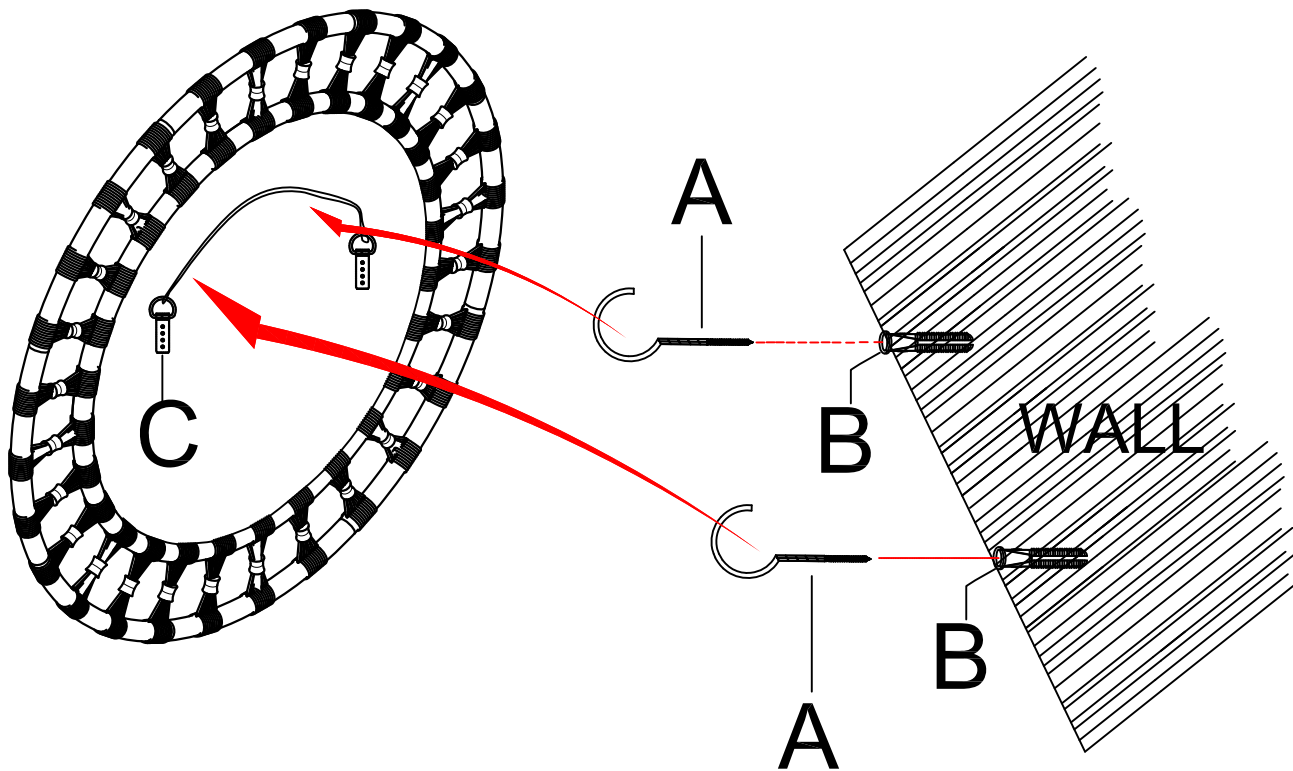

Assembly Steps:

1. Drill two holes into the wall using 1/4" drill bit (not provided) at the desired place you want to set the mirror and insert plastic anchors (B).
2. Screw hooks (A) into the plastic anchors (B). Check and make sure the plastic anchors (B) are securely held in the wall.
3. Hang the metal rings (C) onto the hooks (A) and set the mirror in the angle you want.