

## ASSEMBLY & INSTALLATION INSTRUCTIONS FOR #617-8I

Please read carefully and save these instructions, as you may need them at a later date.

### CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.


Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

### ASSEMBLY AND INSTALLATION

1. At the center of the MOUNTING BRACKET (2) there are eight perforated slots. Knock out the set matches your ELECTRICAL OUTLET BOX (1).
2. Pull the power supply wires out from the OUTLET BOX (1), and mount the MOUNTING BRACKET (2) to the OUTLET BOX (1), using #8-32 IPS MOUNTING SCREWS (3). Mark the position of the PLASTIC ANCHORS(4), tack out the MOUNTING BRACKET (2), and Use the appropriate tool to fix PLASTIC ANCHORS(4) in the position marked on the wall, then once again mount the MOUNTING BRACKET (2) to the OUTLET BOX (1), using #8-32 IPS MOUNTING SCREWS (3) and ANCHOR SCREW(5).
3. Thread the BOTTOM TUBE(23) onto the FIXTURE ASSEMBLY(24), Thread the MIDDLE TUBE(22) onto the BOTTOM TUBE(23), and MIDDLE TUBE(21) onto the MIDDLE TUBE(22), UPPER TUBE(20) onto the MIDDLE TUBE(21). Thread the SWIVEL(19) onto the UPPER TUBE(20).
4. Slide the CANOPY (16) onto the NIPPER(18) secure with the BUTTERFLY NUTS(15).
5. Attach the power supply wires to the fixture lead wires by connecting. the SMOOTH FIXTURE LEAD WIRE (11) to the BLACK SUPPLY WIRE (10), and the RIBBED FIXTURE LEAD WIRE(9) to the WHITE SUPPLY WIRE (8) using WIRE NUTS (12). Loop the FIXTURE GROUND WIRE (6) around the GROUND SCREW (14) of the MOUNTING BRACKET (2). Connect the remaining FIXTURE GROUND WIRE (6) to the SUPPLY GROUND WIRE (7) using a WIRE NUT (12) . Place wiring and connections inside the OUTLET BOX (1).
6. Place the CANOPY (16) onto the FIXTURE MOUNTING SCREWS (13), and secure it into place using the DECORATIVE NUTS (17) provided.
7. Screw light bulbs into the lamp sockets and make sure they do not exceed the maximum wattage specified on the fixture's wattage rating label.
8. Slide the GLASS SHADE(27)(not included) into the GLASS CUP(25).

INSTALLATION IS NOW COMPLETED

FIG 1

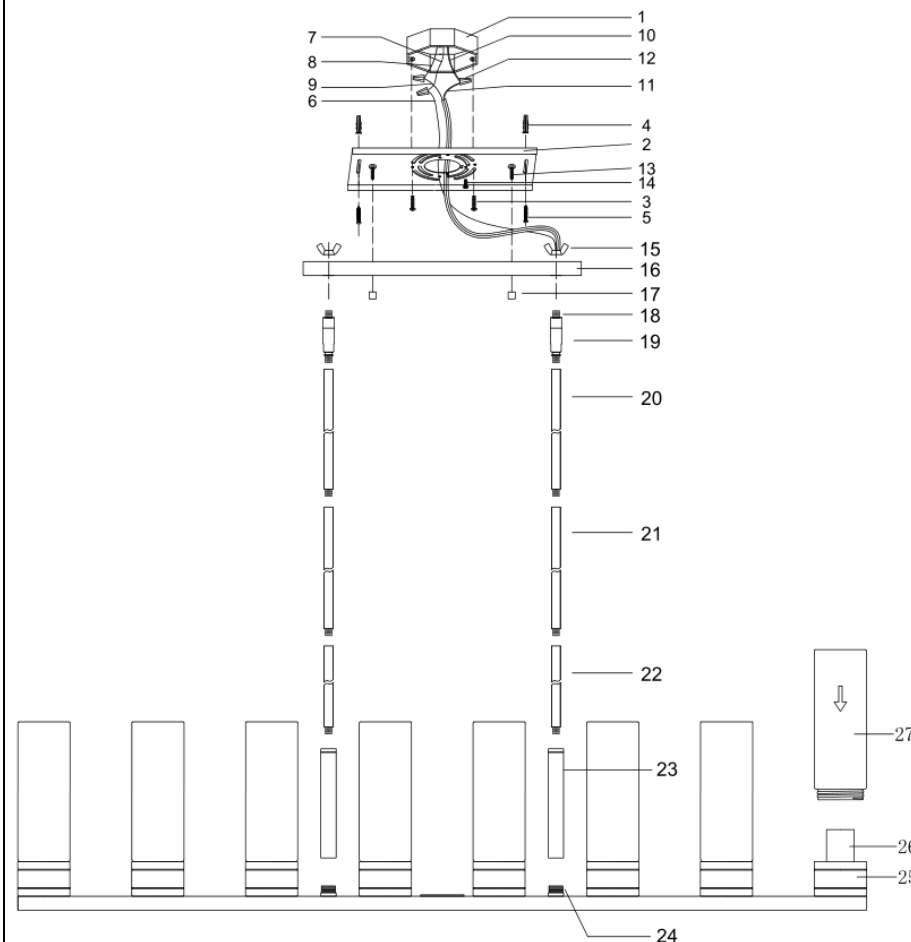

- |                             |                             |                      |
|-----------------------------|-----------------------------|----------------------|
| 1. OUTLET BOX               | 9. RIBBED FIXTURE WIRE      | 19. SWIVEL           |
| 2. MOUNTING BRACKET         | 10. BLACK SUPPLY WIRE       | 20. UPPER TUBE       |
| 3. #8-32 IPS MOUNTING SCREW | 11. SMOOTH FIXTURE WIRE     | 21. MIDDLE TUBE      |
| 4. PLASTIC ANCHORS          | 12. WIRE NUT                | 22. MIDDLE TUBE      |
| 5. ANCHOR SCREW             | 13. FIXTURE MOUNTING SCREWS | 23. BOTTOM TUBE      |
| 6. FIXTURE GROUND WIRE      | 14. GROUND SCREW            | 24. FIXTURE ASSEMBLY |
| 7. SUPPLY GROUND WIRE       | 15. BUTTERFLY NUTS          | 25. GLASS CUP        |
| 8. WHITE SUPPLY WIRE        | 16. CANOPY                  | 26. SOCKET CUP       |
|                             | 17. DECORATIVE NUT          | 27. GLASS SHADE      |
|                             | 18. NIPPER                  |                      |