


# Template For NY/MH with Tubular Handle-Set

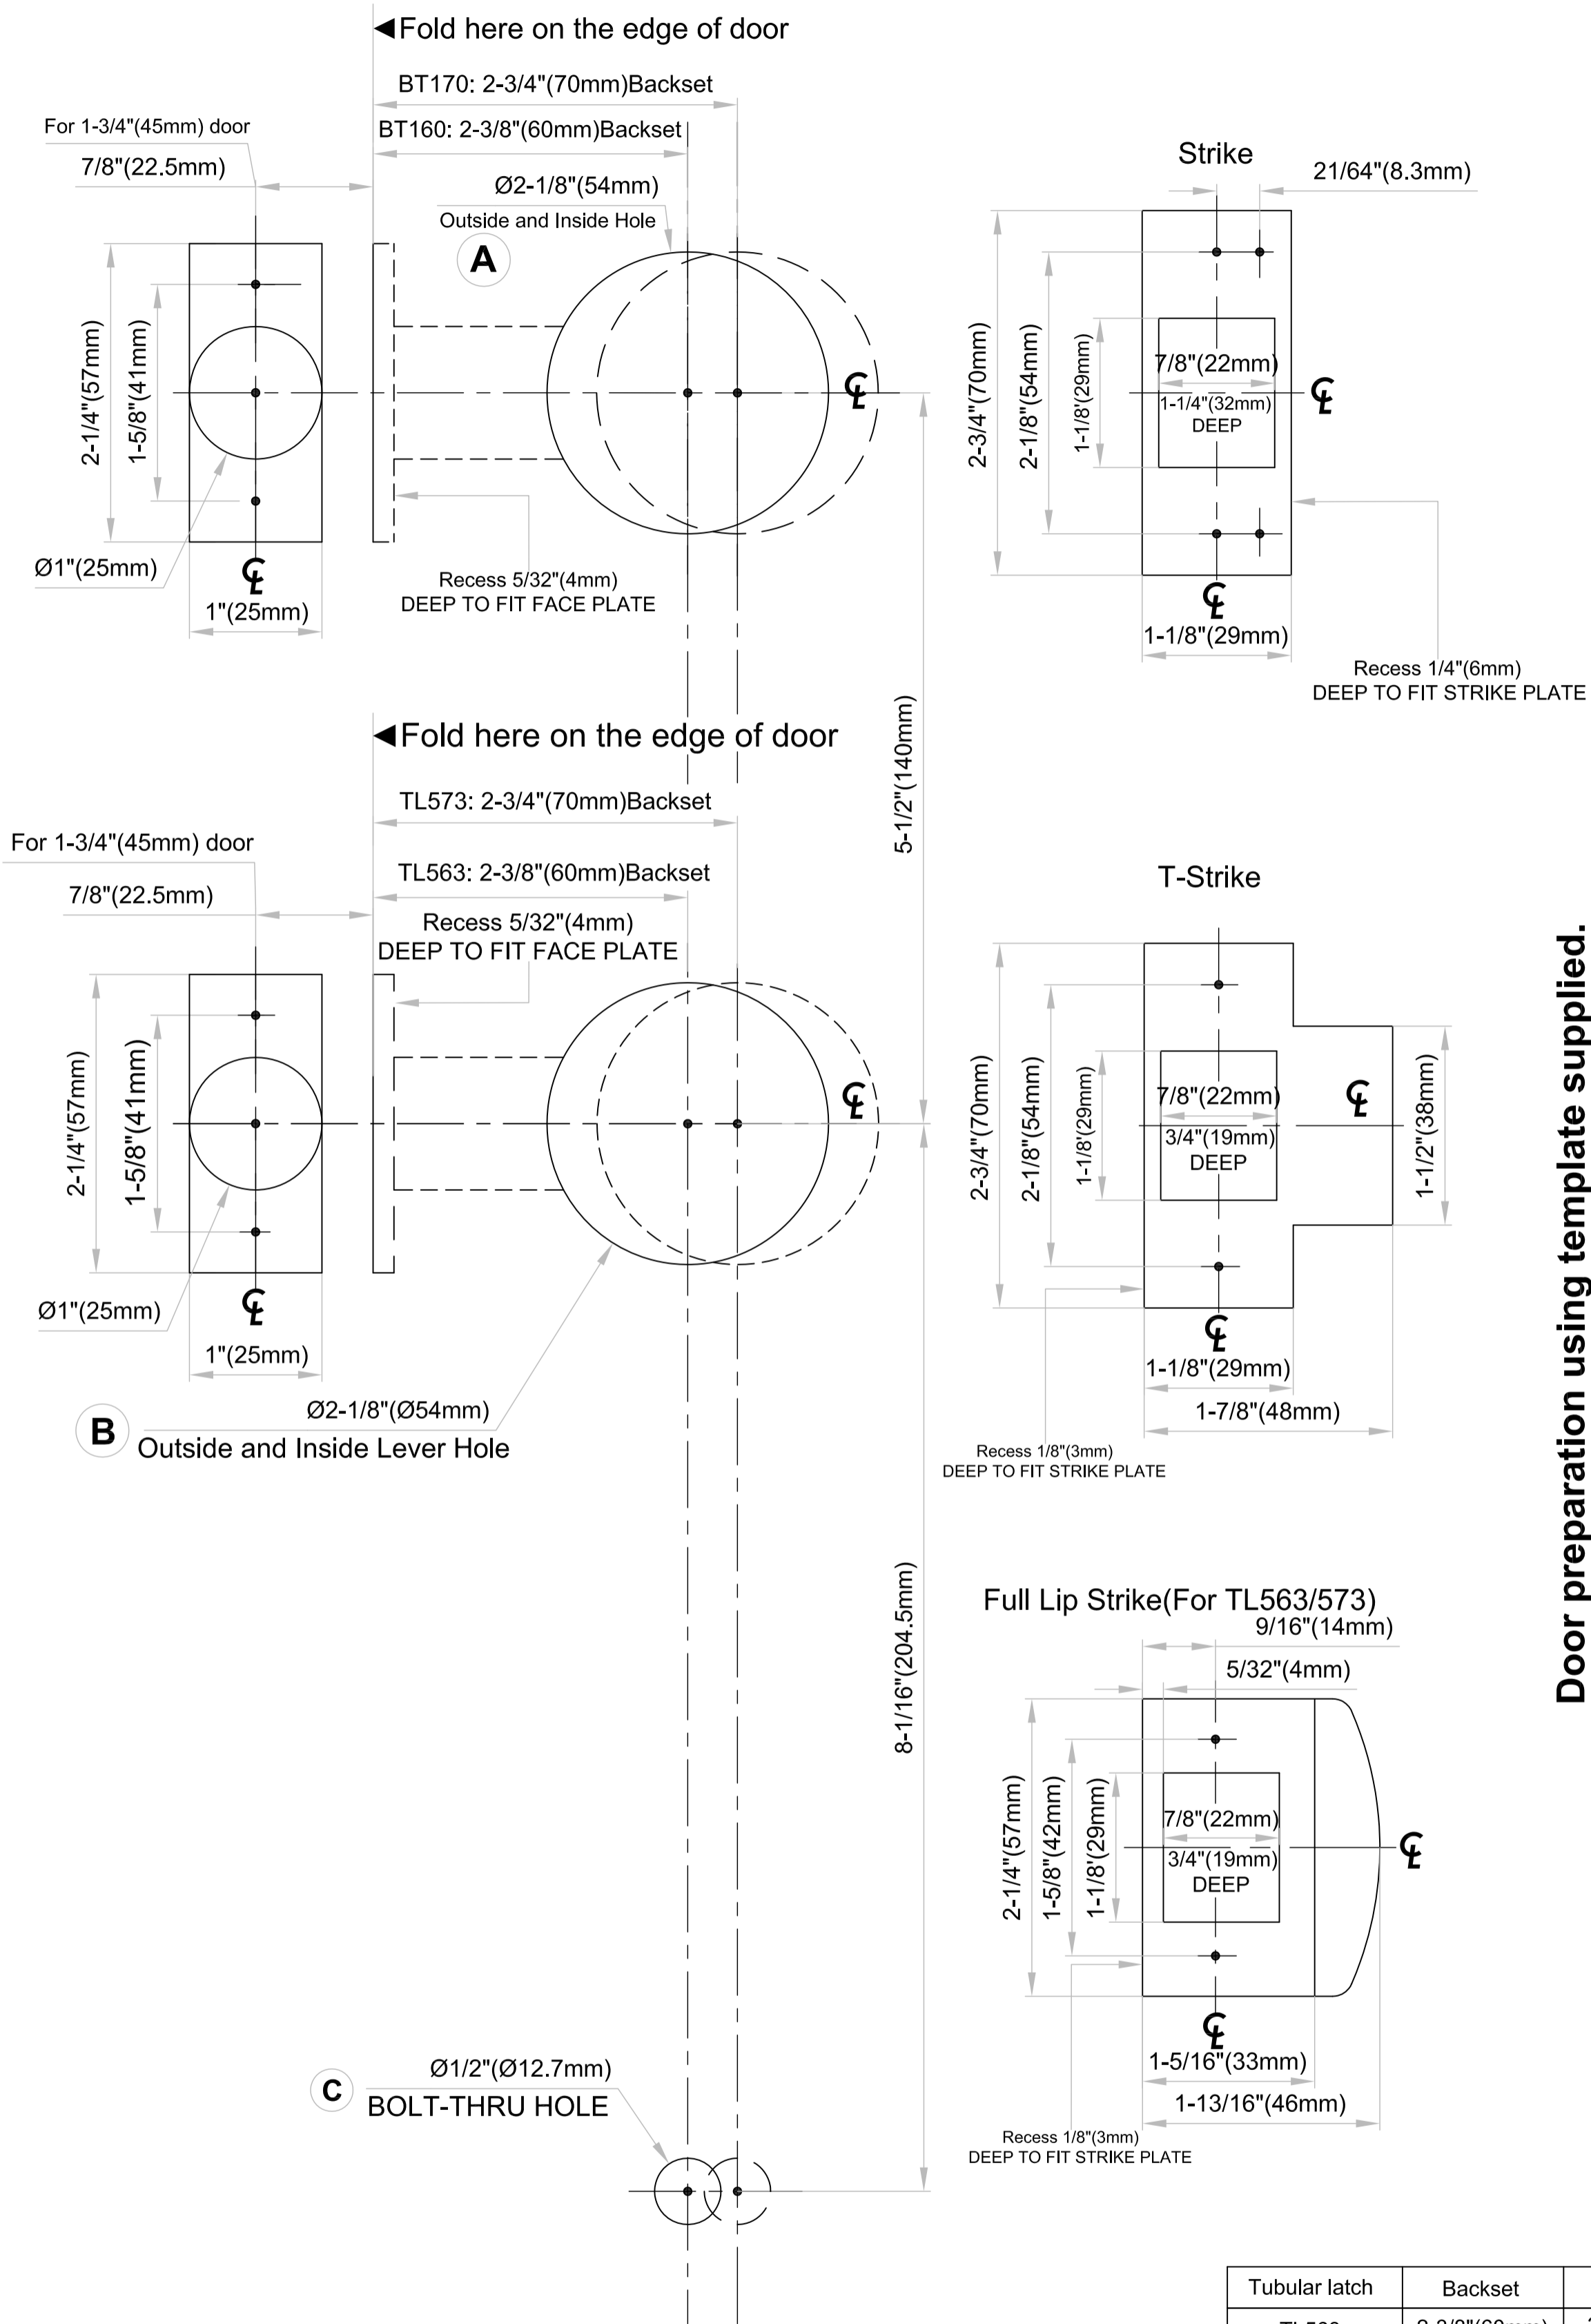

Match With Vertical Line Drawn On Door

## Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door. Choose the correct holes to drill for the corresponding functions.

Function	Item Ref.	A	B	C
Entry	NYXXXC563/573 MHXXXC563/573	●	●	●
Entry Dummy	NYXXXTDP MHXXXTDP	●	●	●

Tubular latch	Backset	Case Side
TL563	2-3/8" (60mm)	3-3/8" (85mm) x 7/8" (22mm) x 7/8" (22mm)
TL573	2-3/4" (70mm)	3-3/4" (95mm) x 7/8" (22mm) x 7/8" (22mm)
BT160	2-3/8" (60mm)	3-3/8" (85mm) x 15/16" (24mm) x 15/16" (24mm)
BT170	2-3/4" (70mm)	3-3/4" (95mm) x 15/16" (24mm) x 15/16" (24mm)

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.