




Template for BD1000 Series Barn Door Locks

For installing lock on left jamb of doorway (see other side for right jamb installation)



Scan QR code,
watch installation video

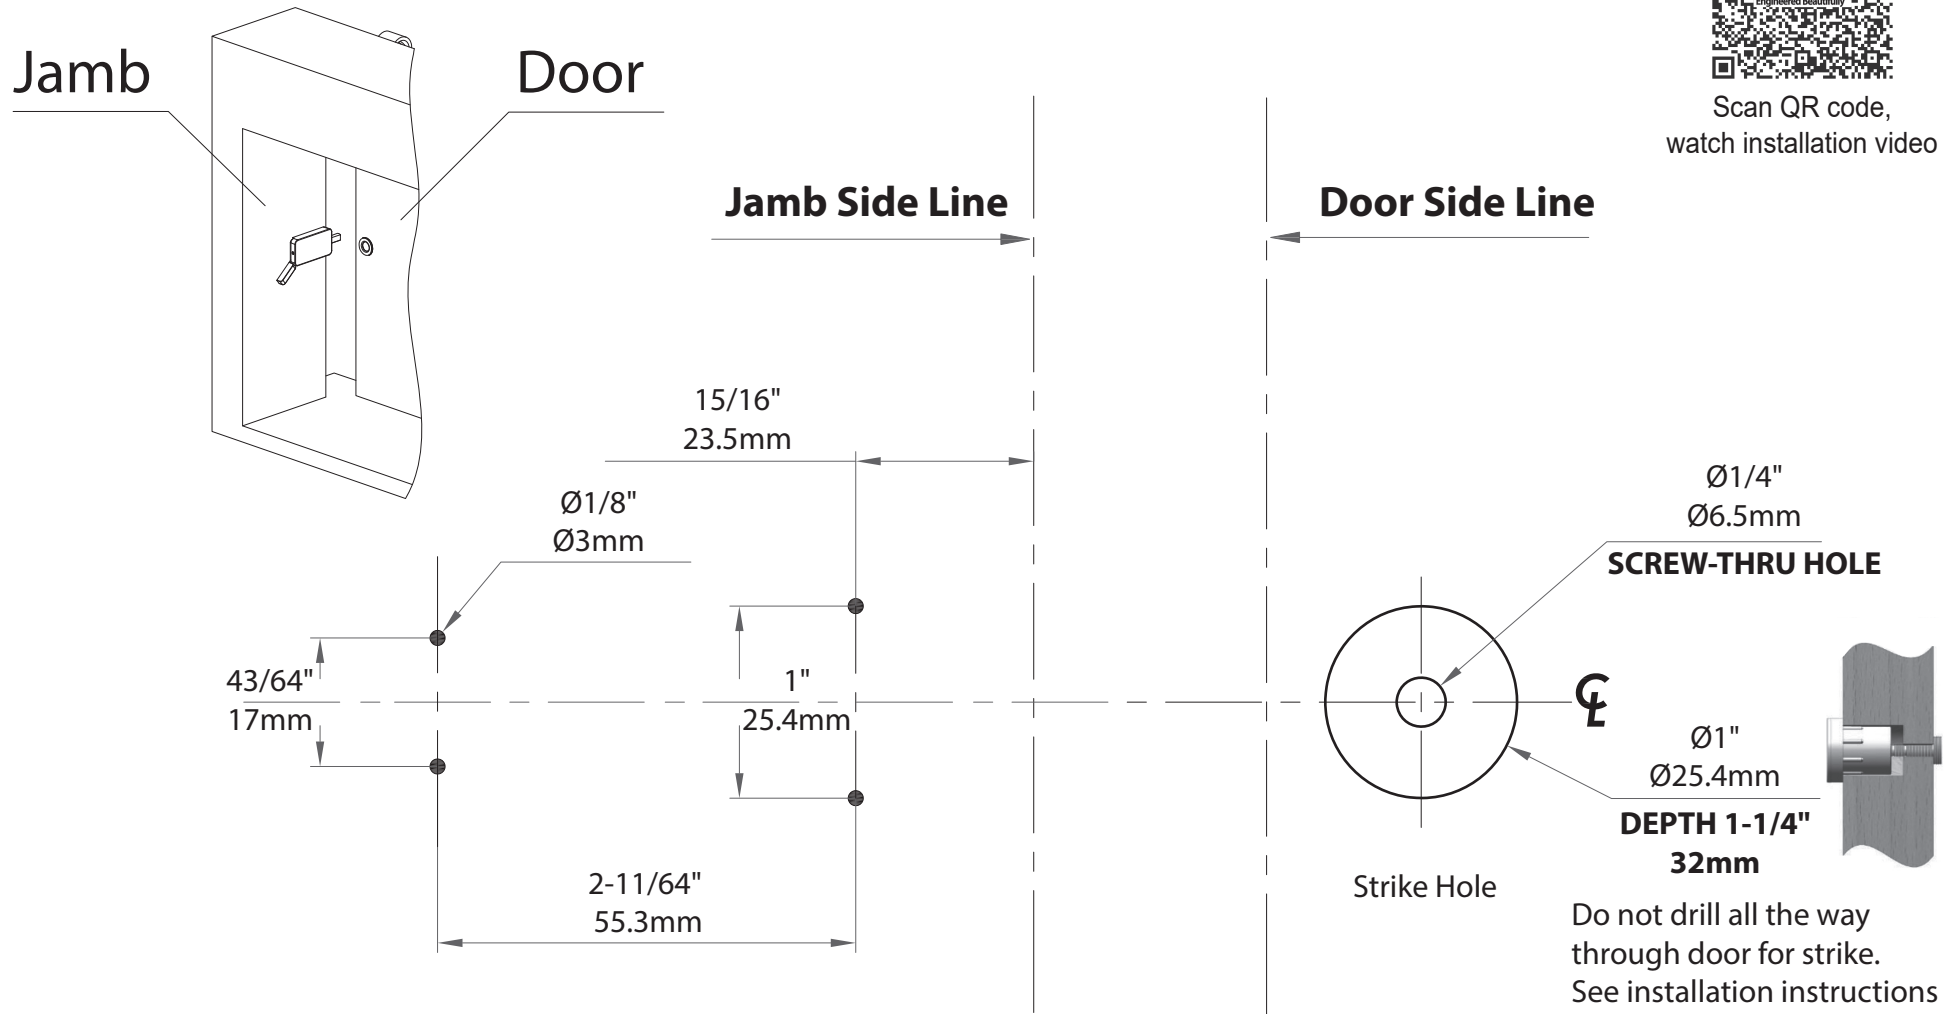

** For ADA compliance, install no more than 41" from floor.

PM-TM2800-V181212

PATENTED




Template for BD1000 Series Barn Door Locks

For installing lock on right jamb of doorway (see other side for left jamb installation)




Scan QR code,
watch installation video

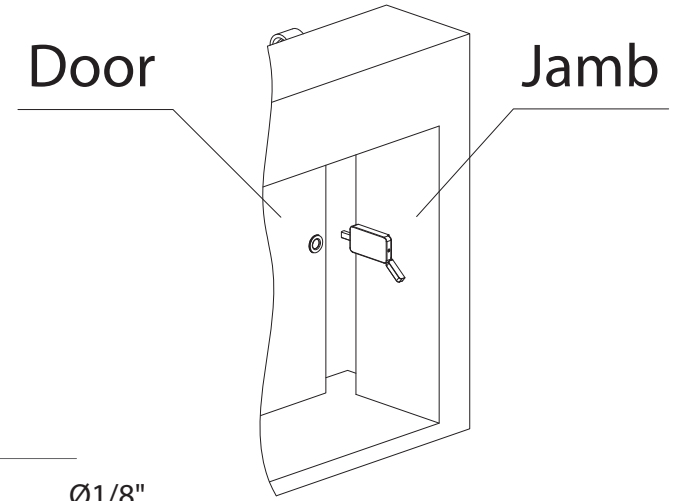


Door Side Line

Jamb Side Line

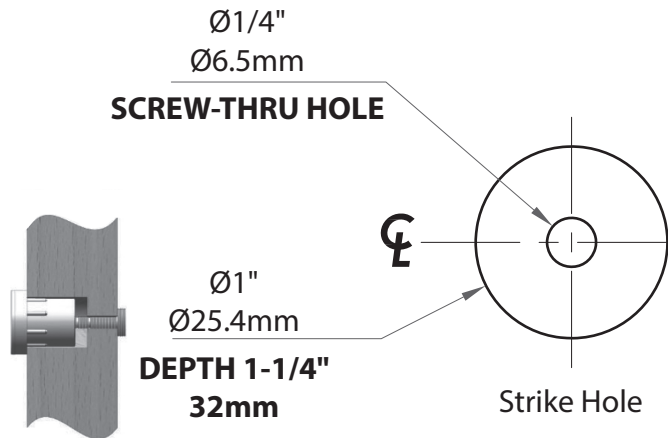

Do not drill all the way
through door for strike.
See installation instructions

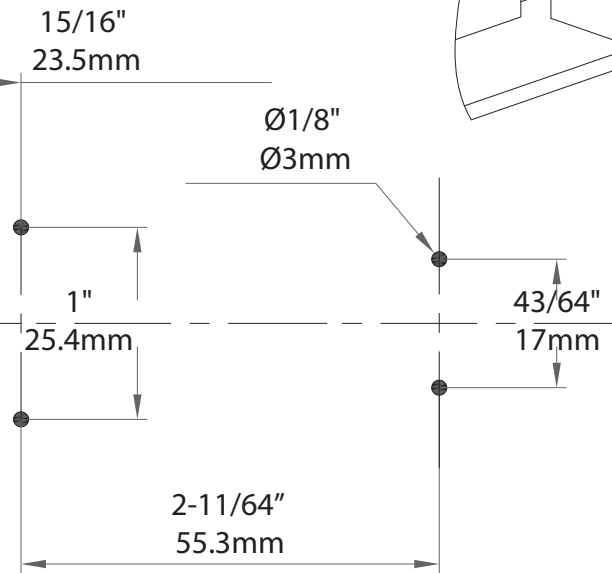

** For ADA compliance, install no more than 41" from floor.

PM-TM2800-V181212

PATENTED