


MAGNETIC CATCH

FOR USE ON CABINETS AND LIGHTWEIGHT INTERIOR DOORS. MAY BE INSTALLED ON TOP, SIDE OR BOTTOM OF CABINET.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/16" drill bit, Phillips screwdriver, awl or pencil.

1. Position case (A) on cabinet, as shown, or at point where door inset fits into cabinet. Mark, drill pilot holes at center point of elongated holes and secure.
2. Position strike (B) on inside of cabinet door approximately 1/4" from edge and align with case (A). Mark, drill pilot hole and secure.
3. To assure snug closing, make adjustment by moving case (A) either outward or inward and secure tightly.

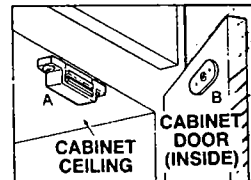

ASK FOR OTHER FINE HARDWARE BY H.B. IVES




WINDOW
LOCKS



DOOR
STOPS



COAT &
HAT HOOKS



DOOR
BOLTS



MAGNETIC CATCH C324P69 BRONZE

MADE IN TAIWAN