

#### # 28021-SPZ

Please read carefully and save these instructions, as you may need them at a later date.

### **CAUTION**

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

#### **GENERAL**

Remove all parts and hardware from the box and the mounting package and make sure that none are missing by referencing the illustrations provided.


## ASSEMBLY AND INSTALLATION

- 1. Pull the SUPPLY WIRES (4 & 6) and the SUPPLY GROUND WIRE (8) out from the OUTLET BOX (1) (not included) and attach the MOUNTING STRAP (2) assembly to the OUTLET BOX (1) using the slotted holes of the MOUNTING STRAP (2) and the OUTLET BOX SCREWS and WASHERS (3). [See Fig. 1]
- 2. Remove THREADED RING (14) from SCREW COLLAR LOOP (12) on MOUNTING STRAP (2). Place the CANOPY (11) over the OUTLET BOX (1) and adjust the SCREW COLLAR LOOP (12) and THREADED ROD (20) until the midpoint of the outside threads on the SCREW COLLAR LOOP (12) is centered (aligned) with the surface of the CANOPY (11). Remove the CANOPY (11) and tighten both HEX NUTS (21) down on the MOUNTING STRAP (2) and the SCREW COLLAR LOOP (12). [See Fig. 1]
- 3. Attach one OPEN CHAIN LINK (18) to each end of the CHAIN (13). Then attach one end of the CHAIN (13) to the FIXTURE LOOP (16). Slide the THREADED RING (14) and the CANOPY (11) (in that order) onto the CHAIN (13) and attach the other end of the CHAIN (13) to the SCREW COLLAR LOOP (12). Close the OPEN CHAIN LINKS (18). [See Fig. 1 & 2]
- 4. Unravel the FIXTURE LEAD WIRES (5 & 9) and FIXTURE GROUND WIRE (7) and thread them through every other link of the CHAIN (13) starting with the chain link attached to the FIXTURE LOOP (16). Feed the FIXTURE LEAD WIRES (5 & 9) and FIXTURE GROUND WIRE (7) through the SCREW COLLAR LOOP (12) and THREADED ROD (20). Pull the FIXTURE LEAD WIRES (5 & 9) and the FIXTURE GROUND WIRE (7) upward to remove any excess slack. [See Fig. 1]
- 5. Attach the power supply wires to the fixture lead wires by connecting the BLACK SUPPLY WIRE (4) to the SMOOTH FIXTURE LEAD WIRE (5) and the WHITE SUPPLY WIRE (6) to the RIBBED FIXTURE LEAD WIRE (9). Loop the SUPPLY GROUND WIRE (8) around the GROUND SCREW (19) on the MOUNTING STRAP (2). [Note: Be sure to provide an extra 3in. length of the SUPPLY GROUND WIRE (8) for connection to the FIXTURE GROUND WIRE (7).] Tighten the GROUND SCREW (19). Connect the remaining SUPPLY GROUND WIRE (8) to the FIXTURE GROUND WIRE (7). Use a WIRE CONNECTOR (10) for all wire connections. Push wiring and connections inside the OUTLET BOX (1). [See Fig. 1]

# **ASSEMBLY & INSTALLATION** (Continued)

- 7. Slide the CANOPY (11) and the THREADED RING (14) up the CHAIN (13). Place the CANOPY (11) over the OUTLET BOX (1) and secure it by screwing the THREADED RING (14) onto the SCREW COLLAR LOOP (12). [See Fig. 1]
- 8. Attach GLASS SHADE (17) to FIXTURE (15) with the SOCKET RING (22). [See Fig. 2]
- 9. Install bulb, MAXIMUM 100W.

## INSTALLATION IS NOW COMPLETE

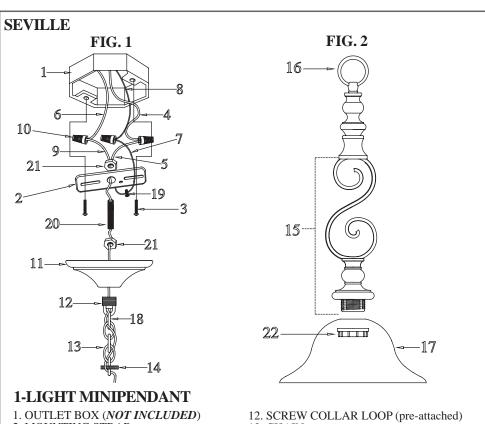

- 2. MOUNTING STRAP
- 3. OUTLET BOX SCREWS and WASHERS (pre-attached to outlet box)
- 4. BLACK SUPPLY WIRE (not included)
- 5. SMOOTH FIXTURE LEAD WIRE
- 6. WHITE SUPPLY WIRE (not included)
- 7. FIXTURE GROUND WIRE
- 8. SUPPLY GROUND WIRE (not included)
- 9. RIBBED FIXTURE LEAD WIRE
- 10. WIRE CONNECTOR
- 11. CANOPY

- 13. CHAIN
- 14. THREADED RING
- 15. FIXTURE
- 16. FIXTURE LOOP (pre-attached)
- 17. GLASS SHADE
- 18. OPEN CHAIN LINK
- 19. GROUND SCREW (pre-attached)
- 20. THREADED ROD (pre-attached)
- 21. HEX NUTS (pre-attached)
- 22. SOCKET RING

Customer Service: 1 (800) 527-1292