

WARNING

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL. ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

CARE AND MAINTENANCE

Wipe clean with a soft cloth dampened in water and a mild soapy solution. Wipe dry with a clean and dry cloth. This rattan basket requires no maintenance.

However, by keeping the furniture clean and storing it properly you can enjoy it year after year.

If there are any questions relating to missing parts, assembly issues or replacements, please send a detailed email to cs@jonathany.com

NOTICE & IMPORTANT SAFETY INSTRUCTIONS



- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This Item may require periodic tightening.


JONATHAN Y

Model # : NST1000A

Product Dimensions : W19.69" x D13.39" x H22.5"

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QTY
A	Sides		2
B	Top & Shelves		3
C	Allen Bolt (60 mm)		12
D	Washer		12
E	Allen Key		1

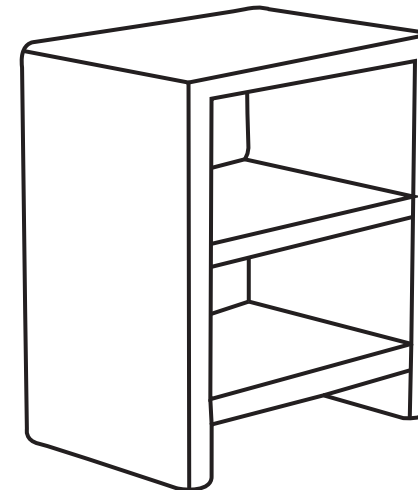


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware content list. If any parts is missing or damaged, do not attempt to assemble the product.


Estimated assembly time 15 minutes.

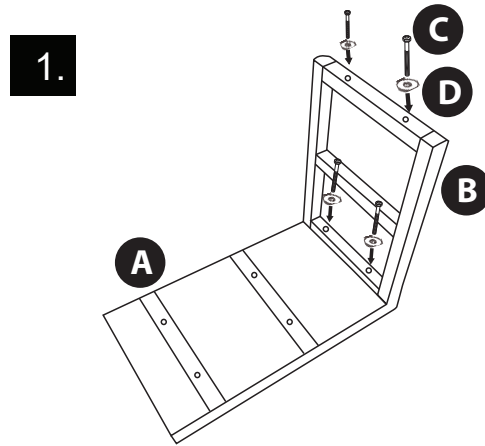


STEP 1: PUT THE "SIDE PART A" TO THE FLOOR, THEN INSTALL THE "TOP & SHELVES A" IN THE RIGHT SIDE OF "SIDE PART A". INSERT RING/WASHER & BOLT INTO THE EACH HOLE THEN TIGHTEN IT USING ALLEN KEY.

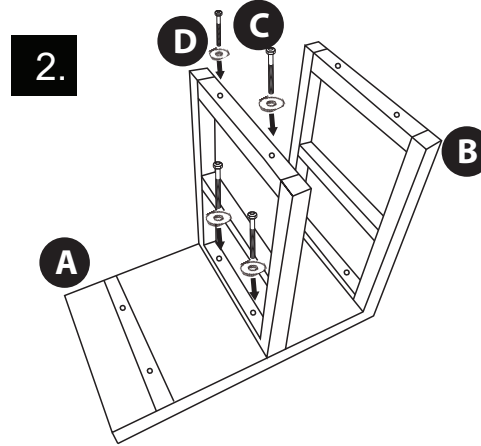


STEP 2: INSTALL THE "TOP & SHELVES B" IN THE MIDDLE SIDE OF "SIDE PART A", THEN INSERT RING/WASHER & BOLT INTO THE EACH HOLE THEN TIGHTEN IT USING ALLEN KEY.

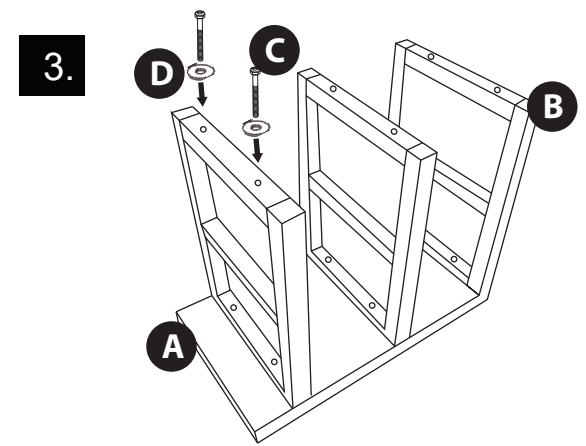


STEP 3: INSTALL THE "TOP & SHELVES C" IN THE LEFT SIDE OF "SIDE PART A", THEN INSERT RING/WASHER & BOLT INTO THE EACH HOLE THEN TIGHTEN IT USING ALLEN KEY.

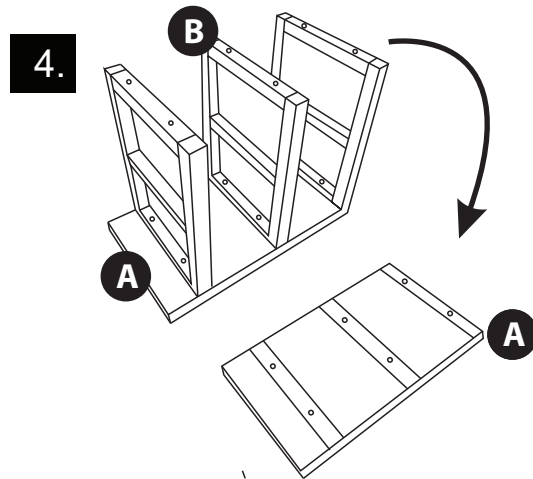

STEP 4: AFTER "TOP & SHELVES A, B, C" WERE INSTALLED ON THE "SIDE PART A", PUT THE "SIDE PART B" ON THE FLOOR. THEN TURN 90° THE INSTALLMENT OF "TOP SHELVES A,B, C & SIDE PART A" UNTIL IT ON THE TOP OF "SIDE PART B".

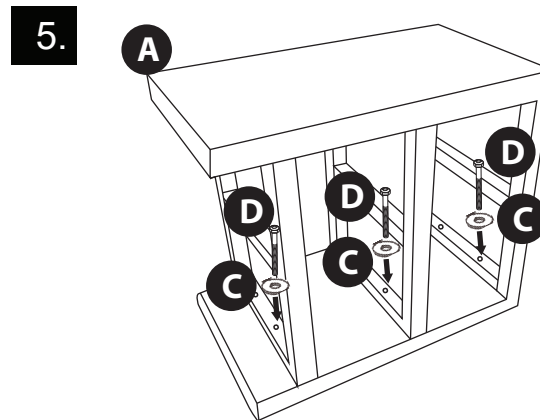

STEP 4: INSERT RING/WASHER & BOLT INTO THE EACH HOLE THEN TIGHTEN IT USING ALLEN KEY.

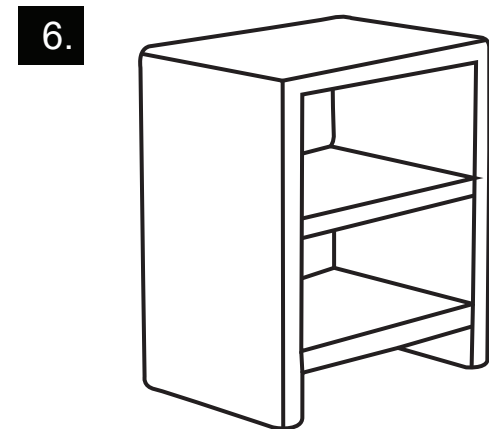





STEP 5: YOUR NIGHTSTAND IS READY.


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware content list. If any parts is missing or damaged, do not attempt to assemble the product.


Estimated assembly time 15 minutes.

WALL ANCHOR INSTALLATION


PIECE	DESCRIPTION	PICTURE	QTY
HW1	Long Screw		1
HW2	Short Screw		1
HW3	Anchor Plug		1
HW4	Strap		1

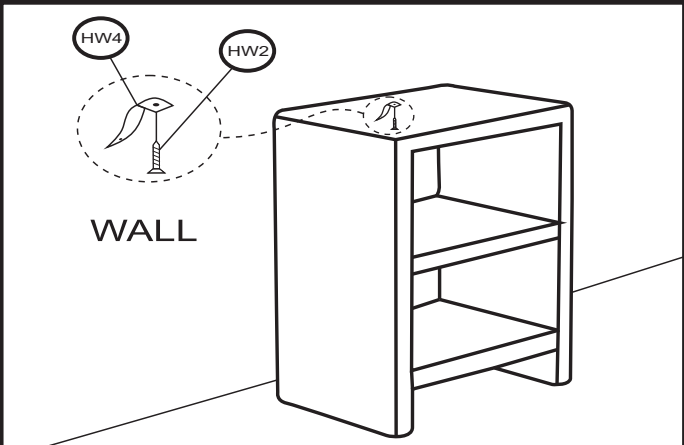

STEP 1 : STRAP (HW4) WITH SHORT SCREW (HW2) TO THE UNDERSIDE OF TOP PANEL USING PHILLIPS HEAD SCREW DRIVER, NOT INCLUDED. TIGHTEN COMPLETELY.

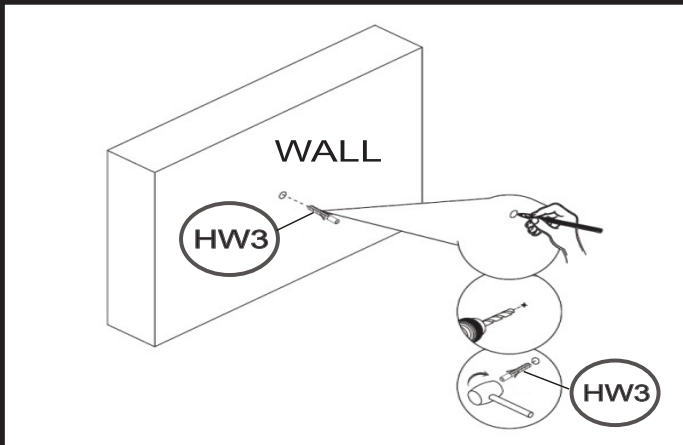

STEP 2 : DETERMINE WHERE THE STORAGE UNIT IS TO BE PLACED, THEN MARK THE POSITION ON THE WALL SO THE WALL ANCHOR (HW3) WILL ALIGN WITH THE STRAP (HW4) ON THE BACK OF THE STORAGE UNIT. THE DRILL HOLE IN THE WALL. PRESS WALL ANCHOR (HW3) INTO THE HOLE.

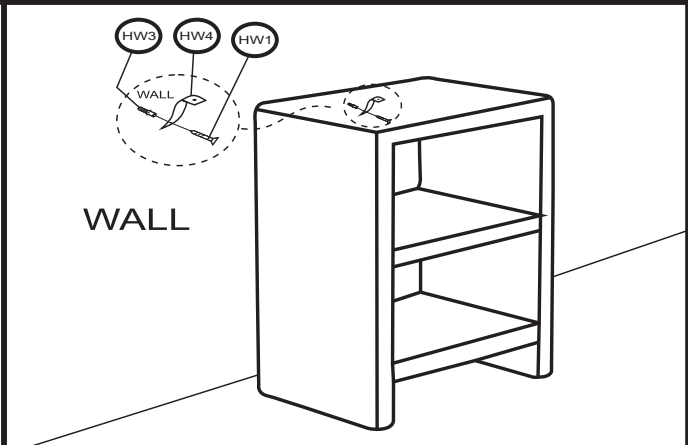

STEP 3 : CONNECT STRAP (HW4) WITH LONG SCREW (HW1) TO WALL ANCHOR (HW3) USING PHILLIPS HEAD SCREW DRIVER, NOT INCLUDED. THIGHTHEN COMPLETELY. THEN REPLACE TOP DRAWER INTO ASSEMBLED UNIT.