


# KALLISTA®

## Wall-Mounted Showerhead with Arm

### INSTALLATION INSTRUCTIONS

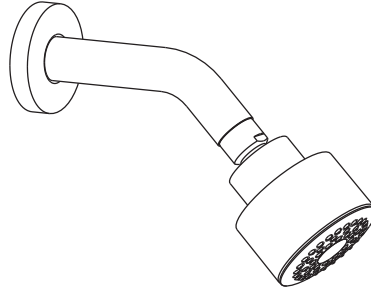

**P24471**

## INSTALLATION INSTRUCTIONS

### THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

### TOOLS



Thread  
Sealant




Strap  
Wrench



Adjustable  
Wrench



Hex  
Wrench

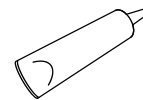

Silicone Sealant




Rags

### IMPORTANT INFORMATION

- Observe all local plumbing and building codes.
- Shut off the main water supply.
- KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

## INSTALLATION INSTRUCTIONS

### INSTALLATION

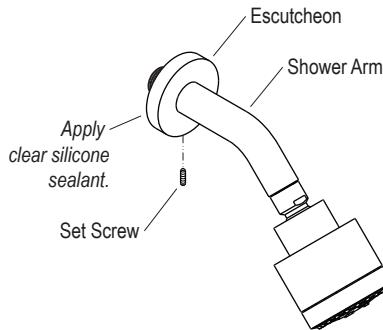

### Install the Showerhead

**CAUTION:** Risk of product damage. To avoid clogging the showerhead spray outlets, use thread sealant tape on the showerarm threads. Do not use thread sealant compound (pipe dope).

- Slide the escutcheon onto the end of the showerarm that will be closest to the wall.
- Remove temporary nipple from the shower elbow.
- Apply thread sealant tape to the threads of the shower arm and install it into the shower elbow.
- Carefully tighten the showerarm into the shower elbow with a clean strap wrench.
- Turn on the water and allow water to flow through the showerarm to flush the system of any debris.
- Check connections for leaks. Repair as needed.
- Turn off the water.
- Apply thread sealant tape to the threads of the exposed end of the showerarm.
- Hand tighten the showerhead onto the showerarm.
- Use a clean strap wrench to completely tighten the showerhead onto the showerarm.
- Check for proper operation.
- Check all connections for leaks. Repair as needed.
- If desired, apply a bead of clear silicone sealant to the back outer edge of the escutcheon.
- Being careful not to scratch the showerarm, slide the escutcheon to the finished wall and secure the escutcheon to the showerarm by tightening the set screw with a hex wrench.
- Remove any excess clear silicone sealant.