


# ***KINGSTON BRASS***

**THE TRADITION OF FINE BRASS**

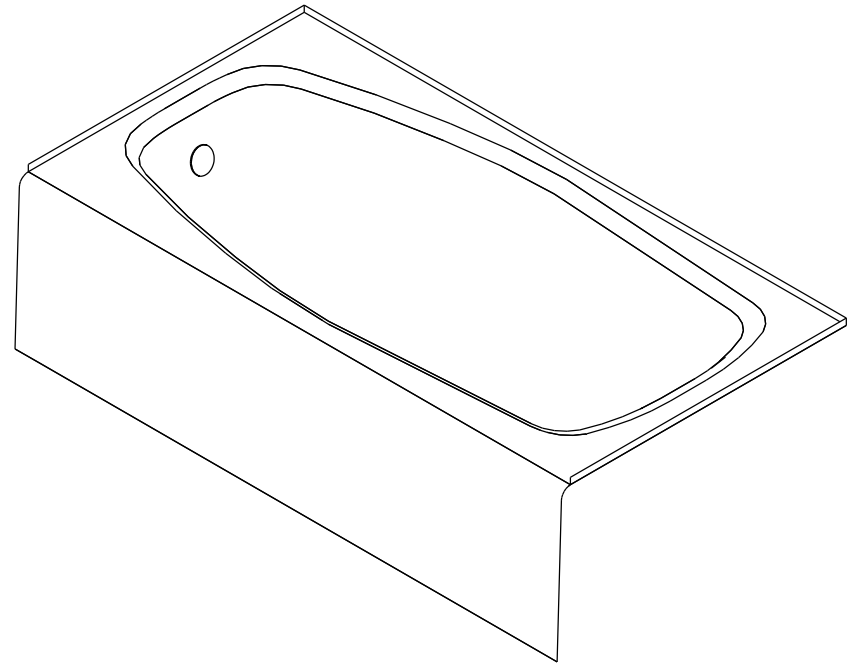

[www.kingstonbrass.com](http://www.kingstonbrass.com)

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)

12775 Reservoir Street, Chino, CA91710

## INSTALLATION INSTRUCTIONS


For Use With KB's Acrylic Tub with or without Drain

### Caution


This bathtub is heavy. Get help lifting and moving this tub. Read all instructions thoroughly before starting the installation.

### Important Points to Remember:


1. Provide adequate floor support.
2. Make sure the subfloor is level. Provide drain access from below. Provide access to all plumbing connections. Observe local building and plumbing codes.

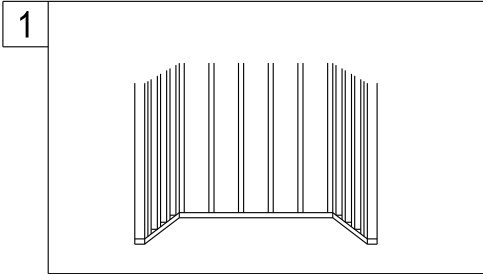


1. Construct a plumb stud pocket.

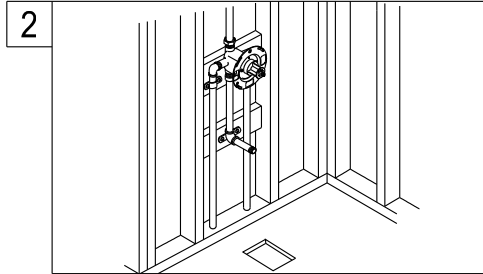


2. Install the rough plumbing.

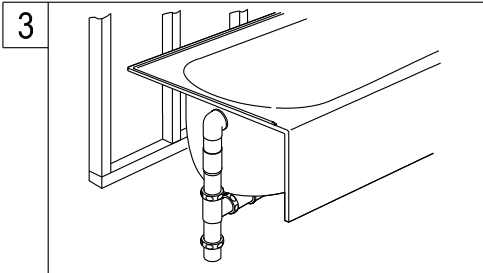


3. Install the drain to the tub.

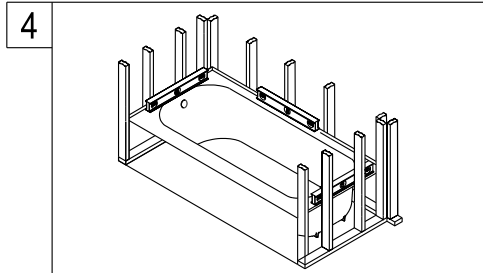

4. With help, carefully move the tub into the stud pocket. Verify the bathtub is level.


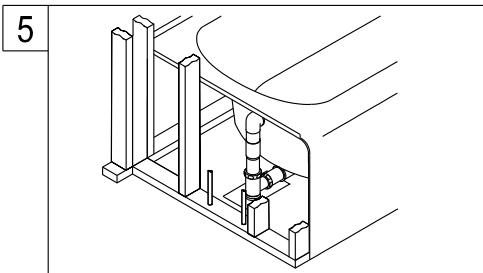


5. Connect the bath drain to the drain pipe.

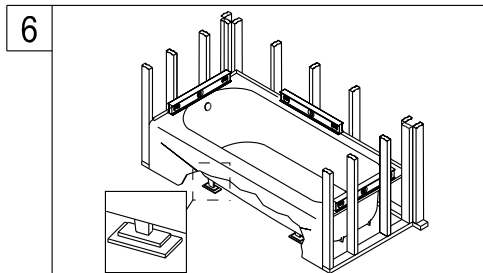


6. Make sure the tub is level, plumb, and resting on all feet. Install metal shims as needed.


### Need Tools:

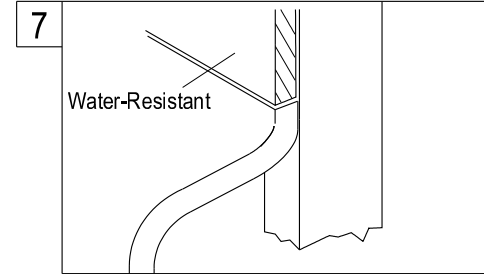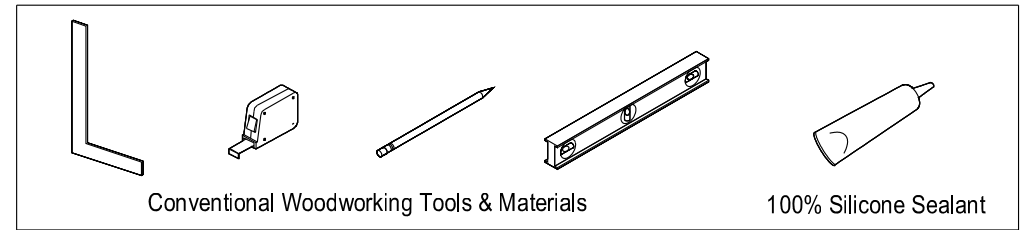

7. Install water-resistant wallboard over the framing. Apply 100% silicone sealant along the seam.

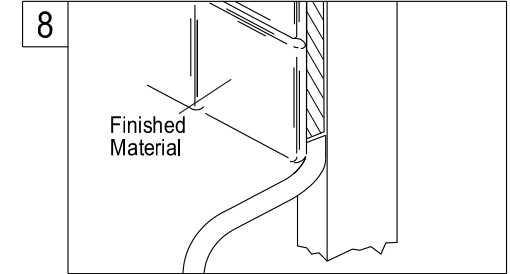

8. Install the finished wall and deck material to within 1/16" (2mm) of the bath rim.

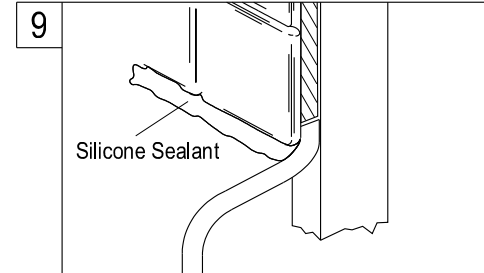

9. Apply 100% silicone sealant around the tub along the finished walls and deck.

### Cleaning

Clean with a damp cloth only.  
Avoid using metal or abrasive polishes.