


KINGSTON BRASS

THE TRADITION OF FINE BRASS

Safe & Anti-Slide Acrylic Bath Tub Installation

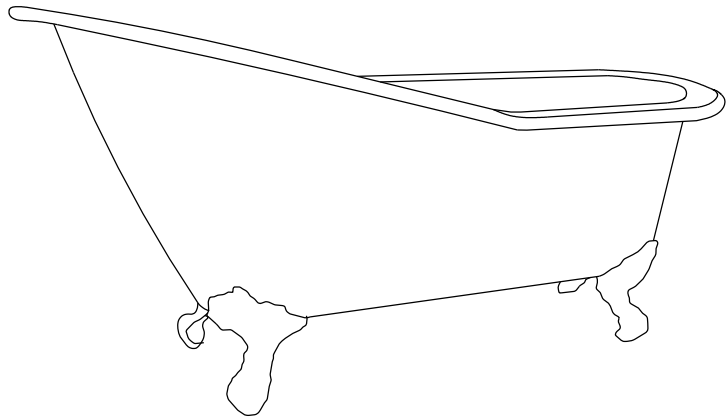

Parts:

Bolts	Washer & Metal Washer	Bar	Bolt (installed on tub already)	Nut & Washers (installed on tub already)
4 Pcs	4 Pcs	2 Pcs	4 Pcs	4 Pcs

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA91710


TOOLS REQUIRED



Adjustable Wrench



Rubber Mallet

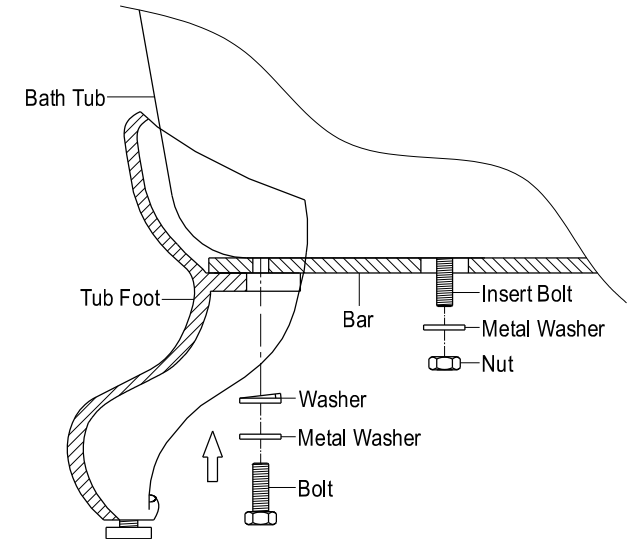

Installation Steps:

- Step 1. Turn tub over and set on non-abrasive mat, loosen the nuts and washers secured on the insert bolts of the tub..
- Step 2. Install the feet onto the metal bars using the included hardware. Insert bolt into metal bar and insert into tub foot. Secure the foot using the two washers and nut with a wrench. Repeat for remaining feet.
- Step 3. Align the holes of the bar with the insert bolts and place the bar onto the bolts. Install the metal washer and nut to the bolt and secure tightly with the wrench.
- Step 4. Make sure all bolts and nuts are tightened on the tub feet and the bar.
- Step 5. When all four feet have been installed, turn tub over carefully as not to damage the finish.
- Step 6. If the tub wobbles, adjust the bolts on the bottom of each leg to the desired height.

Cleaning

Clean with a damp cloth only.
Avoid using metal or abrasive polishes.