


Lew's Hardware Bin Pull Installation

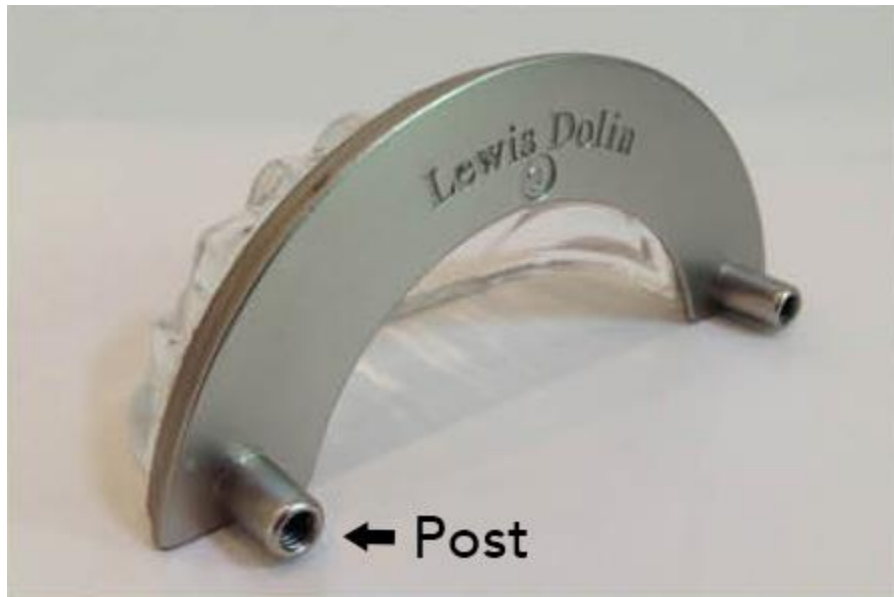

1. Position Bin Pull in cabinet face and mark holes to be drilled
2. Using a 1/8" bit, drill "pilot" holes through cabinet face where marked in step (1)
3. Using a 1/4" bit, drill 7/16" deep into the "pilot" holes in order to recess the posts
4. Attach Bin Pull to cabinet using screws provided