


Hinges

Inset, Full Overlay, 1/2 Overlay

Part Number	Description	Opening	Seq. #
H01068	Non-Mortise Spring Loaded Concealed Hinge	90°	1420

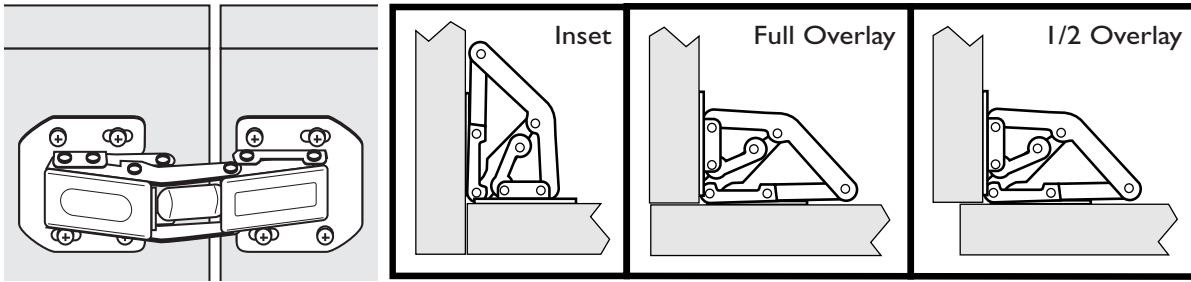

Before You Begin

- Read the Do-It-Yourself Installation Instructions completely before starting.
- Make sure all parts are included.

Parts List

- Two Concealed Hinges H01068
- Sixteen #6 x 5/8" Screws

Recommended Tools

- #2 Phillips Screwdriver
- Pencil or Scribe
- Metric and Inches Ruler
- Drill and 1/16" Drill bit for pilot holes
- Straight Edge

Mounting Hinge

- There are three ways to mount this hinge (see above).

Inset

- Side of hinge marked with **Door** mounts to cabinet side panel.

Full Overlay


- Side of hinge marked with **Door** mounts to the door panel.

1/2 Overlay and Side-by-Side

- Side of hinge marked with **Door** mounts to the door panel.


Data

- See chart below for recommended number of hinges per door size.
- If hanging a door with a mirror or very wide door you will need additional hinges.

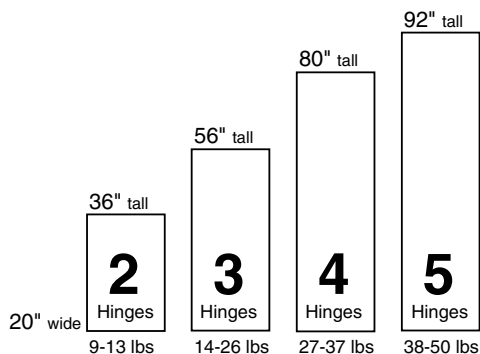

Specifications

- Door clearance should be 1/32" (1mm) on all sides.
- Placing several cabinets together requires that an amount of the frame or opening (reveal) must show between the doors for the doors to properly open and close.



Door	Minimum Reveal
5/8" (16mm) thick	1/32" (1mm)

1. Marking Drill Holes

- Cut out mounting template for drilling screw pilot holes
- Align template to door/cabinet and mark location of holes.


2. Installing Hinge to Door

- Drill pilot holes for screws per template. Do not drill through door face.
- Fasten hinge to door with four #6x5/8" screws.

3. Installing Hinge to Cabinet Side Panel

- Drill pilot holes for screws per template. Do not drill through cabinet side panel.
- Fasten hinge to cabinet side panel with four #6x5/8" screws.

Note: To make the door Free Swing remove the spring cylinder.

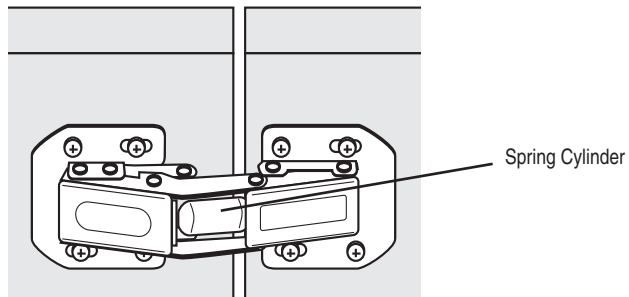


Verify product measurements prior to drilling. Printer configurations may not be set to print Mounting Template to actual size.

Vérifiez les mesures du produit avant de percer. Il se peut que les configurations de l'imprimante fassent que le gabarit de montage ne soit pas imprimé à la taille réelle.

Antes de perforar verifique las medidas del producto. Las configuraciones de la impresora pueda que no estén ajustadas para imprimir la Plantilla de Montaje al tamaño real.

Mounting Template

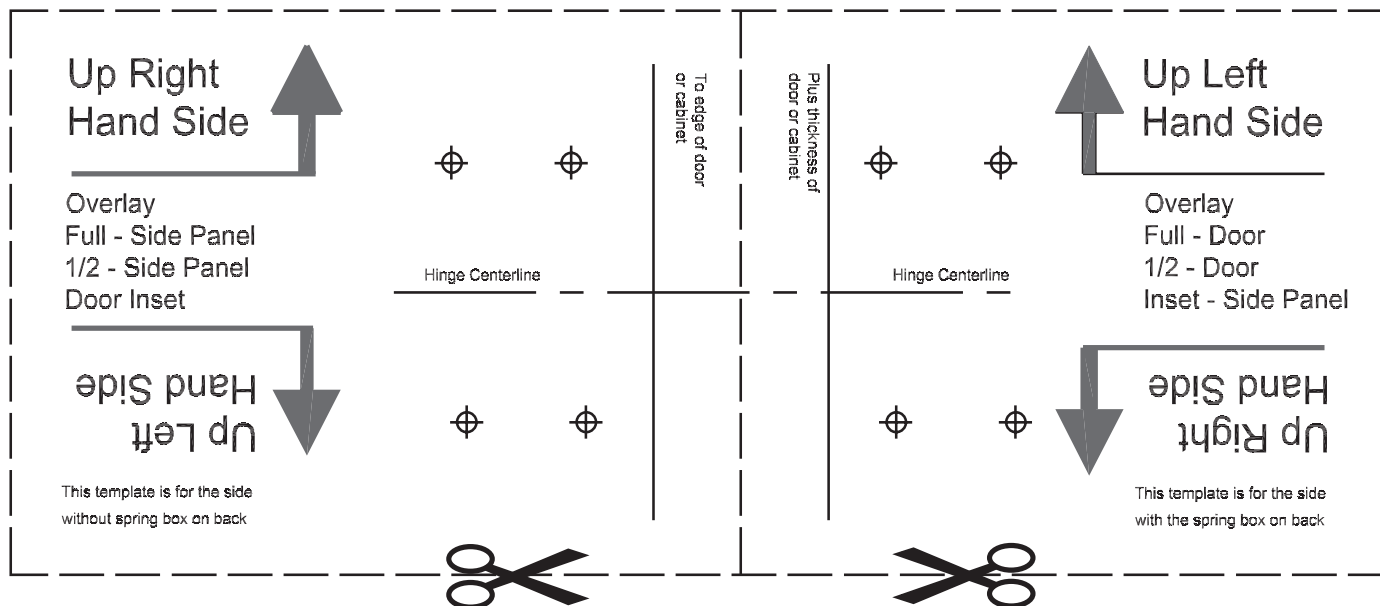

Verify product measurements prior to drilling.
Printer configurations may not be set to print
Mounting Template to actual size.

Vérifiez les mesures du produit avant de percer.
Il se peut que les configurations de l'imprimante
fassent que le gabarit de montage ne soit pas
imprimé à la taille réelle.

Antes de perforar verifique las medidas del
producto. Las configuraciones de la impresora
pueda que no estén ajustadas para imprimir la
Plantilla de Montaje al tamaño real.