


PL-160 Square Privacy Installation Diagram


(Minimum Door Thickness 1-3/8")

SKU: PL160S-ST-PR

PL-160 Trim Requires Precise Installation.
Otherwise, It May Not Function Properly.

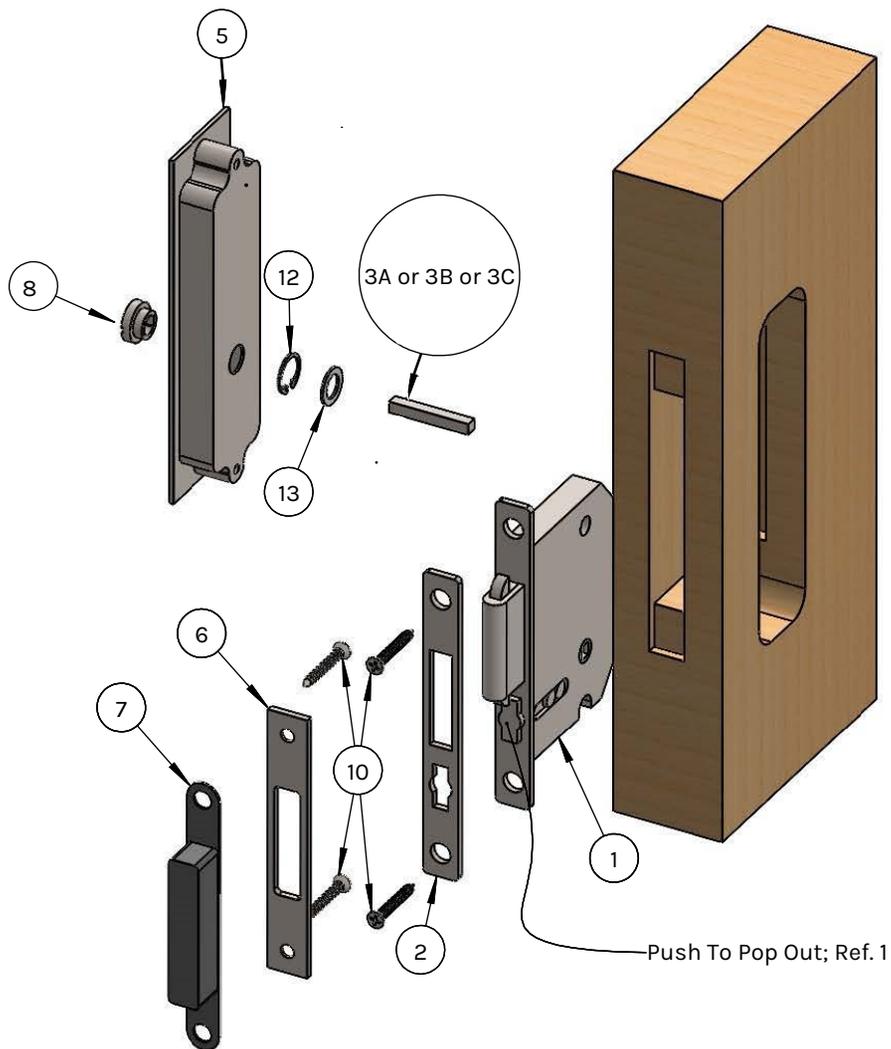


1. Knob and emergency release are supplied pre-installed.
2. Trims are not required to be recessed to accommodate pocket width; but a door thickness 1-3/4" is required if opting for a recessed trim. Trims cannot be recessed on a 1-3/8" thick door.
3. Measure the trim dimensions before cutting the door due to minor tolerances in overall dimensions.
4. The backset of the mortise lock case is 52.5mm (metric). A 2" backset will not allow proper function.

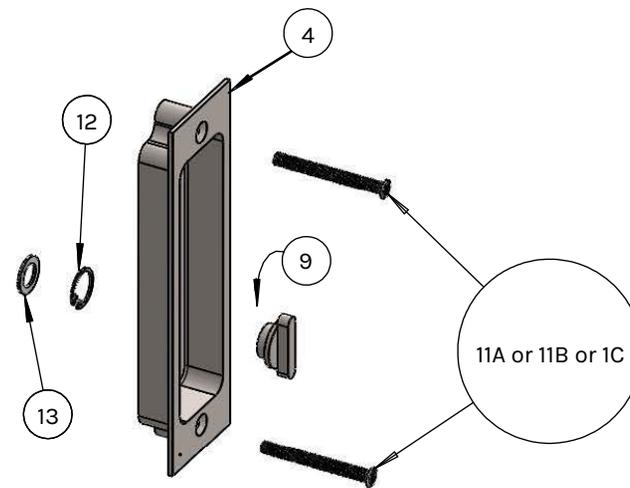


linnea-home.com
(800) 219-2366


Component List

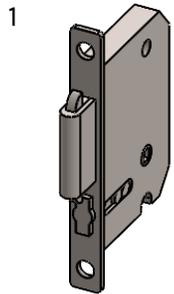


1
Mortise Lock
PLM-50PR-UNF
(Needs 1)

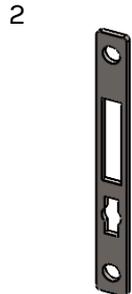


2
Face Plate
PLM-50PR-FP
(Needs 1)



3
Spindle
3A: PL-SPDL31
3B: PL-SPDL36
3C: PL-SPDL41

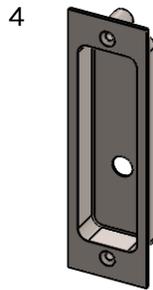


4
Inside Trim
PLA-160ST-I
(Needs 1)

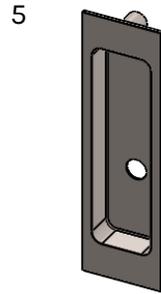

5
Outside Trim
PLA-160ST-O
(Needs 1)



6
Strike Plate
PLM-50PR-ST
(Needs 1)

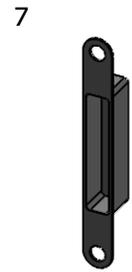

7
Dust Box
PL-DBOX160
(Needs 1)



8
Emergency Release
PL-KNER
(Needs 1)



9
Turnpiece
PL-KNBAR
(Needs 1)




10
Wood Screw
#8 x 3/4
(Needs 4)



12
Snap Ring
PL-CCLIP11
(Needs 2)



11
Machine Screw
11A: PL-OVSCR36
11B: PL-OVSCR40
11C: PL-OVSCR46



13
Plastic Washer
PL-WAS12
(Needs 2)

