



PRODUCT NAME:Cocoon 1-Light Pendant  
ITEM NUMBER:12186WTPC

Please consult your electrician for hanging fixture and wiring.

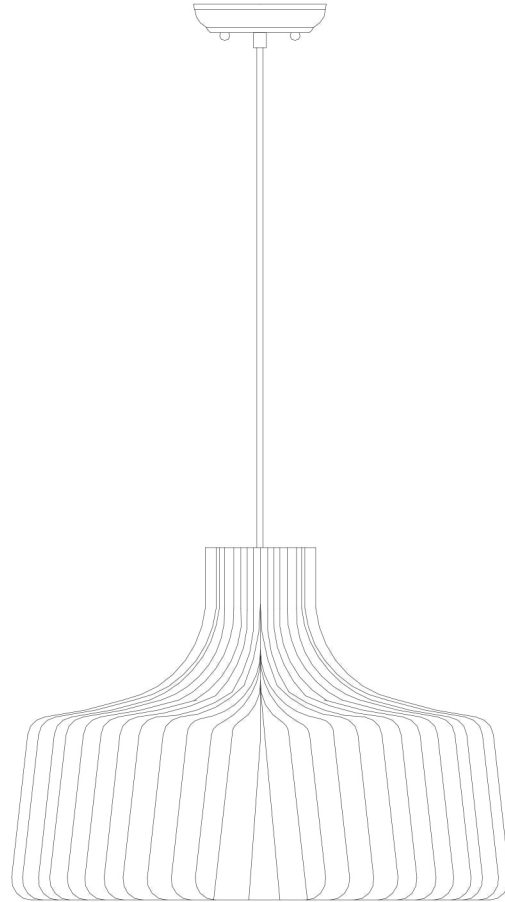

Bulb(not included):60W E26

**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation

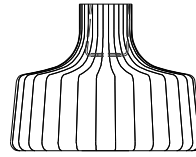

**Bracket (A)**

**Canopy (B)**

**Finial (C)**



**Body (D)**

**Shade (E)**


**Outer Ring (F)**

**Bulb (G)**

Locate all hardware & components before discarding packaging

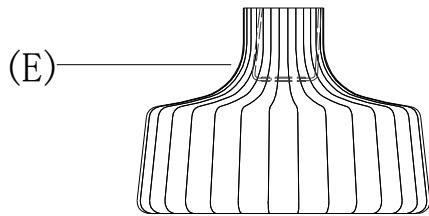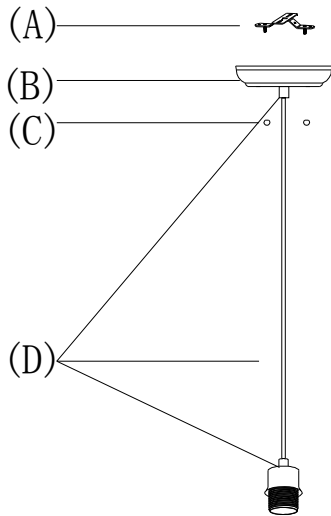


1.)

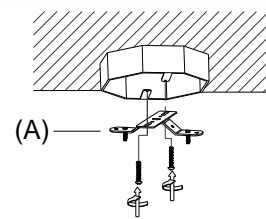


**Step.1:** Remove mounting bracket(A) from fixture and install to electrical box.

2.)

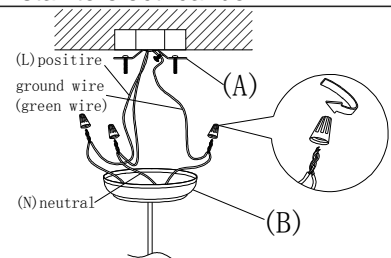


**Step.2:** Wire fixture to wires in outlet box. Green wire is for Ground.

3.)

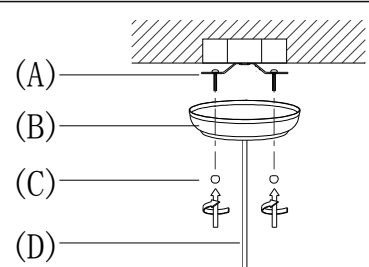

**Step.3:** Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install body(D) to bracket(A) and tighten finials (C) on the canopy (B) to secure.

4.)

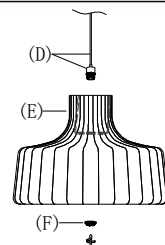

**Step.4:** Run socket through shade(E) and secure using screw ring(F) on socket. Screw in incandescent bulb(G). Remove plastic protection from Chrome lip at bottom of Shade.

**Cleaning & Care:**

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.