


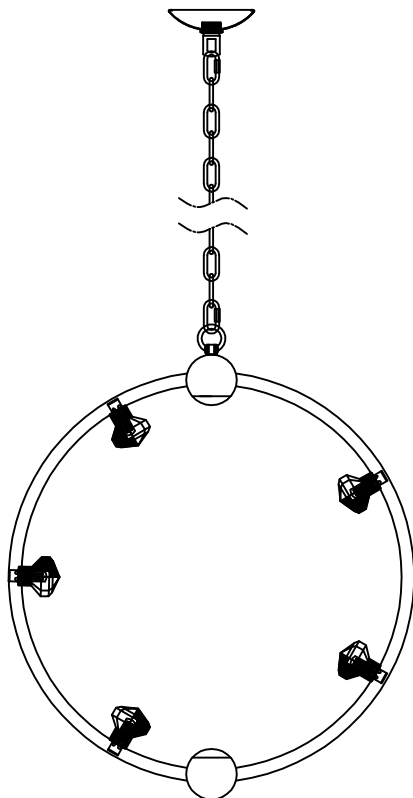

PRODUCT NAME: Enquinox
ITEM NUMBER: 39104BCPN

Please consult your electrician for hanging fixture and wiring.



This fixture is designed to dim with an Electronic Low Voltage dimmer. Dimming levels will vary by dimmer.

Below is a List of Recommended Dimmers:

- Lutron MACL-153M
- Leviton IPL06-10Z

Due to inrush current, wattage should not exceed 150 Watts of product for a 600 Watt dimmer.

Warning! This fixture is supplied with an installed LED driver. These fixtures are dimmable using standard triac dimmer. For best operation we recommend using Lutron CL Dimmers.

15* 2.3W G9 LED

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



(A)

Mounting Bracket



(B)

Anchor Bolts



(C)

Canopy



(D)

Threaded Ring



(E)


G9 LED



(F)

Crystal


Locate all hardware & components before discarding packaging

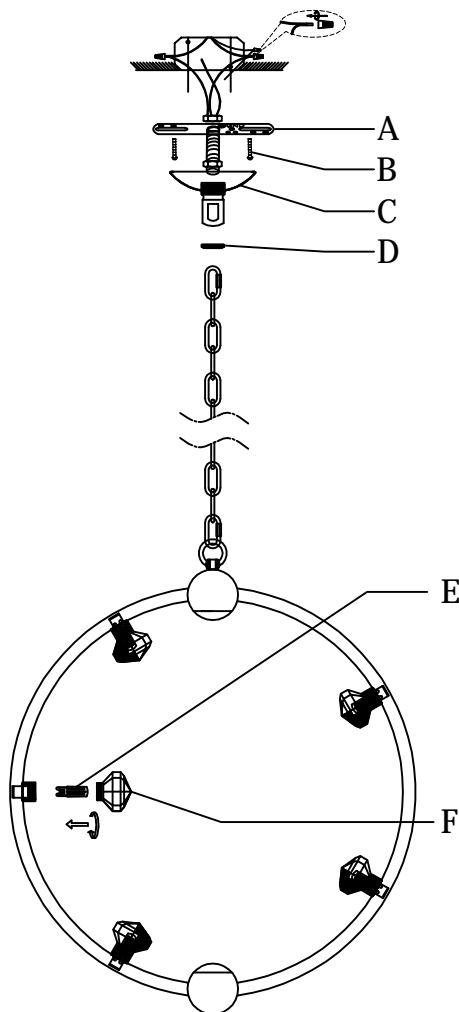

Cleaning & Care:


Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

1.)

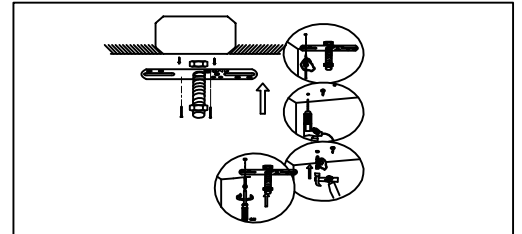


Step.1: Remove mounting bracket (A) and install to electrical box. Mark where anchors meet ceiling, remove mounting bracket from ceiling, and then drill holes using $\frac{3}{16}$ " drill bit where marked (B). Install mounting bracket and attach anchors to secure bracket at ends

2.)

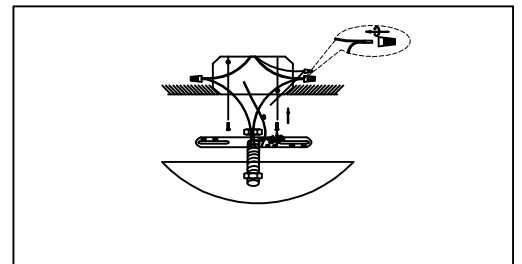


Step.2: Wire fixture to wires in outlet box. Copper wire is for Ground.

3.)

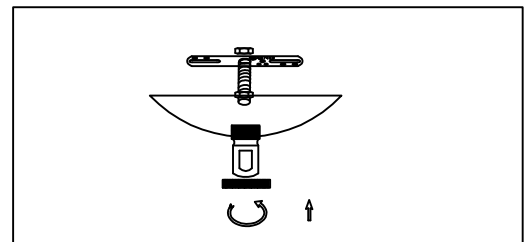

Step.3: Attach appropriate amount of chain to loop to achieve desired mounting height. Thread wire through every 3rd loop of chain. Screw Canopy (B) onto mounting bracket (A) by tightening the threaded ring (D) until canopy is flush with ceiling.

4.)

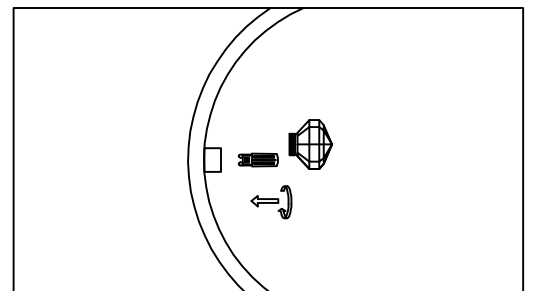

Step.4: Install the bulbs (E) to the socket, and screw the crystal (F) onto the lamp holder.