

ASSEMBLY INSTRUCTIONS FOR #19021 (SG399-24-1-M237M)

Fig A.

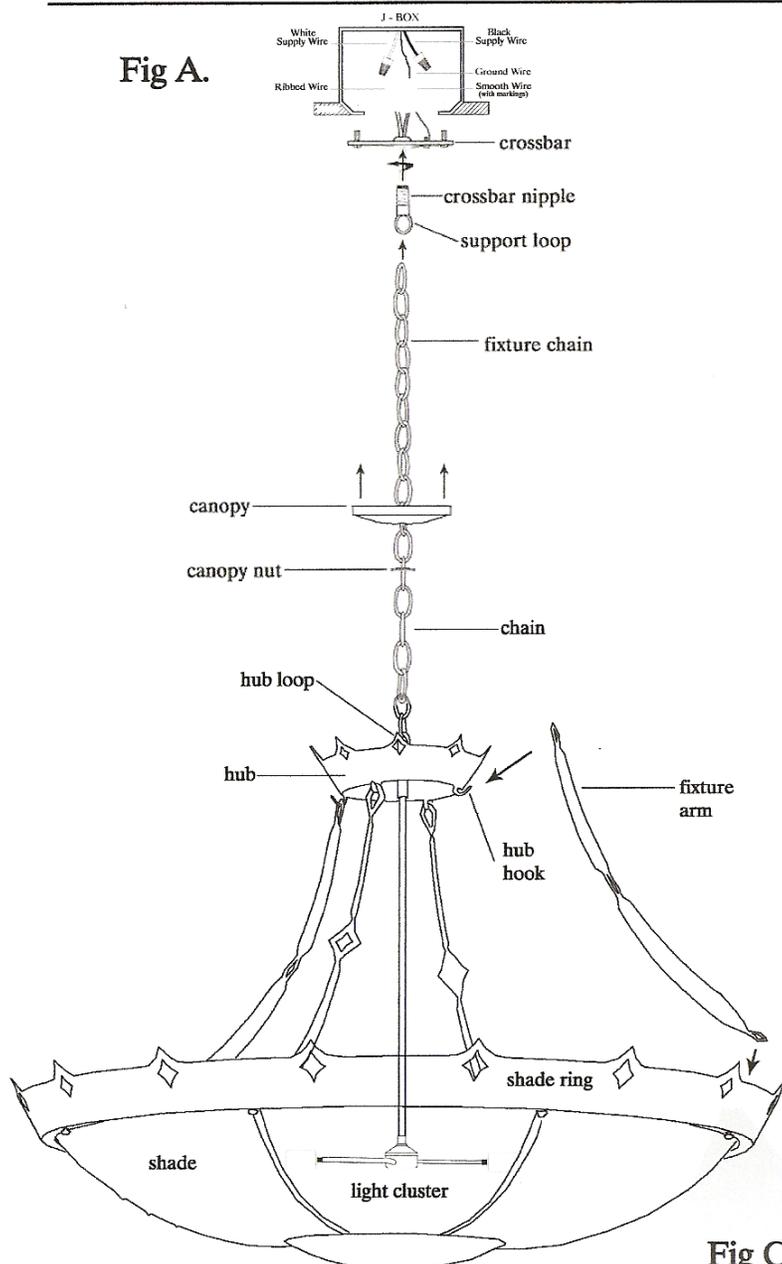


Fig B.


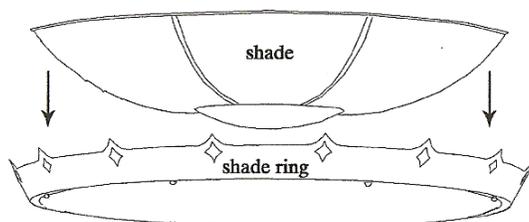


Fig C.

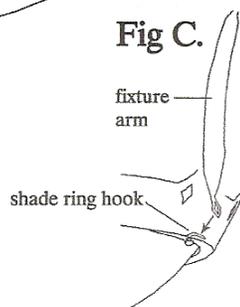

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS IS A TWO PERSON JOB

1. Attach crossbar to j-box, screw crossbar nipple into crossbar, screw support loop onto crossbar nipple. Fig A.
2. Determine length of chain needed. Attach chain to hub loop (hub and lighting cluster come pre assembled), slide canopy nut onto chain, slide canopy onto chain, attach chain to support loop. Fig A.
3. Thread fixture wire through chain, canopy nut, canopy, crossbar nipple and crossbar.
4. Wire as per local electrical code.
5. Place canopy to ceiling, screw canopy nut onto support loop and tighten to canopy. Fig A.
6. Place shade into shade ring. Fig B.
7. Attach fixture arm to shade ring hook as shown. Fig C.
8. Attach fixture arm to hub hook. Fig A.
9. Repeat steps 6 and 7 for remaining fixture arms.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com