
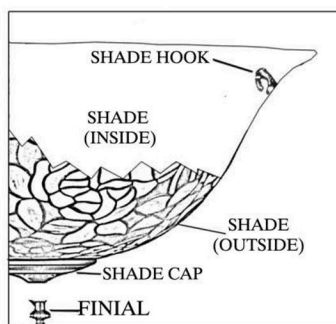


# ASSEMBLY INSTRUCTIONS FOR #38159 (TR872-24-1-M71-27)

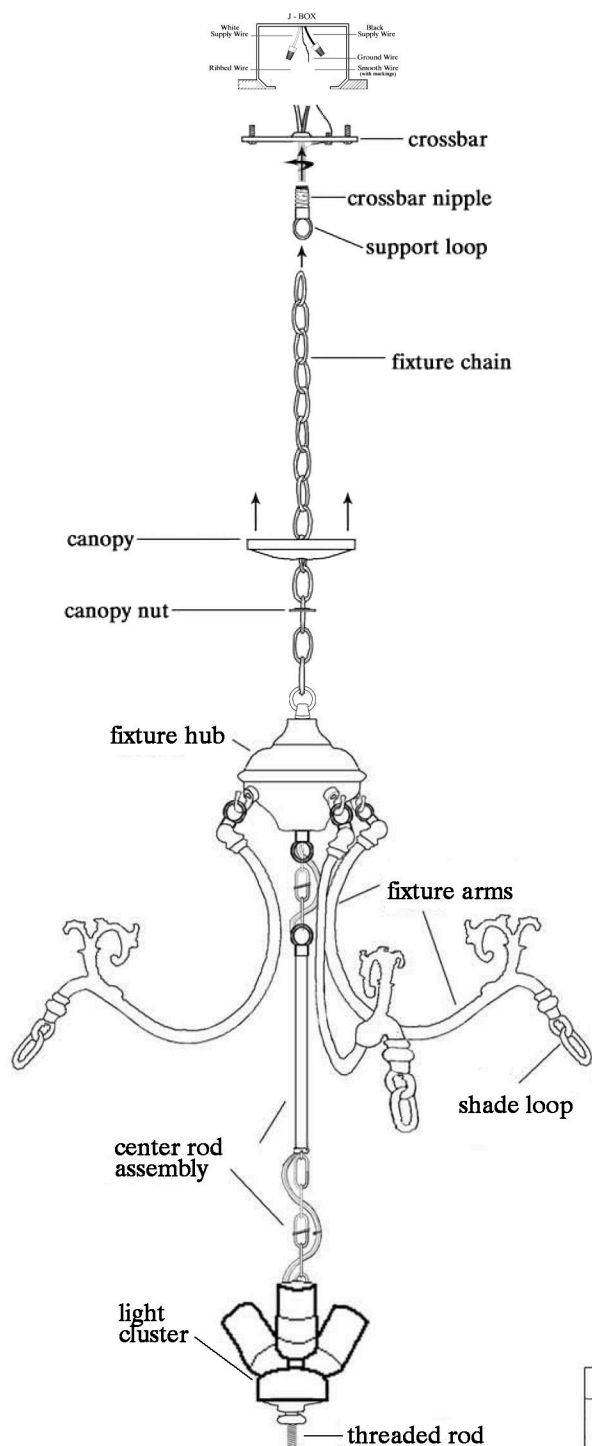

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar with crossbar nipple and support loop to j box.
  2. Attach fixture chain to hub loop, place canopy nut than canopy onto fixture chain, attach fixture chain to support loop.
  3. Wire as per local electrical code.
  4. Place fixture arms onto hub hooks.
  5. Attach shade loops onto shade hooks.
  6. Place light cluster threaded rod through shade cap, attach finial to threaded rod.
- NOTE: Weight of Shade must be on Center Rod Assembly Only. Arm Assembly is for Shade balance only.
7. Screw finial up or down to fine tune tension of fixture arms.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)