


# ASSEMBLY INSTRUCTIONS FOR #122398 (5633-10)

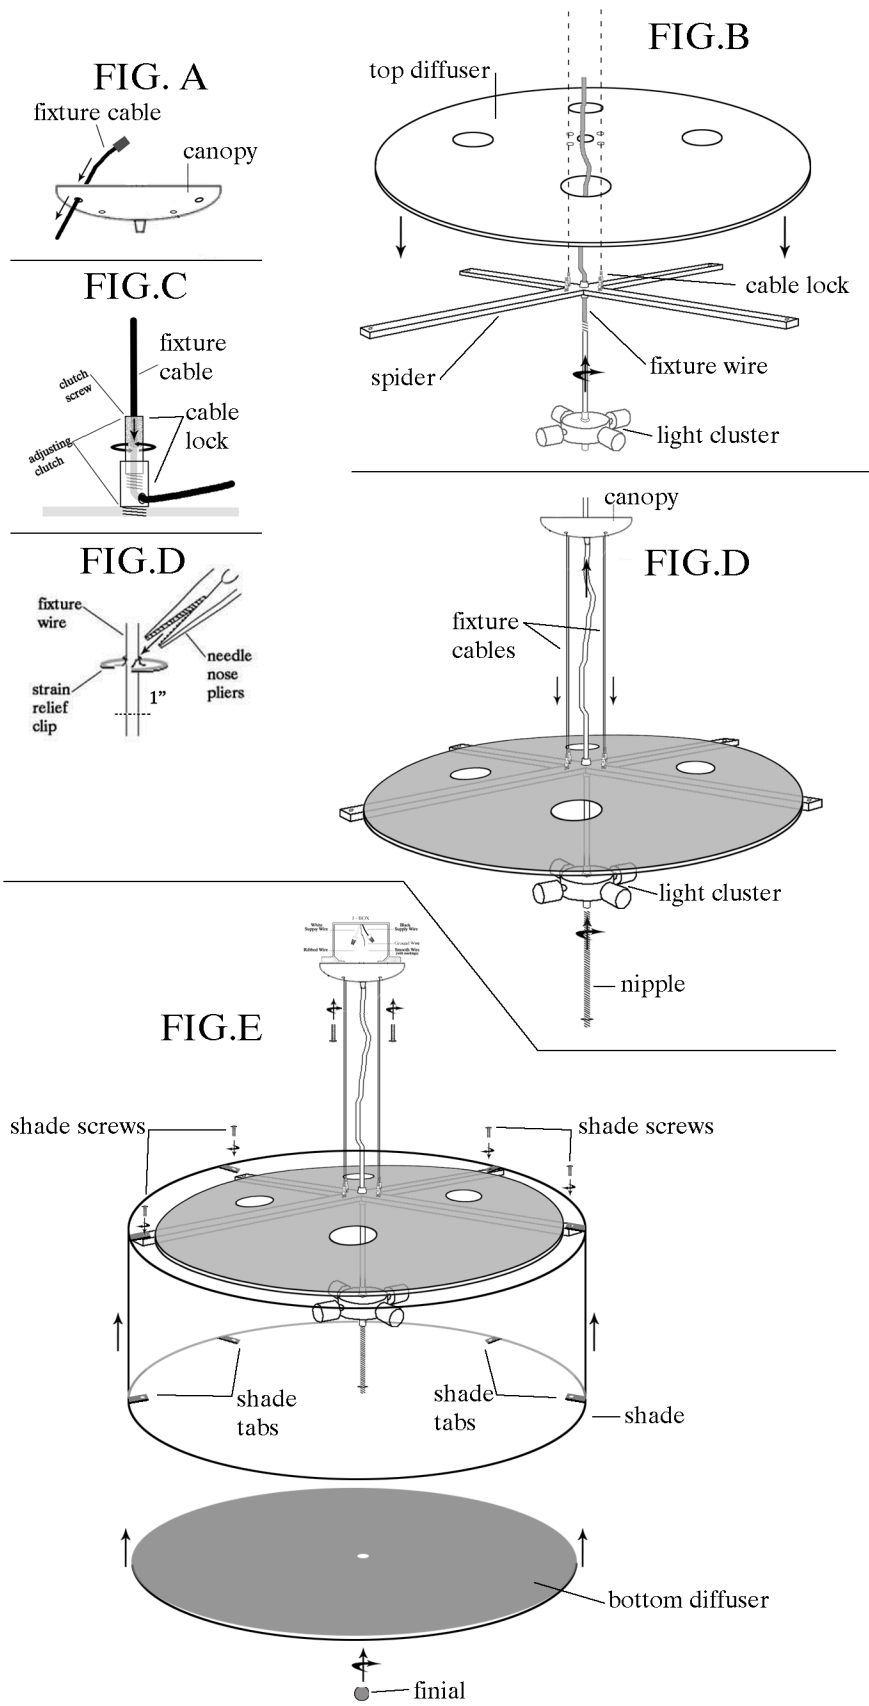

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Place fixture cables down through holes in canopy. FIG.A
2. Place fixture wire up through spider, screw light cluster into bottom of spider. Place top diffuser down on to spider (line up the 4 small holes near center of diffuser with the 4 cable locks located on top of top diffuser). FIG.B
3. Place fixture cables down through cable locks (adjust fixture cable length and level, once correct tighten clutch screw). FIG.C
4. Place fixture wire up through center of canopy, pull up through canopy to desired height, hold in place with strain relief clip as shown in FIG. D. Trim fixture wire leaving 6" of wire above canopy.
5. Attach crossbar to j box. Wire as per local electrical code.
6. Attach canopy to crossbar, tighten to ceiling. Screw nipple into bottom of light cluster. FIG.E
7. Place light bulbs in sockets. Place shade up and onto spider, attach with screws provided. FIG.E
8. Place bottom diffuser up and onto bottom shade tabs, screw finial onto nipple and tighten to diffuser. FIG.E



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)