
0244 03/2//11

ASSEMBLY INSTRUCTIONS FOR #124490 (38101-1)

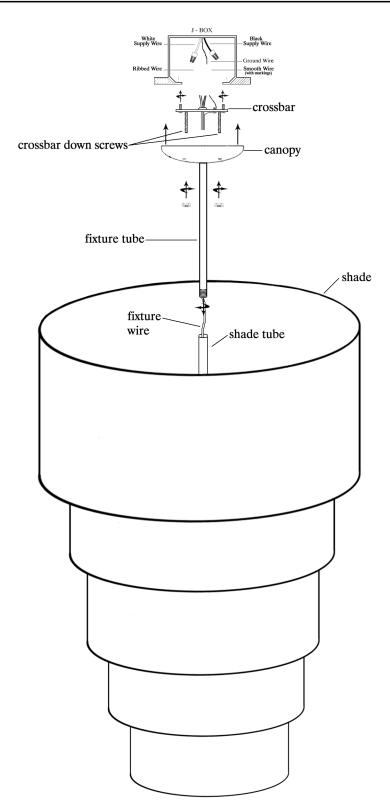

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Attach crossbar with down screws to jbox.
- 2. Thread fixture wire through fixture tube.
- 3. Screw fixture tube into shade tube,
- 4. Wire as per local electrical code.
- 5. Place canopy onto crossbar down screws, tighten to ceiling



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009 MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET visit us on the web at www.meyda.com