

ASSEMBLY INSTRUCTIONS FOR #125519 (59735-75) DF-4


THIS IS A TWO PERSON JOB

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

- 1.) Attach crossbar with crossbar nipple and canopy loop to secure location.
- 2.) Attach fixture chain to hub.
- 3.) Place screw collar then canopy onto fixture chain.
- 4.) Wire as per local electrical code.
- 5.) Place canopy up to ceiling and secure with screw collar.
- 6.) Remove shade screws (2) from opposing side of top shade frame. Remove shade nuts from remaining shade screws.
(refer to Figure A for steps 7 & 8)
- 7.) Hold first shade panel securely and carefully, place onto one of the shade screws that are screwed in. (as shown in figure A).
8. Secure panel with shade nut and locktight provided.
- 9.) Repeat steps 7 & 8 for second glass panel. (Make sure to install the first two shade panels to opposing sides of shade frame).

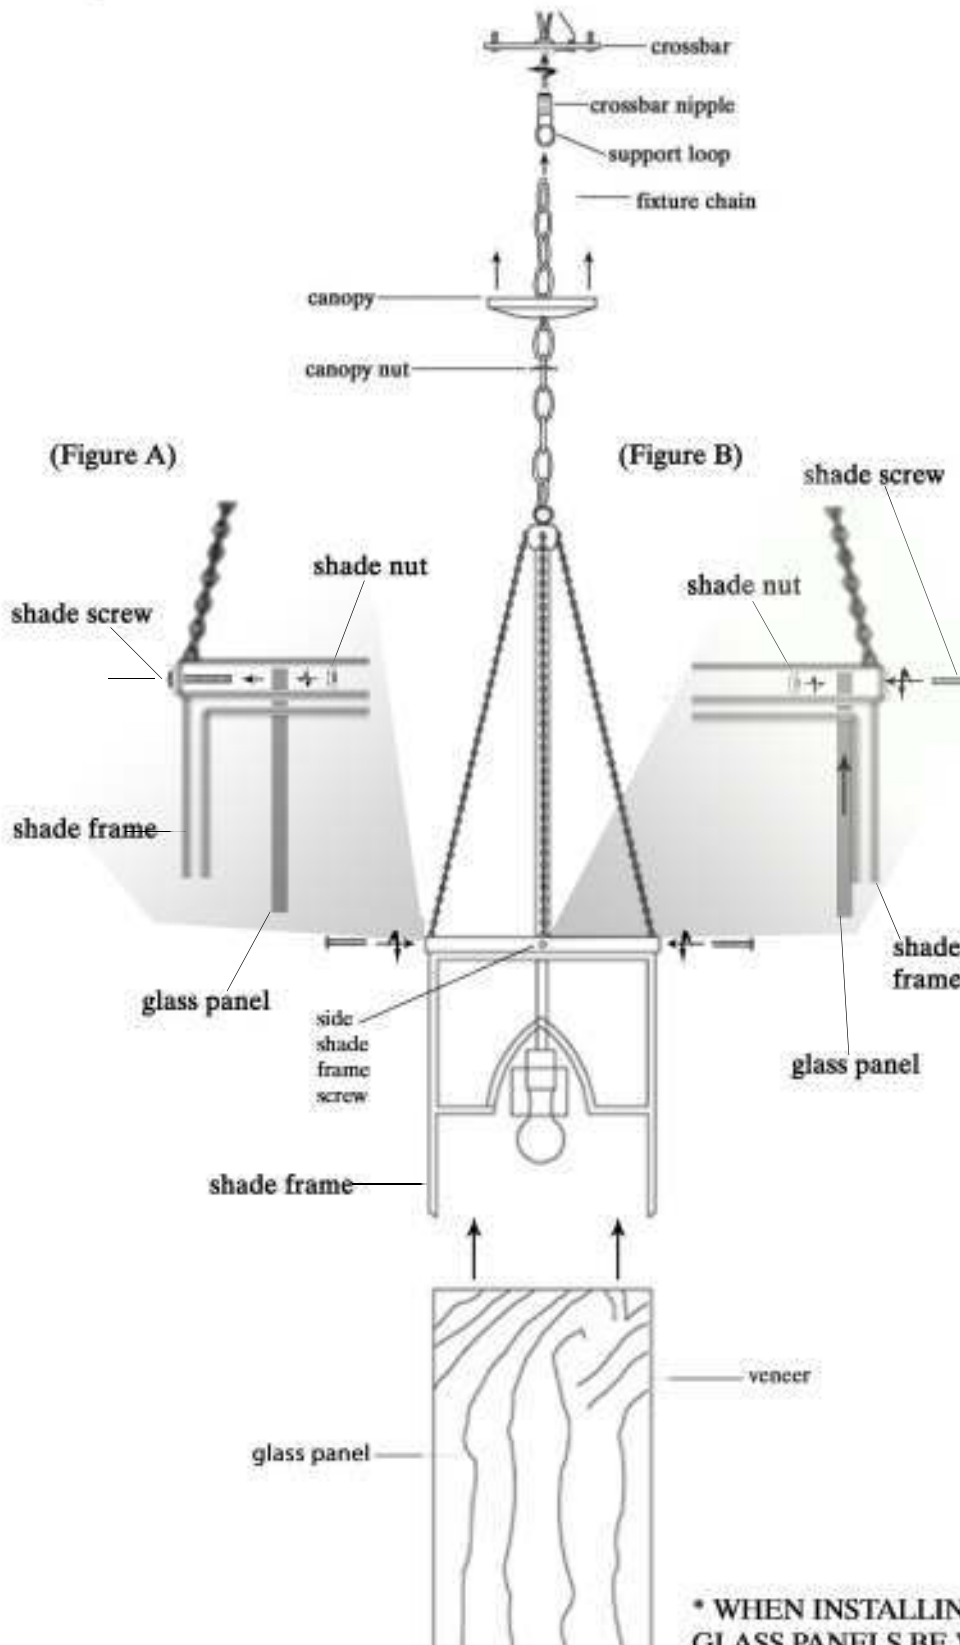

* WHEN INSTALLING ALL GLASS PANELS BE VERY CAREFUL NOT TO SCRATCH WOOD GRAIN VENEER.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

ASSEMBLY INSTRUCTIONS FOR

#125519 (59735-75) DF-4 Continued

(Refer to Figure B for steps 10-12)

10.) To install remaining glass panels be sure to hold panel in a vertical position and gently slide the panel up into shade frame.

*(BE VERY CAREFUL NOT TO MOVE PANEL LEFT OR RIGHT WHEN SLIDING INTO POSITION AS HITTING PREVIOUSLY INSTALLED PANELS MAY CAUSE THESE PANELS TO CRACK OR BREAK AND FALL OUT OF SHADE FRAME. BE SURE TO ALSO KEEP SHADE PANELS VERTICAL THROUGHOUT INSTALLATION).

11.) When glass panel is in position, screw shade screw into shade frame and through the hole that is located on the top of the glass panel.

12.) Secure with shade nut and locktight provided.

13.) Repeat steps 10-12 for remaining glass panel.

note: shade nut, locktight, lamping, and relamping must be completed through top of shade.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com