


ASSEMBLY INSTRUCTIONS FOR #136291 (1-0040233309-47.S08K06)

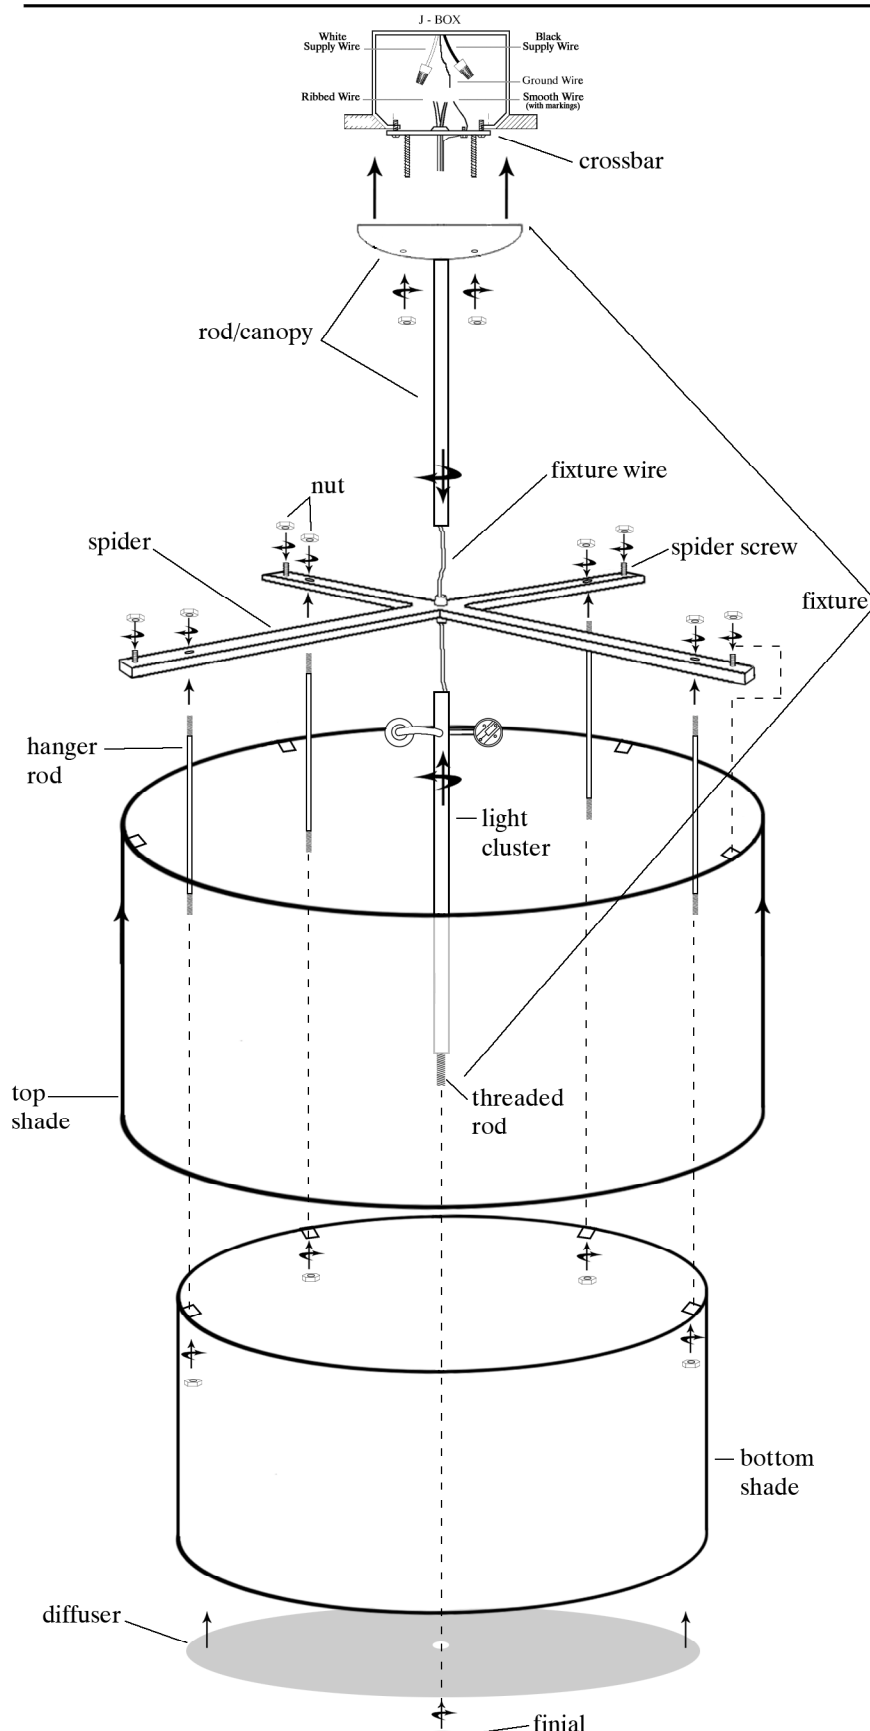

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

1. Place fixture wire through spider, screw light cluster onto spider.
2. Place fixture wire through rod/canopy.
3. Attach crossbar to jbox .
4. Wire as per local electrical code.
5. Attach fixture (rod/canopy,spider, light cluster) to crossbar screws.
6. Attach hanger rods to spider.
7. Place top shade onto spider screws and attach with nuts.
8. Attach bottom shade to hanger rods.
9. Place diffuser onto threaded rod and secure with finial.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com