


ASSEMBLY INSTRUCTIONS FOR #149332

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

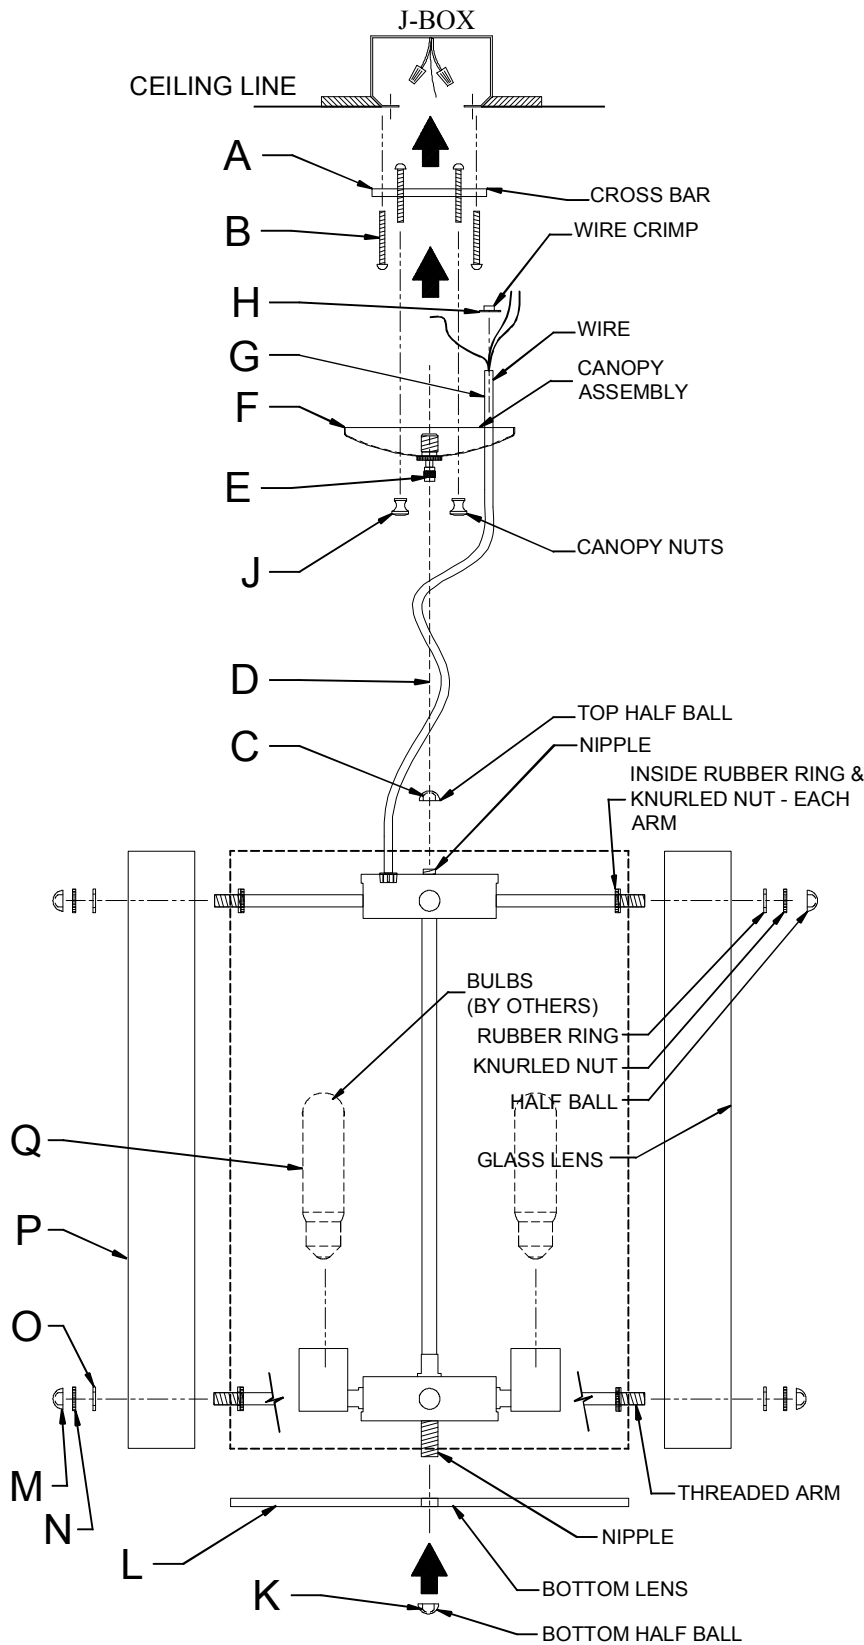

- 1) ATTACH CROSS BAR (A) TO "J" BOX WITH FASTENERS (B) PROVIDED BY OTHERS.
- 2) REMOVE TOP HALF BALL (C) FROM NIPPLE AND THREAD SUPPORT CABLE (D) UP THROUGH HALF BALL UNTIL WIRE STOP NESTS FIRMLY INTO BOTTOM OF HALF BALL.
- 3) SCREW TOP HALF BALL (C) BACK ONTO NIPPLE UNTIL IT IS SECURE.
- 4) THREAD SUPPORT CABLE (D) THROUGH CENTER OF CABLE GRIPPER (E) AND ADJUST LENGTH TO OBTAIN DESIRED HEIGHT ABOVE FINISHED FLOOR.
- 5) WEAVE WIRE (G) AROUND SUPPORT CABLE (D) & THREAD WIRE (G) THROUGH CANOPY ASSEMBLY (F) LEAVING ENOUGH LENGTH TO MAKE CONNECTION TO "J" BOX.
- 6) SECURE WIRE IN PLACE AT CANOPY WITH WIRE CRIMP (H).
- 7) WIRE AS PER LOCAL ELECTRICAL CODES.
- 8) PLACE FIXTURE ASSEMBLY TO CEILING AND SECURE IN PLACE WITH CANOPY NUTS (J).
- 9) INSTALL LAMPING (BULBS).
- 10) REMOVE BOTTOM HALF BALL (K) FROM NIPPLE, INSTALL BOTTOM LENS (L) & SECURE IN PLACE WITH BOTTOM HALF BALL.
- 11) REMOVE SIDE HALF BALLS (M), KNURLED NUTS (N), & RUBBER RING (O) FROM THREADED ARMS.
- 12) INSTALL GLASS LENSES (P). MATCH GLASS LENSES ACCORDING TO STICKERS MATCHING EACH GLASS PANEL TO EACH ARM. ADJUST "INSIDE" KNURLED NUTS & RUBBER RINGS IF NECESSARY.
- 13) SECURE GLASS LENSES (P) WITH RUBBER RINGS, KNURLED NUTS & HALF BALLS.

12.5" W SACRAMENTO PENDANT

CUSTOMER PROPOSAL / CUT SHEET

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com

