


ASSEMBLY INSTRUCTIONS FOR #154828

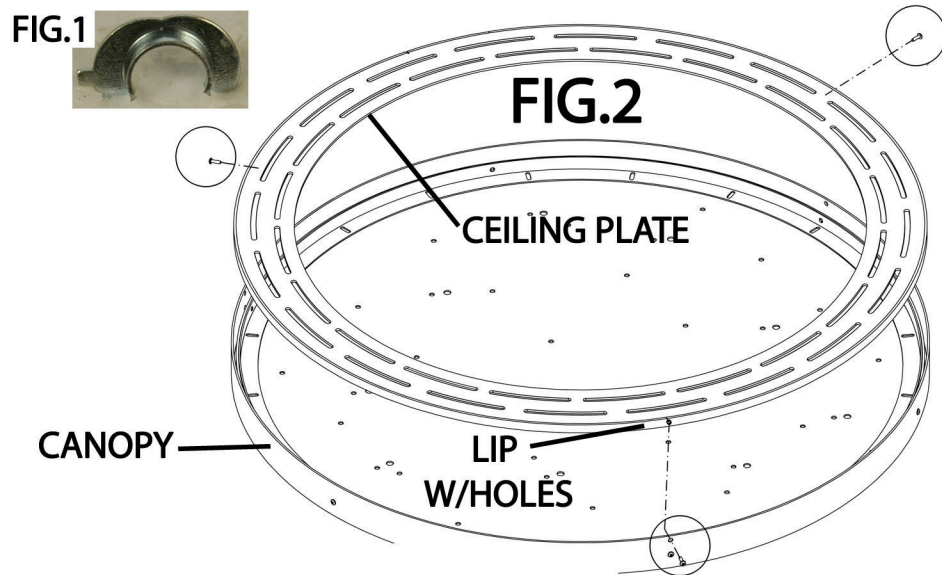

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. ATTACH SLOTTED CEILING PLATE TO CEILING. MAKE SURE IT IS SECURE.
2. ADJUST ELECTRICAL WIRES TO DESIRED HEIGHT USING WIRE CRIMPS, SEE FIG.1 LIFT CANOPY TO CEILING.
3. ATTACH FIXTURE WIRES TO CEILING WIRES ACCORDING TO LOCAL CODES.
4. ATTACH CANOPY TO SLOTTED CEILING PLATE USING THE SCREWS PROVIDED, LINE UP THE HOLES AND SCREW YOUR SCREWS INTO THE SIDE OF THE CANOPY. SEE FIG.2
5. REMOVE GLOBES FROM BOXES IF THEY HAVE NOT BEEN ALREADY.
6. GLOBES ARE ATTACHED BY SLIPPING ONTO SPRING CLIPS UNDER EACH SOCKET. PULL CLIPS TOGETHER TO FIT THROUGH GLOBE OPENING. SEE FIG.3 CAREFULLY SLIDE GLOBE INTO PLACE.
7. ONCE SET UP YOU CAN ADJUST AIRCRAFT CABLE TO DESIRED HEIGHT. YOU MAY CUT EXCESS CABLE, BUT BE SURE OF THE DESIRED HEIGHT BEFORE YOU CUT.

THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

FIG.3



2ND AVE.™



LIGHTING

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-843-1602

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.2ndave.com