


ASSEMBLY INSTRUCTIONS FOR #155609

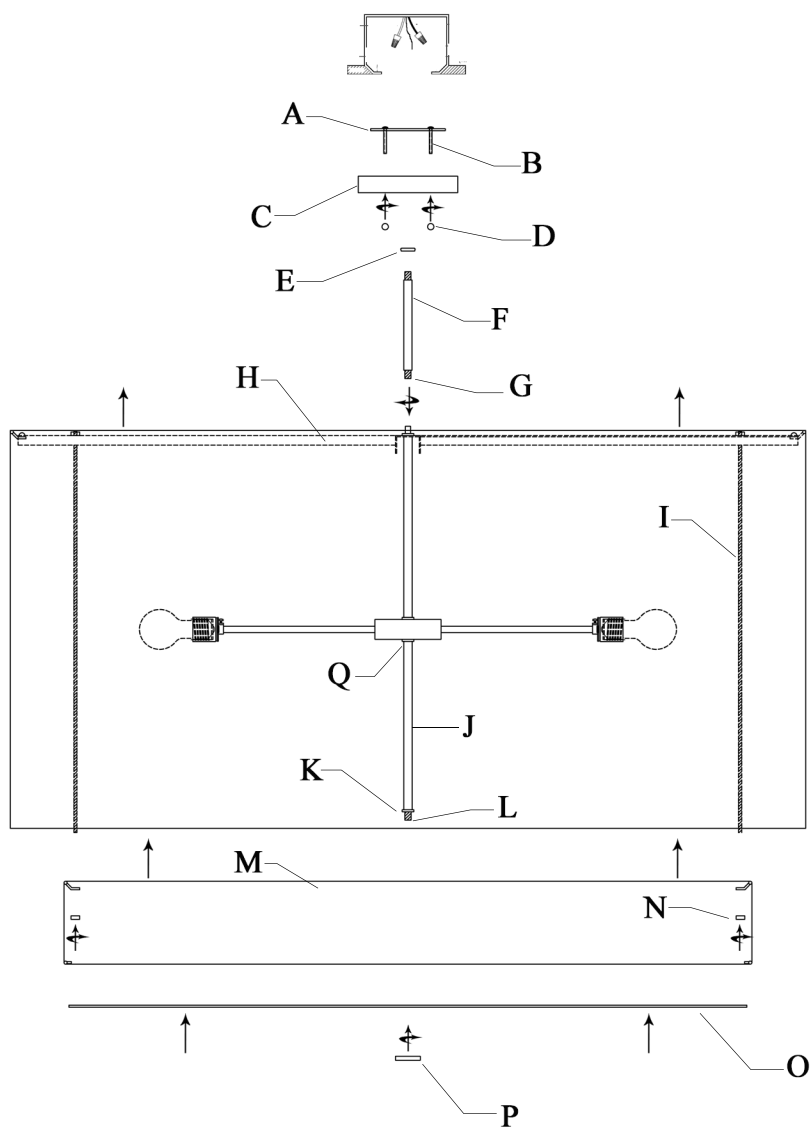

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar (A) to j-box using customer provided screws.
- 2.) Feed electrical wires through threaded rod (G) and screw threaded rod (G) onto center coupling on top of shade frame (H).
- 3.) Place metal sleeve (F), check ring (E), then canopy (C) onto thread rod (G). Secure rod to canopy with washers and nuts, provided.
- 4.) Wire as per local electrical codes.
- 5.) Secure canopy to crossbar (A) by screwing ball nuts (D) onto canopy screws (B).
- 6.) Attach bottom shade (M) to running threads (I) using nuts (N).
- 7.) Screw threaded rod (L) onto coupling at the bottom of light cluster (Q).
- 8.) Place metal sleeve (J) then check ring (K) onto threaded rod (L).
- 9.) Place acrylic diffuser (O) onto threaded rod (L) and secure with cap nut (P). diffuser (O) will rest on top on pegs on bottom of Shade (M).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com