
ASSEMBLY INSTRUCTIONS FOR # 156348

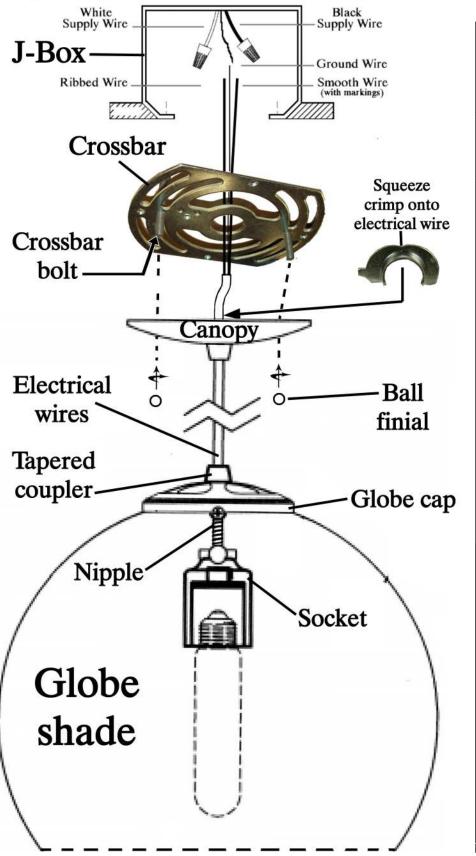

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.)Run your electrical wire, which is connected to your socket, throughyour globe shade so that the socket rests inside of shade. Slide your globe cap followed by your tapered coupler onto the electrical wire that is hanging out of the top of your globe shade. Screw the tapered coupler onto the nipple that will be at the top of socket and poking through the globe cap.
- 2.)Run your electrical wire through the center of the canopy. Determine overall desired height, and apply the crimp to the electrical wire above the canopy. The crimp will rest on the inside of the canopy.
- 3.)Attach your crossbar to your ceiling or
- J-Box, be sure you have two bolts pointing down to recieve your canopy.
- 4.)Bring fixture to ceiling, and attach all electrical wires as per your local codes.
- 5.) Secure fixture flush to ceiling by sliding canopy onto the two bolts from step 4, and screw the two ball finials onto the two bolts.
- 6.) Bulb your fixture, power on, enjoy!
- 7.) Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"