
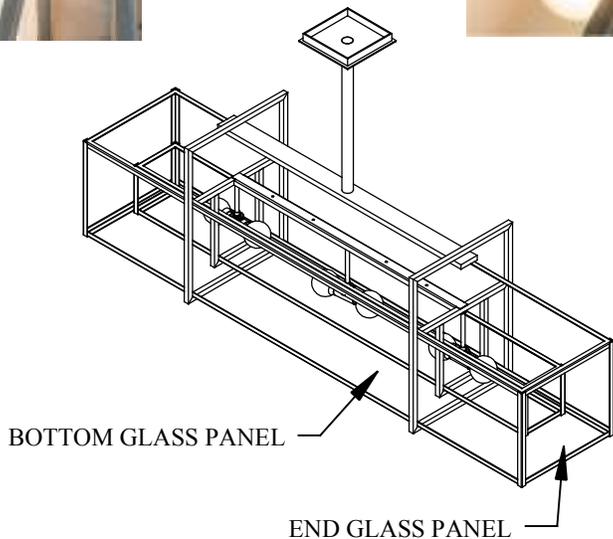


# GLASS INSTALLATION INSTRUCTIONS FOR #157692

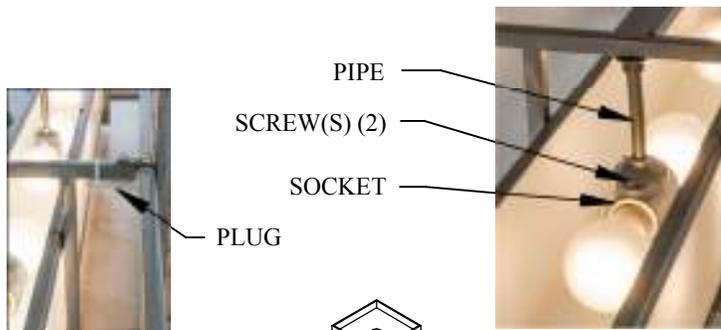

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS FIXTURE WEIGHS OVER 50 LBS.  
NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight supported.

1. UNSCREW ALL THREE SOCKETS FROM LIGHT BAR BY:
  - a) REMOVING SCREWS
  - b) UNSCREWING PIPE
2. INSERT INNER BOTTOM GLASS PANEL
3. INSERT INNER END GLASS PANELS.
4. INSERT INNER SIDE GLASS PANELS.
5. REPLACE RUBBER CAPS.
6. SCREW THREE SOCKETS BACK ON.
7. REPEAT STEPS 2-5 FOR OUTER FRAME GLASS PANELS.
8. REMOVE #1 ACORN NUT, CAREFULLY SLIDE ASSEMBLED INNER BOX INSIDE OUTER FRAME.
9. SCREW ON #1 & #2 ACORN NUTS.
10. CONNECT PLUG.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)