


# ASSEMBLY INSTRUCTIONS FOR # 160496

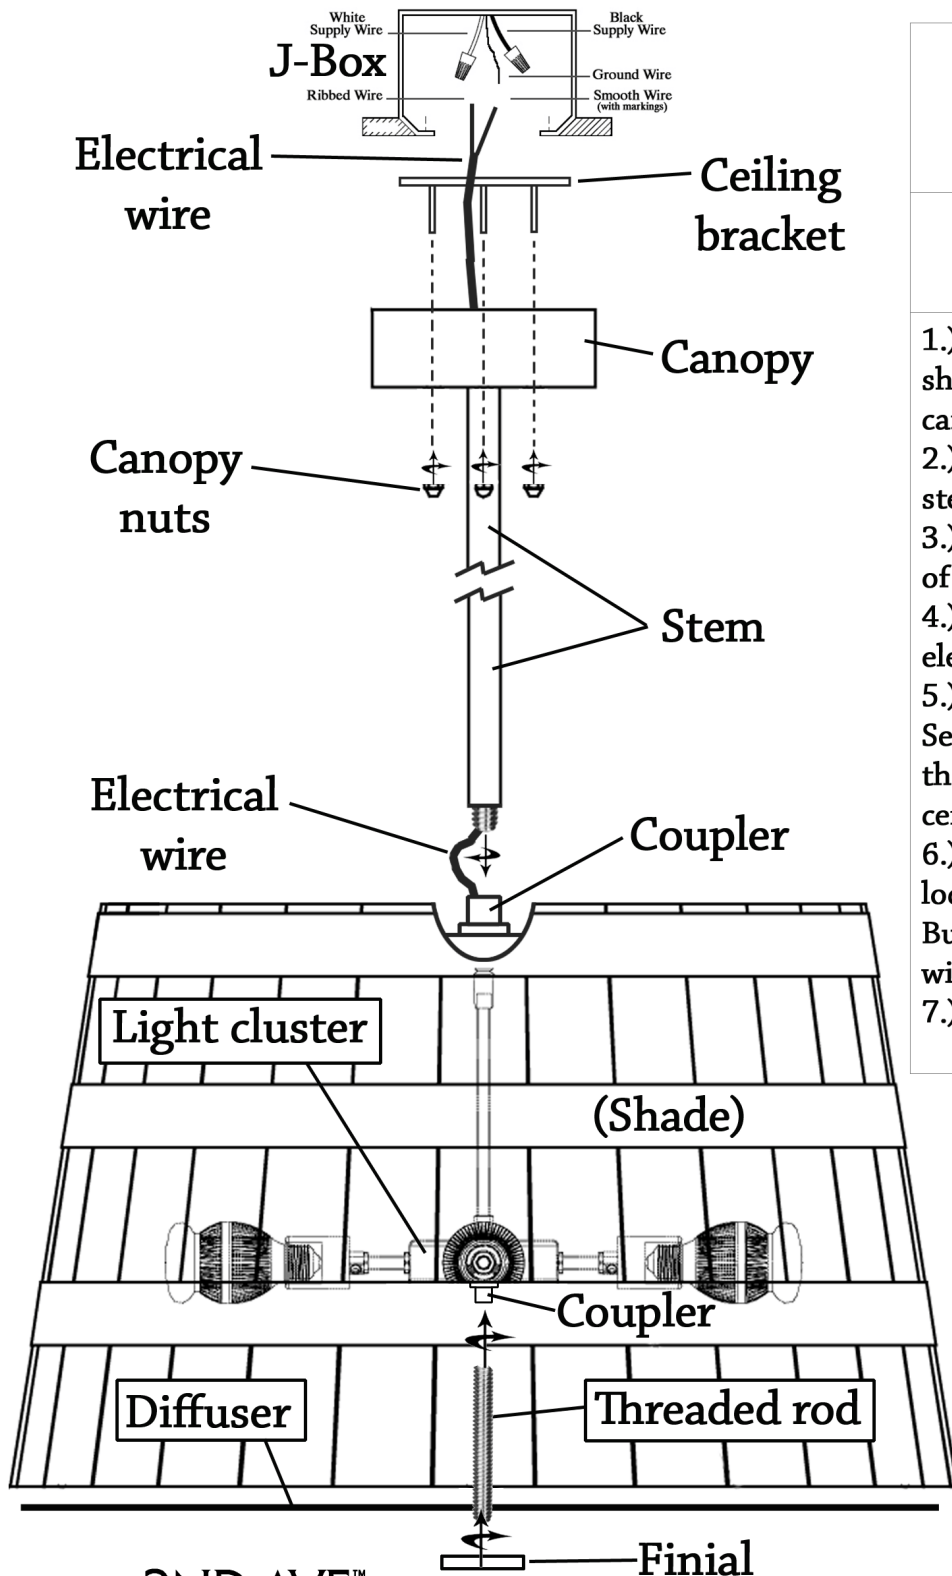


## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR  
CIRCUIT BREAKER BOX BEFORE STARTING  
INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE NOT  
INCLUDED

- 1.) Attach ceiling bracket to ceiling. There should be four bolts pointing down to receive canopy.
- 2.) Run your electrical wire up through the stem and canopy.
- 3.) Screw stem into the coupler located on top of shade.
- 4.) Raise shade/canopy to ceiling, connect all electrical wires as per your local codes.
- 5.) Slide canopy up onto ceiling bracket. Secure canopy flush to ceiling, by screwing the four canopy nuts provided onto the ceiling bracket bolts.
- 6.) Screw threaded rod into the coupler located at the bottom of the light cluster. Bulb your fixture, place diffuser, and secure with finial.
- 7.) Power on, enjoy your new fixture!

2ND AVE™

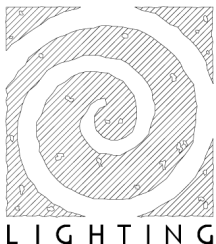

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-843-1602

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.2ndave.com](http://www.2ndave.com)