

SOCKET REPLACEMENT

ASSEMBLY INSTRUCTIONS FOR # 160905

FIG.1



FIG.3

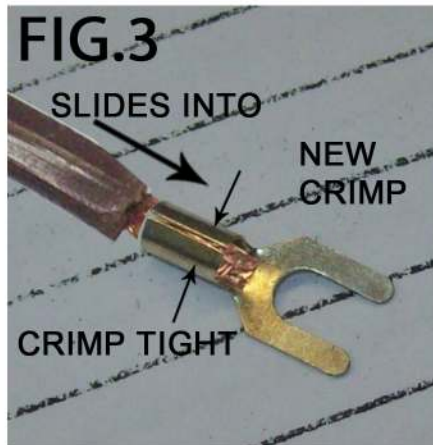


FIG.2

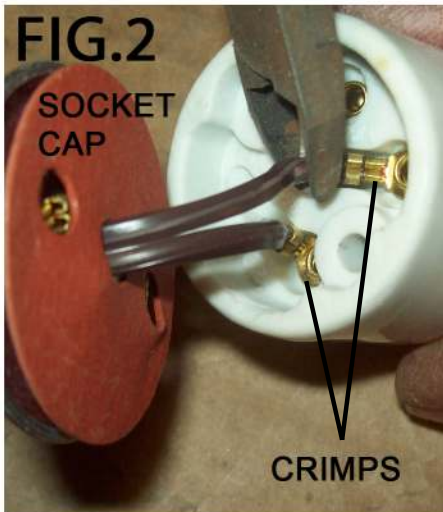


FIG.4

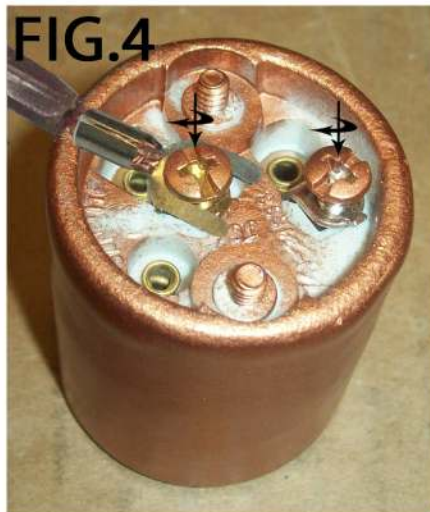


FIG.5



IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. UNSCREW THE TWO INSIDE SOCKET SCREWS SHOWN IN FIG.1, SOCKET SHOULD BE ABLE TO BE PULLED APART A LITTLE BIT AS SEEN IN FIG.2.
2. SNIP THE WIRES AS CLOSE AS POSSIBLE TO THE CRIMPS.
3. TAKE NEW CRIMPS PROVIDED, SLIDE ONTO STRIPPED WIRE, AND CRIMP THE CRIMPS ONTO WIRES TIGHT. (FIG.3)
4. TAKE YOUR NEWLY CRIMPED WIRE AND PLACE JUST UNDER SCREW HEAD, AND TIGHTEN SCREWS, KEEPING WIRE IN PLACE. (FIG.4)
5. REPLACE SOCKET CAP (FIG.2) BACK ONTO SOCKET, AND SCREW INSIDE SOCKET SCREWS BACK INTO PLACE. (FIG.1)
6. SOCKET SHOULD BE FULLY ASSEMBLED AT THIS TIME.
7. FIG.5 SHOWS HOW YOU MAY PROVIDE A LITTLE BIT MORE WIRE TO WORK WITH. (UNTWISTING THE ROPE JUST A LITTLE) AND WHEN FINISHED TWISTING THE ROPE BACK TO BEING TIGHT.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com