



# ASSEMBLY INSTRUCTIONS FOR 168465

## FIG.A

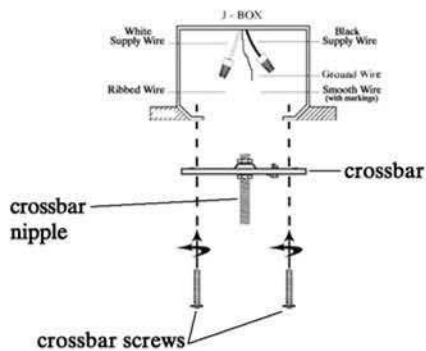

## FIG.B

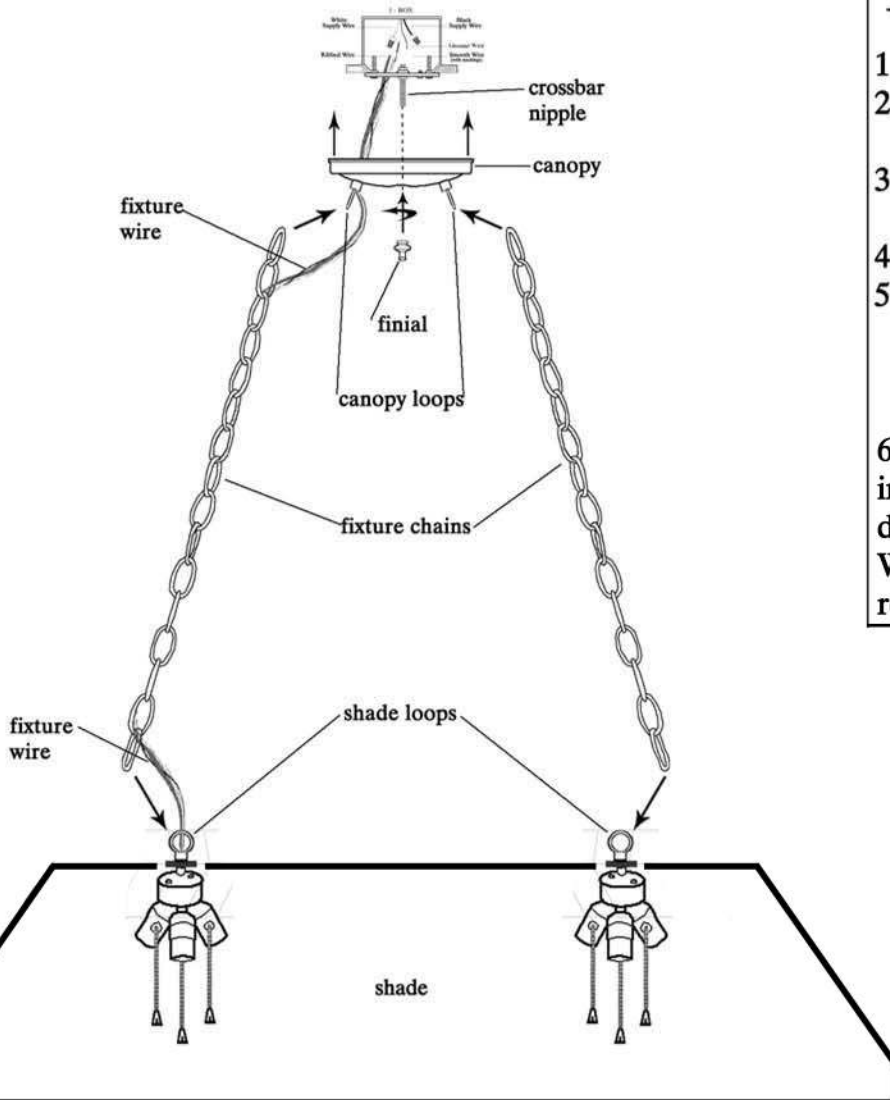

### IMPORTANT

**TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION**

**CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED**



**DO NOT REMOVE CANOPY LOOPS OR REINFORCEMENT PLATE FROM CANOPY**

— THIS IS A 2 PERSON JOB —

1. Attach crossbar to jbox. FIG.A
2. Attach fixture chains to shade loops and canopy loops. FIG.B
3. Place fixture wire through fixture chain and canopy. FIG.B
4. Wire as per local electrical code.
5. Place canopy (with fixture) onto crossbar nipple to ceiling, screw finial onto crossbar nipple and tighten to canopy. FIG.B
6. There is rubber wedges, (found on the inside of shade), keeping the glass secure during shipping and handling. When fixture is installed you should remove these wedges.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)