

ASSEMBLY INSTRUCTIONS FOR # 172657

Fig.1


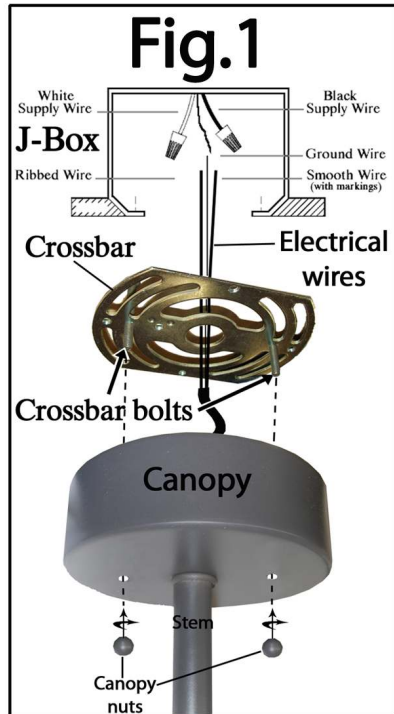


Fig.2

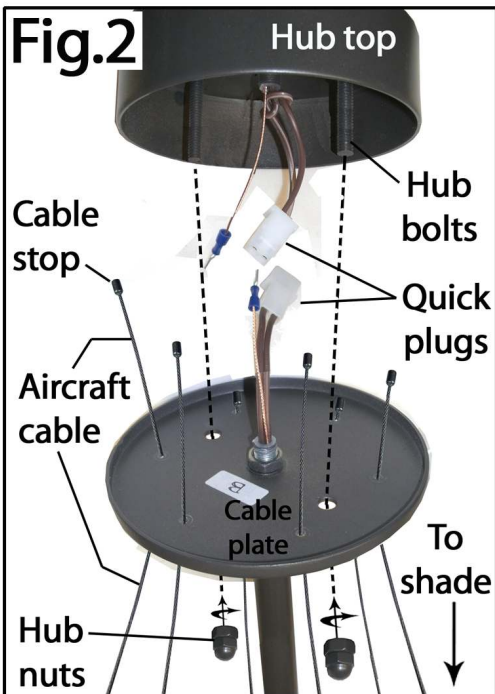

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to ceiling or J-Box. Be sure there is two bolts pointing down to receive canopy.(Fig.1)
- 2.) Bring canopy to ceiling and connect all electrical wires as per your local codes. Slide canopy up onto the two bolts pointing down from crossbar. Secure canopy in place with the two canopy nuts provided.(Fig.1)
- 3.) Connect hub: First you must run your aircraft cables through the six small holes in your cable plate. Run them so that the cable stop is resting inside the hub (on top of cable plate). Connect your quick plugs. Slide cable plate up onto the two hub bolts and secure cable plate with the two hub nuts provided. (Fig.2)
- 4.) Prepare shade: Insert the cable grips into the holes around perimeter of shade, washer & cable grip will be on the inside of shade. Secure cable grip in place with the half ball nut.(Fig.3)
- 5.) Screw the threaded rod into the coupler under the light cluster.(Fig.4)
- 6.) Run your aircraft cables through the cable grips and raise shade up onto the threaded rod, all the while keeping your cables at an even length & tight.
- 7.) Once shade is in place, screw the shade finial onto the threaded rod (below shade).
- 8.) Bulb your fixture, power on, enjoy!
- 9.) Have a Meyda Fine Day!

Fig.3



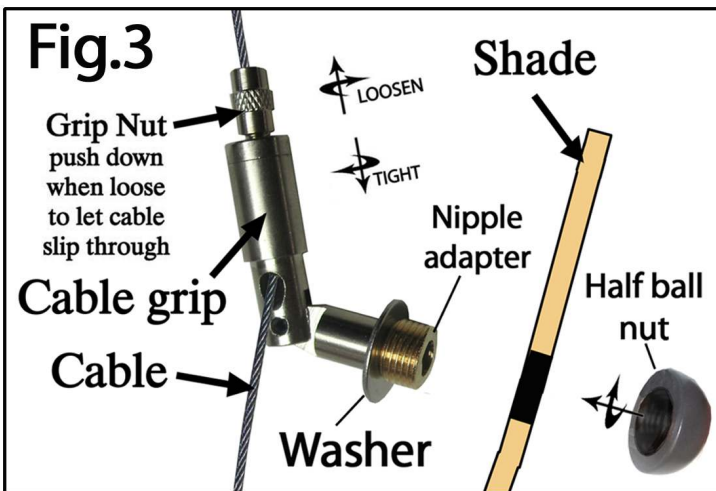


Fig.4

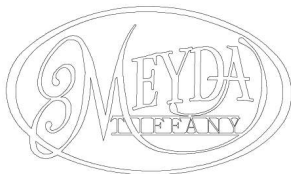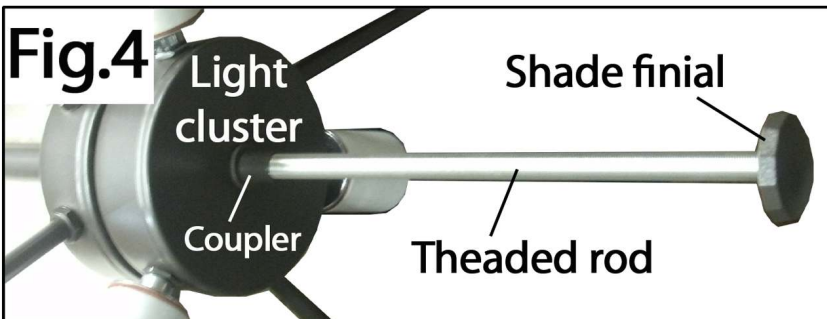

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com