
ASSEMBLY INSTRUCTIONS FOR #177465

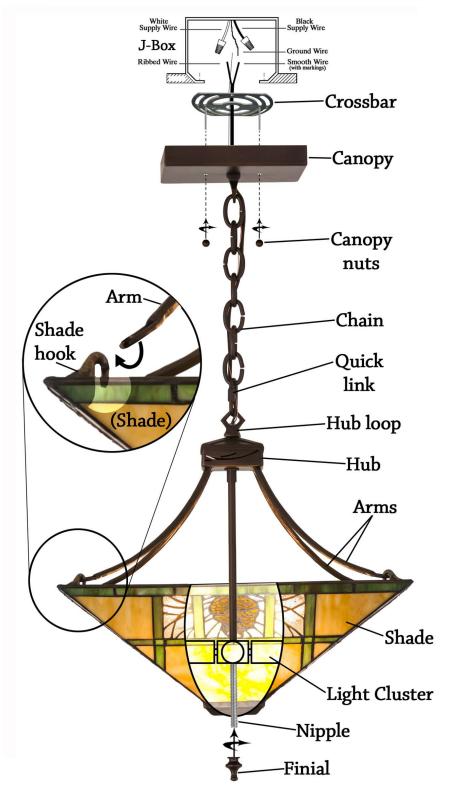

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.)Attach crossbar to ceiling or J-Box. Be sure there is two bolts pointing down ready to receive canopy.
- 2.)Connect the appropriate amount of chain to canopy & hub loop. Run your electrical wires up the length of chain, and through canopy. You may attach your shade now (Step 4) or after the hardware is connected to ceiling.(Step 3)
- 3.)Bring canopy to ceiling and connect all electrical wires as per your local codes. Slide canopy up onto the two crossbar bolts, and secure canopy flush to ceiling by screwing the two canopy nuts onto the two crossbar bolts.
- 4.)Attach your shade: There should be a nipple screwed into the bottom of the light cluster. Send this nipple through the center of shade. Hook your four arms onto the shade loops. Screw the finial onto the nipple, so that the weight of the shade is mostly on the finial.
- 5.)Bulb your fixture, (bulbs provided by others). Power on, enjoy your new fixture!



"A Commitment to Excellence in Lighting and Service" CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET visit us on the web at www.meyda.com