


ASSEMBLY INSTRUCTIONS FOR # 181492

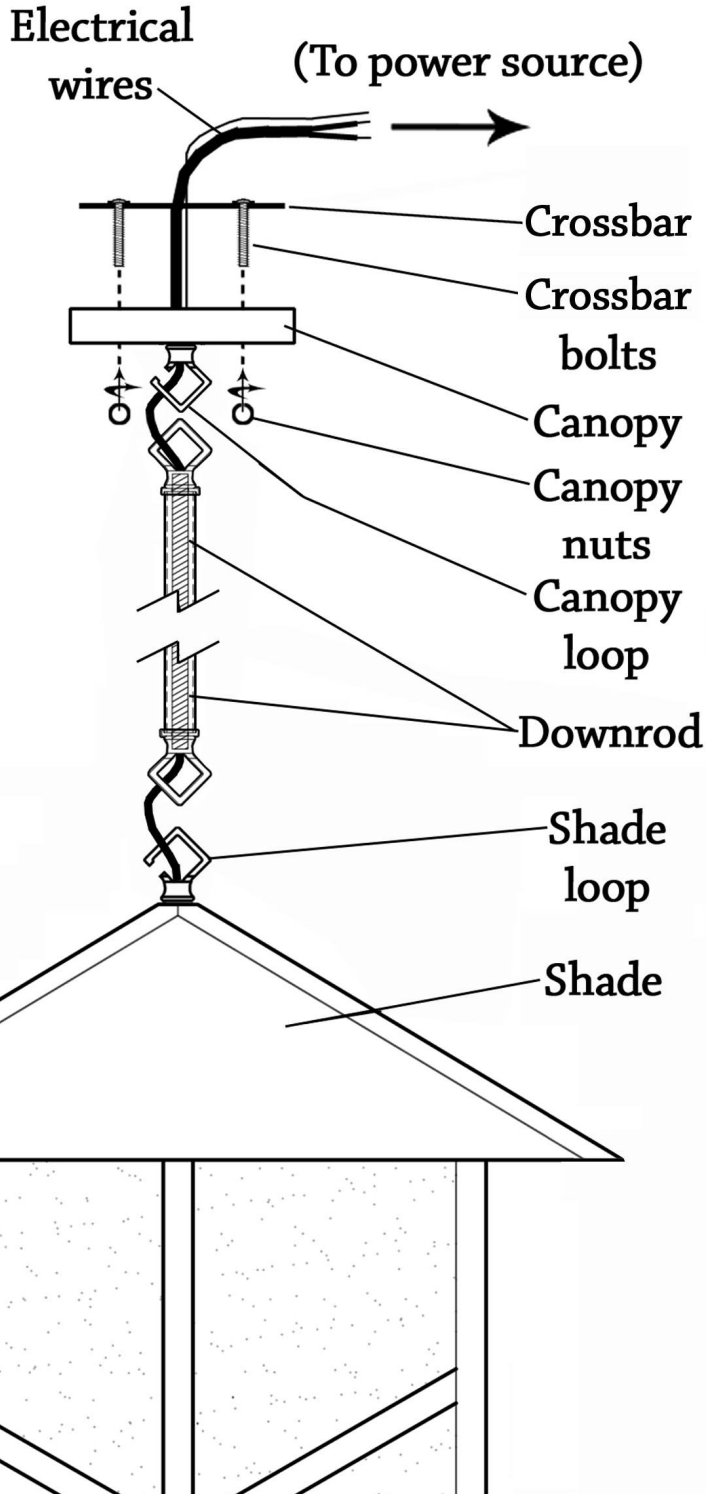


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach your crossbar to your ceiling or J-Box. Be sure there is two crossbar bolts pointing down ready to receive canopy.
- 2.) From your shade, run your electrical wires up the length of downrod, and through the center of the canopy. Hook the downrod onto the shade loop and canopy loop.
- 3.) Bring canopy/fixture to electrical connection point and connect electrical wires as per your local electrical code. Slide canopy up the two bracket bolts, and secure flush to ceiling by screwing the two canopy nuts onto the two crossbar bolts.
- 4.) Bulb your fixture at this time, (bulbs provided by others). Power on, enjoy your new fixture!

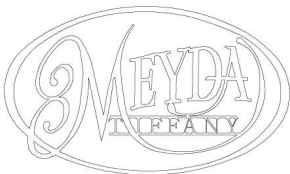

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com