


ASSEMBLY INSTRUCTIONS FOR #70107 (Q1-18-30-QHK1-32-2)

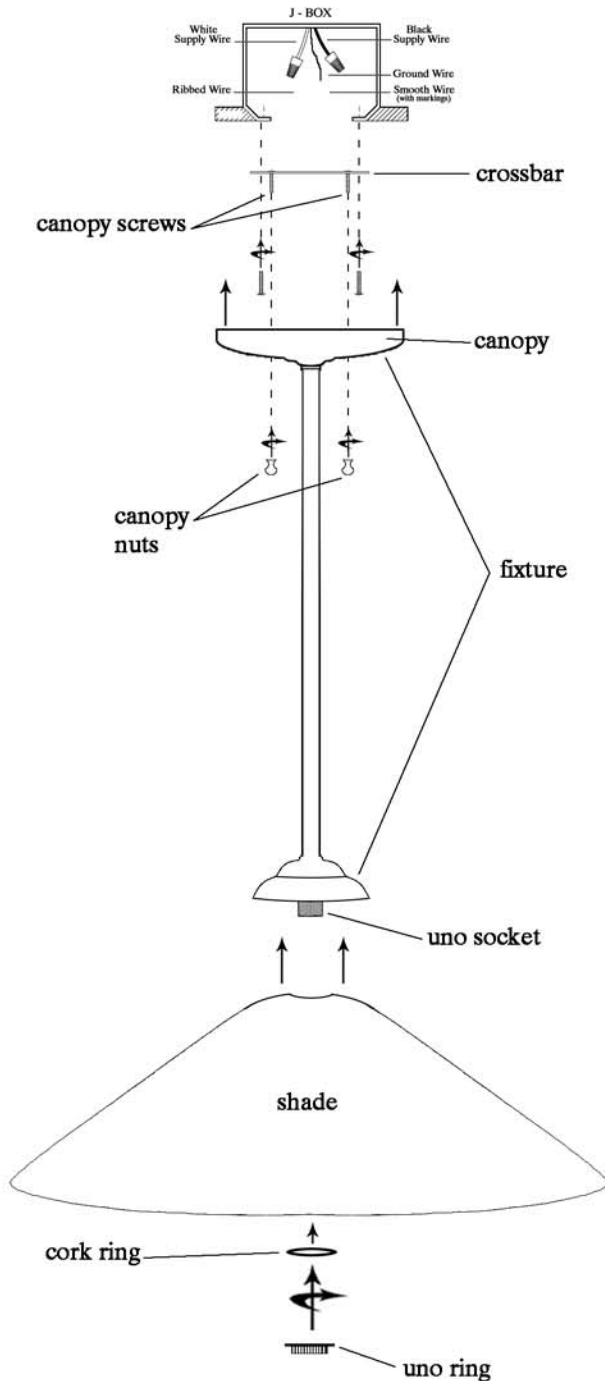

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw crossbar to j box.
2. Wire as per local electrical code.
3. Place fixture up and onto canopy screws.
4. Screw canopy nuts onto canopy screws and tighten to canopy.
5. Place cork ring onto uno socket.
6. Place shade onto uno socket.
7. Screw uno ring onto uno socket and tighten to shade.

DO NOT OVER TIGHTEN UNO RING, SHADE CRACKS CAN OCCUR.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com