


ASSEMBLY INSTRUCTIONS FOR #71008 (MS236-07SC-1)

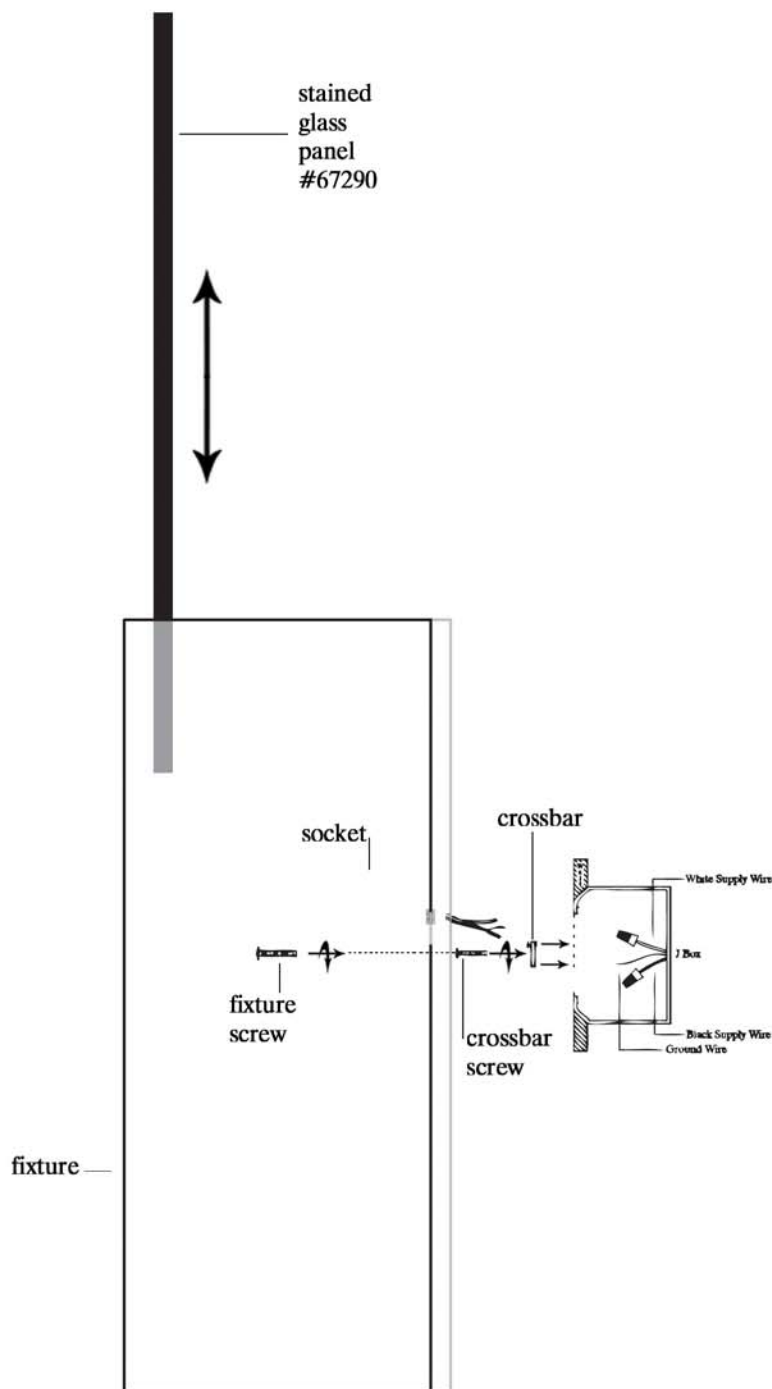

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to J-box using crossbar screws provided.
2. Slide stained glass panel up and carefully remove from sconce.
3. Wire to J-box as per local electrical code.
4. Attach sconce to crossbar using fixture screws provided.
5. Place light bulbs into socket.
6. Carefully slide stained glass panel down into sconce.





"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

CUT SHEET, ITEM # 71008

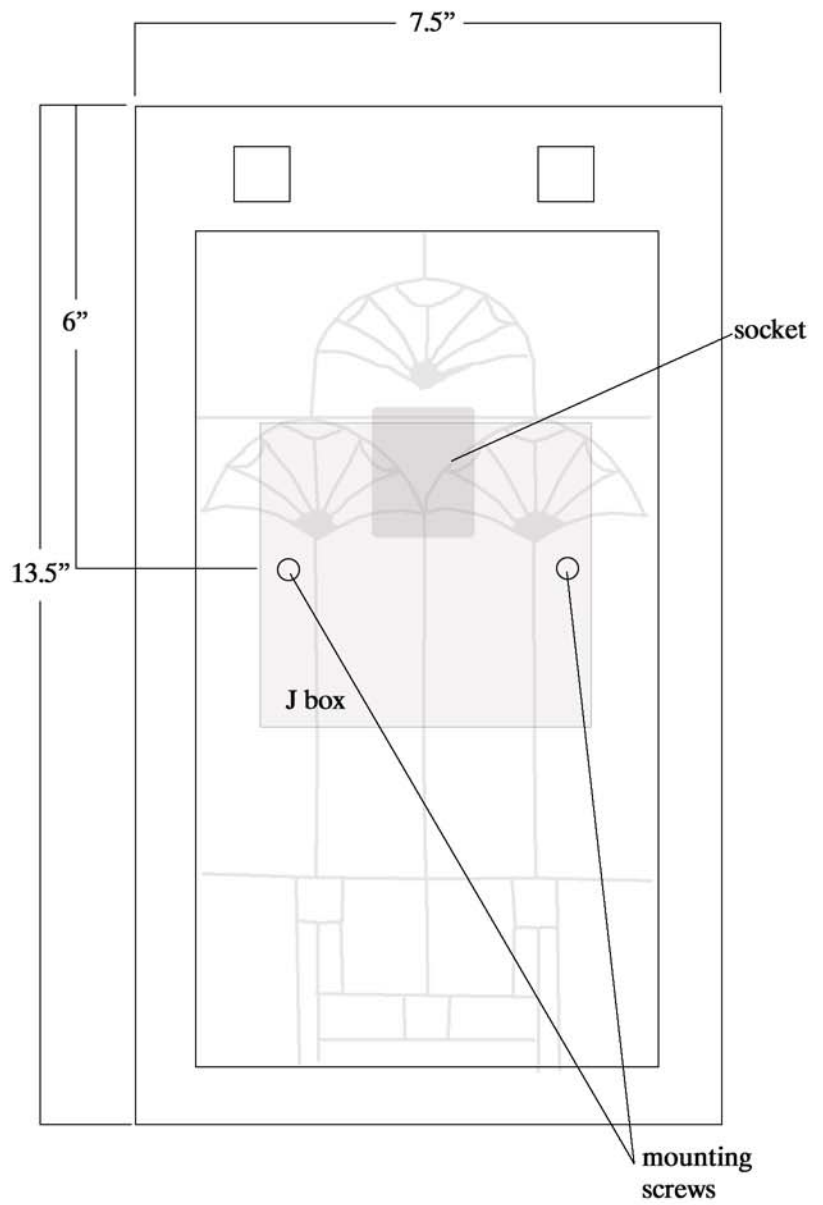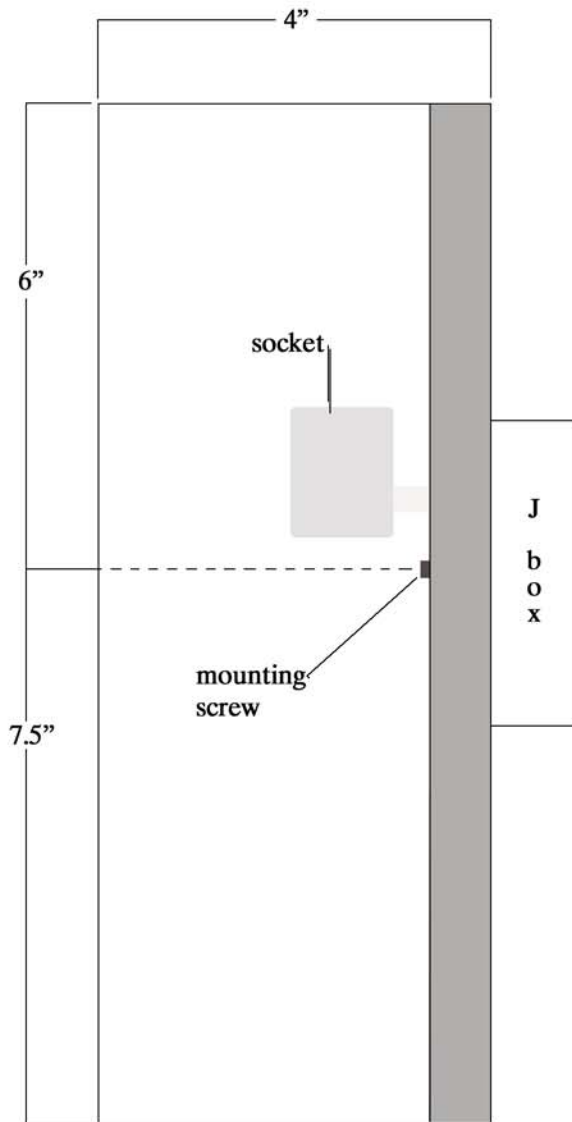

© DESIGN COPYRIGHT, MEYDA TIFFANY, INC. ALL RIGHTS RESERVED. NO UNAUTHORIZED DUPLICATION

© MEYDA TIFFANY, INC.			DISCRIPTION GINKO WALL SCNCE	PROJECT NUMBER
DRAWN BY 244	APRVD. BY	DATE 03/10/07	FIXTURE TYPE WALL SCNCE	DESIGN NUMBER
MATERIAL STAINED GLASS ARTIST RESIN		FINISH ANTIQUE MAHOGANY		FINAL MODEL NUMBER 71008