


ASSEMBLY INSTRUCTIONS FOR #78122 (SG363-20R-1-M199)

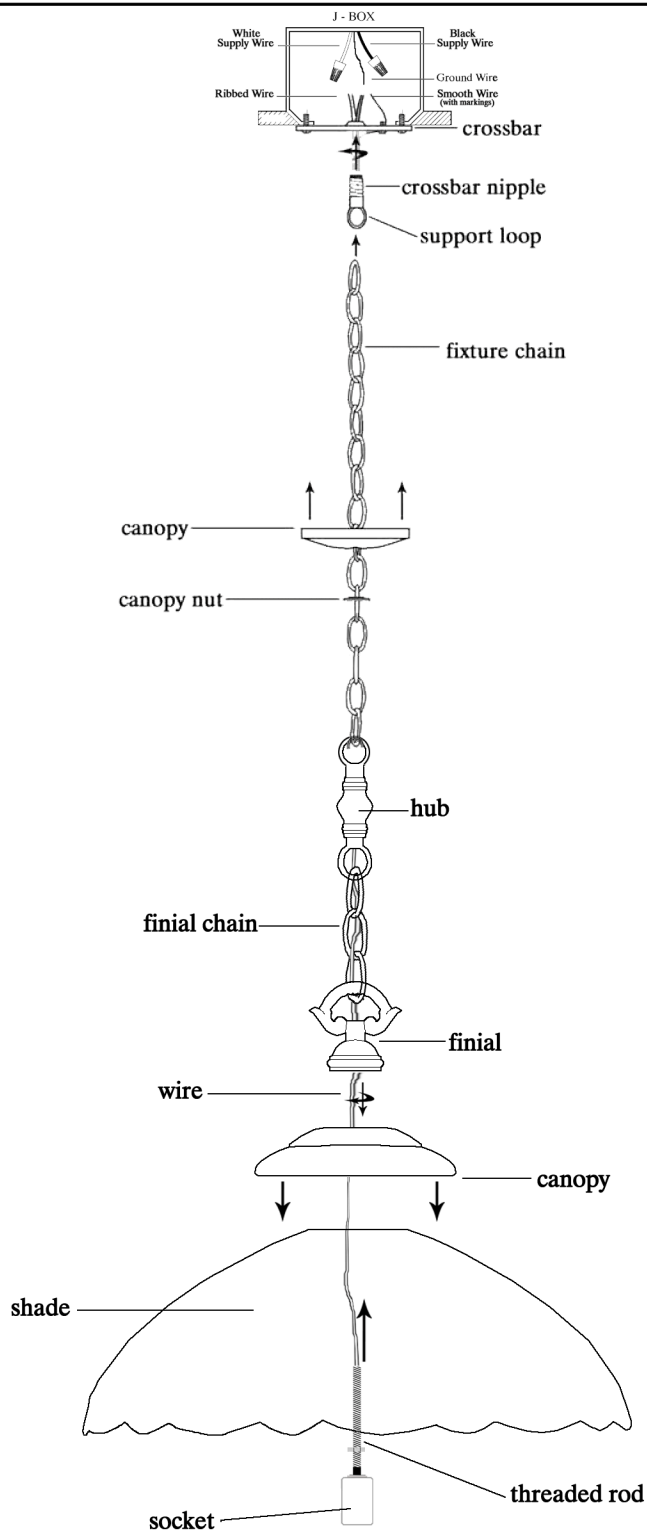

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar nipple with support loop to crossbar. Attach crossbar to J-Box.
2. Attach fixture chain to top of hub, place canopy nut and canopy onto fixture chain, attach fixture chain to support loop.
3. Attach finial chain to bottom of hub and finial.
4. Place socket with threaded rod and wire up through bottom of shade, canopy and finial.
5. Screw finial onto threaded rod and tighten to canopy.
6. Thread wire through hub and fixture chain, canopy nut, canopy, support loop and crossbar. Wire as per local electrical code.
7. Place canopy up to ceiling, screw canopy nut onto crossbar nipple and tighten to canopy.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

