



ASSEMBLY INSTRUCTIONS FOR #98434 (MA080-16-13)


Step 1

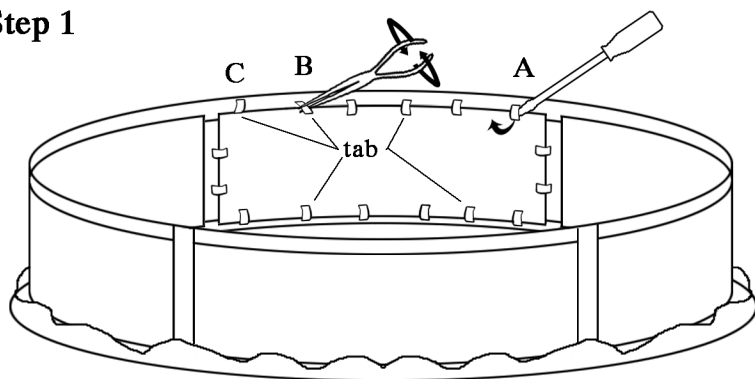

Step 2

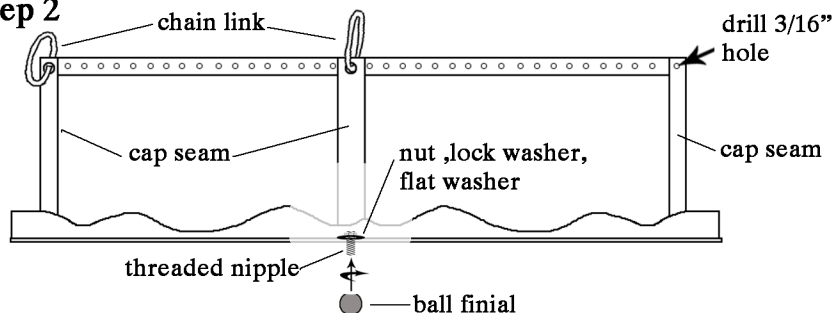

Step 3

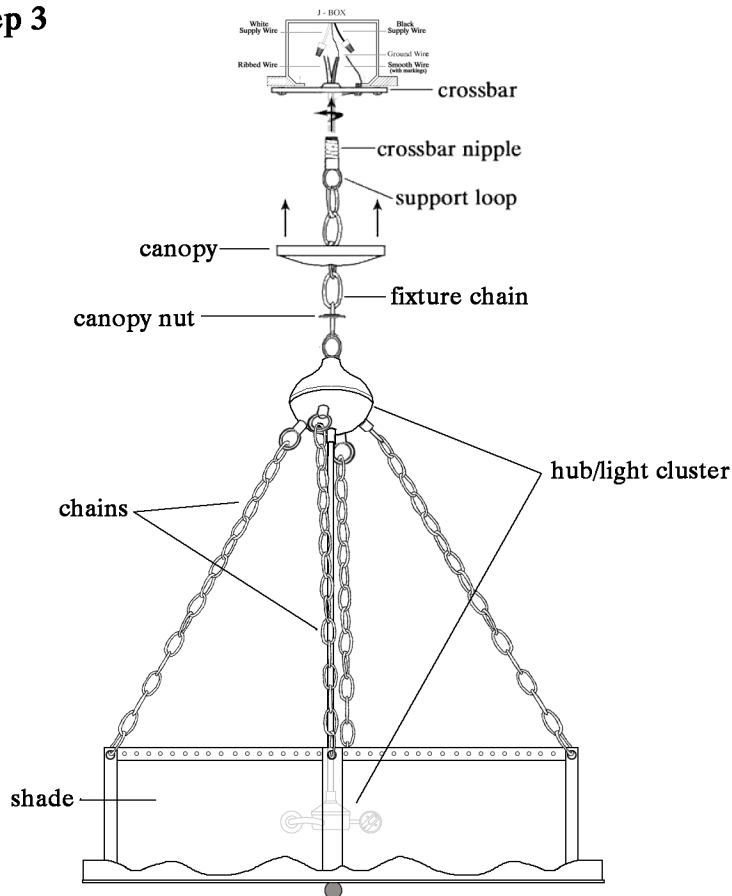

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

* To remove the mica you will need
(1) needle nose pliers
(1) standard screwdriver

1. Place screwdriver under tab and pry upward. Step 1 Fig.A
2. With pliers grasp tab and turn up and away from mica, Step 1 Fig. A&B.
3. Remove mica panels and replace with new panels (some panels may need to be trimmed to fit, each shade is hand made and unique). With pliers bend tabs over and into the mica panel. **DO NOT OVER BEND AS HOLES IN THE MICA PANEL MAY RESULT.**
4. Drill 3/16" hole in each of the four upright cap seams, install chain link into each of these holes. Step 2
5. Screw nut onto threaded nipple, place lock washer and flat washer onto threaded nipple and place into center hole in bottom of shade. Attach ball finial onto threaded nipple and tighten to shade. Step 2
6. Place hub/light cluster into shade and attach chains from shade to hub, attach crossbar nipple and support loop to crossbar, screw crossbar to J-Box. Step 3
7. Attach fixture wire to hub loop and support loop. Step 3
8. Wire as per local electrical code.
9. Place canopy to ceiling, screw canopy nut onto support loop and tighten to canopy. Step 3



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

