

ASSEMBLY INSTRUCTIONS FOR #98754(M111SF-SG699-40-1)


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

- 1.) Wire electrical wires on top of crossbar to power source as per local electrical code.
- 2.) Mount crossbar to a secure location using customer supplied screws.
- 3.) Connect the electrical plugs from the bottom of crossbar to the electrical plugs on top of the canopy.
- 4.) Attach canopy to crossbar and secure with lock washers and canopy nuts as shown.
- 5.) Screw light bulbs into canopy sockets.
- 6.) Place canopy shade then shade cap onto canopy rod and secure with finial.
- 7.) Place all fixture arms onto canopy hook.
- 8.) Connect electrical plugs from fixture arm to electrical plugs on shade frame and attach shade to fixture arms.

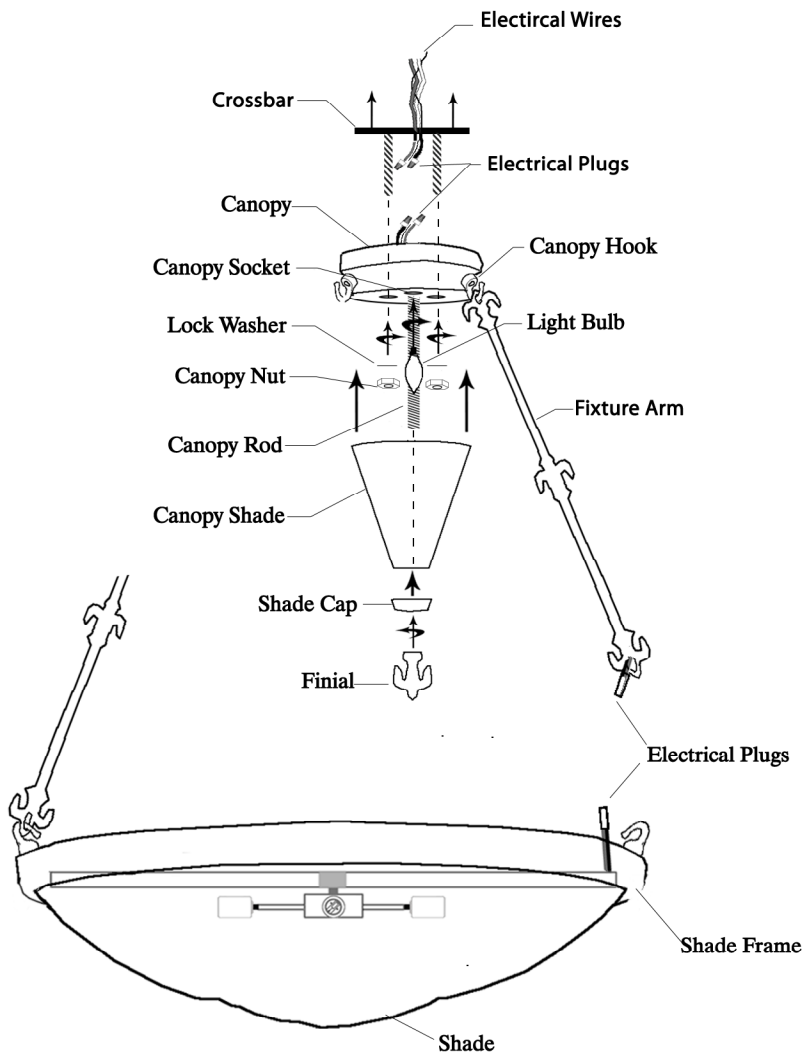

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com