


ASSEMBLY INSTRUCTIONS FOR #99824

QMCD4W-18-100-QWB-1SBCD

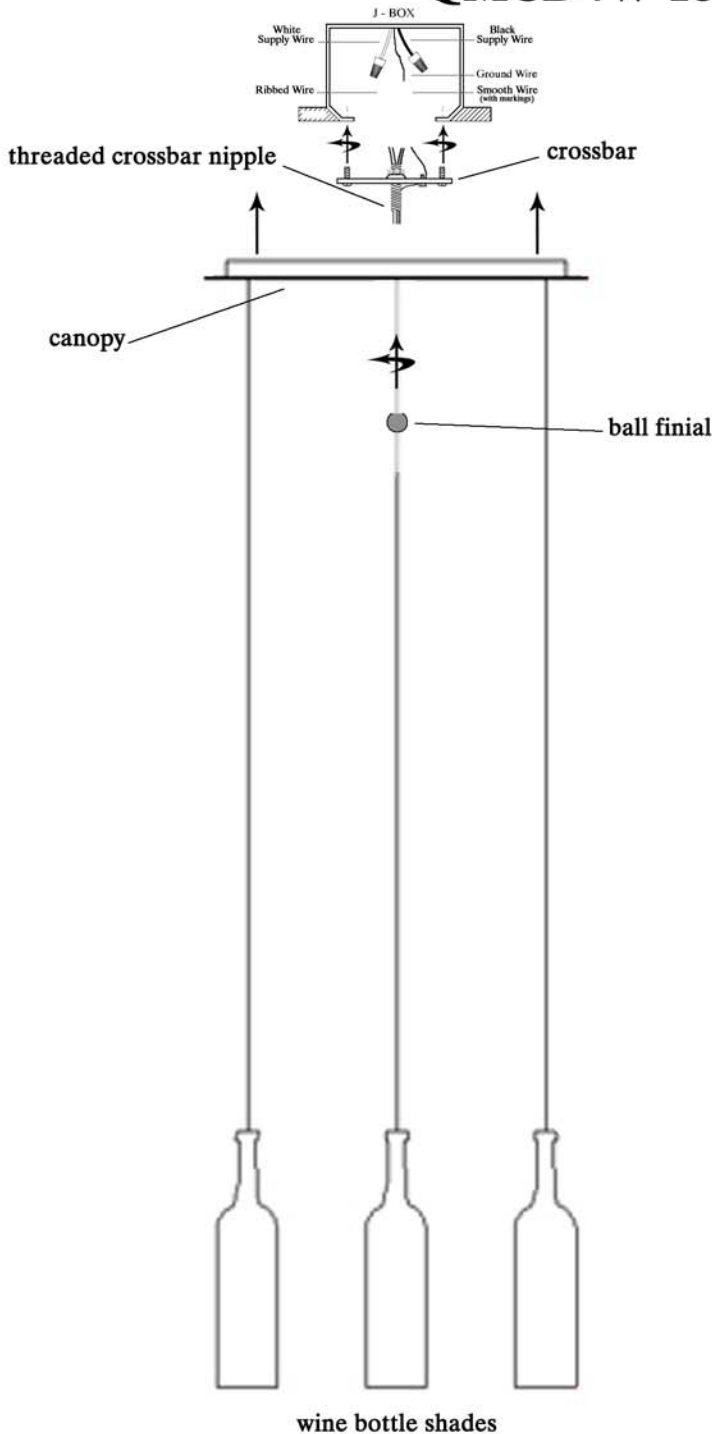

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY.

REMOVE BUBBLE WRAP FROM INSIDE AND OUTSIDE OF SHADES ONLY AFTER FIXTURE INSTALLATION IS COMPLETE.

1. Screw crossbar into j-box.
2. Place fixture to j-box and wire as per local electrical code.
3. Place fixture up and onto threaded crossbar nipple to ceiling.
4. Screw ball finial onto threaded crossbar nipple and tighten to canopy.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com