


ASSEMBLY INSTRUCTIONS FOR 107668 (Q14-09-4005-QSSC4-37)

IMPORTANT
TURN OFF THE POWER AT THE MAIN
FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

1. Screw threaded rod into crossbar, screw crossbar nut onto threaded rod and to crossbar.
2. Screw crossbar to j-box.
3. Wire as per local electrical code.
4. Place back plate onto threaded rod, screw back plate nut onto threaded rod and tighten to back plate.
5. Screw light bulb into socket.
6. Place rubber washer onto post A, place shade onto post A, screw fixture nut onto post A and tighten (DO NOT OVER TIGHTEN).

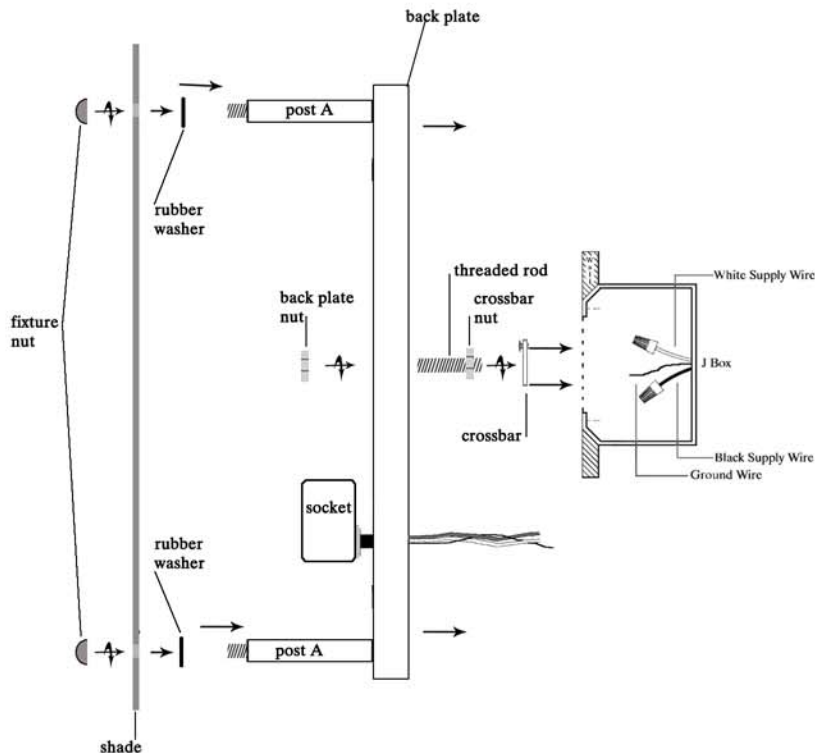

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com