

ASSEMBLY INSTRUCTIONS FOR #110656 (33113-2)

FIG.A

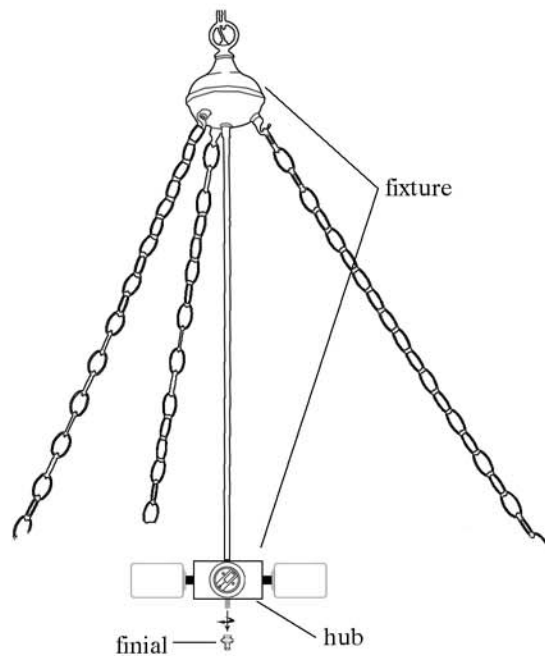


FIG.B


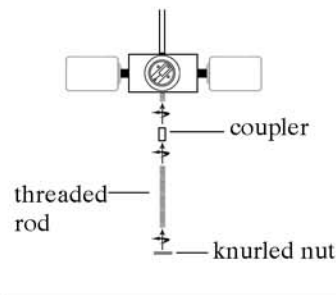


FIG.C

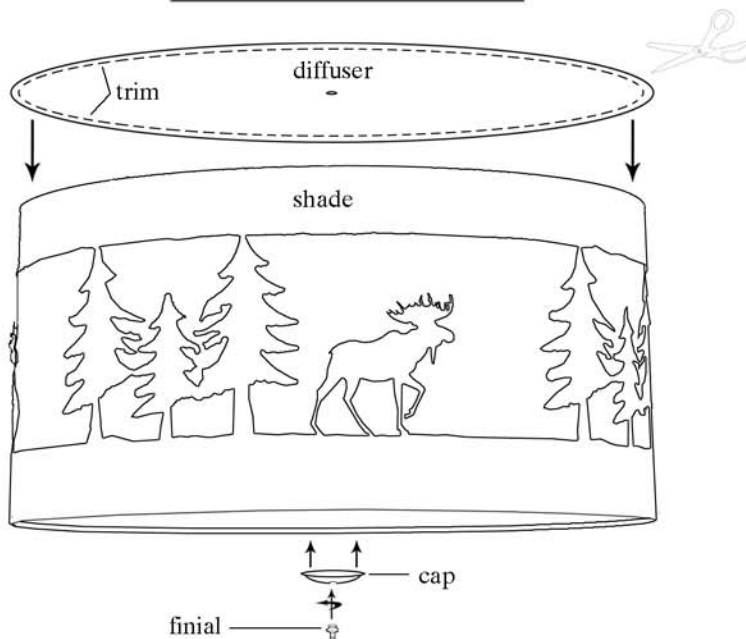

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

To add a diffuser panel to your fixture.

1. Remove shade from fixture, remove finial from bottom of hub. FIG.A
2. Screw coupler onto bottom of hub, screw threaded rod into coupler, screw knurled nut onto threaded rod approx. one half inch. FIG.B (threaded rod may need to be cut to proper length).
3. Trim mica diffuser panel to 31.5". Fit diffuser panel into shade to seat onto 1/4" shelf located on bottom of shade. (you may need to trim more of the diffuser panel to fit into shade). FIG.C
4. After you have seated the diffuser panel into the shade place the shade up and onto the fixture. Make sure that threaded rod fits through center hole in diffuser. Adjust knurled nut to rest on top of diffuser panel.
5. Place cap onto threaded rod and secure with finial. FIG.C



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com