


ASSEMBLY INSTRUCTIONS FOR #118793 (200007-6)

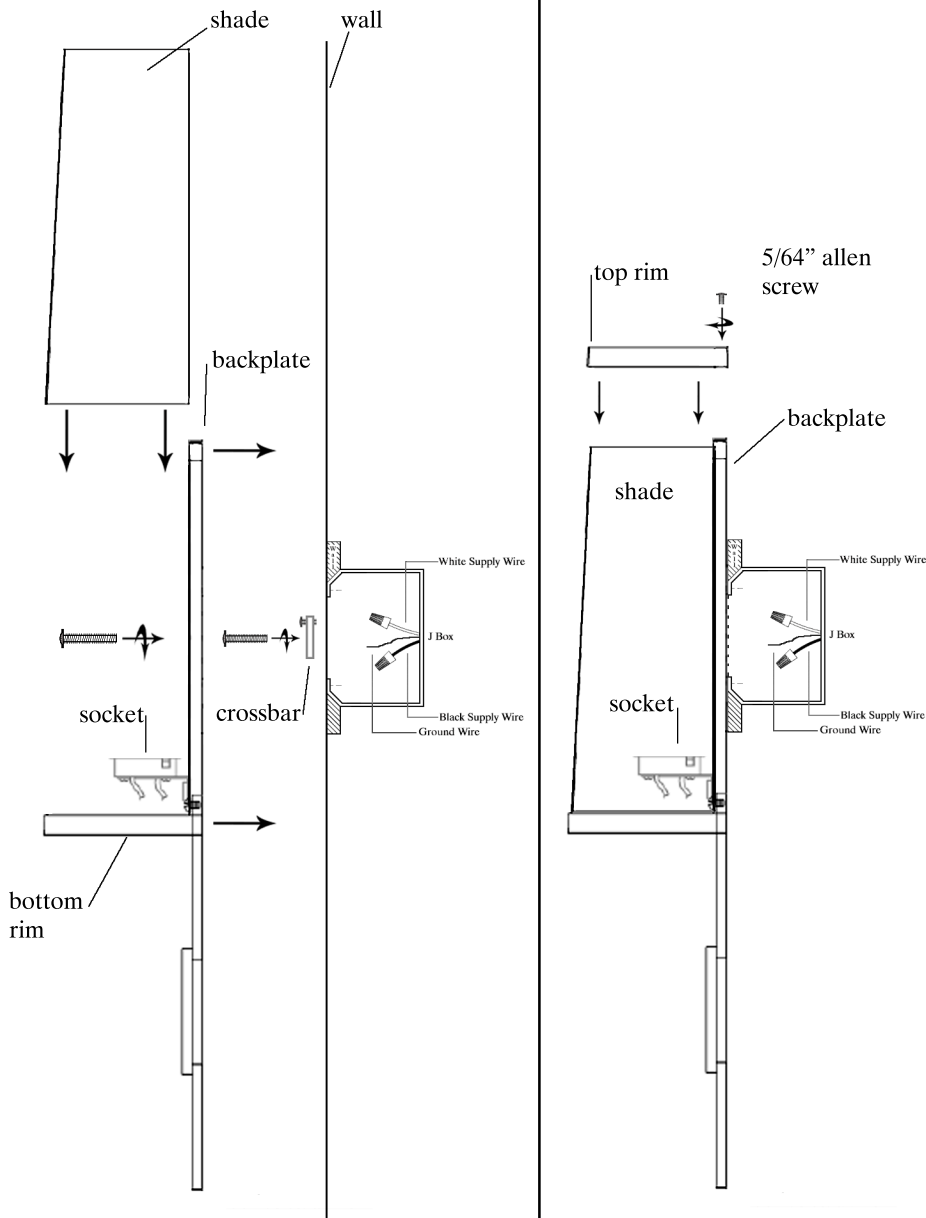

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

TOOLS NEEDED: (1) 5/64" Allen wrench.

1. Attach crossbar to j-box
2. Wire as per local electrical code.
3. Screw fixture to crossbar, tighten fixture to wall.
4. Place light bulb into socket.
5. Slide shade down and seat into bottom fixture rim.
6. Place top rim down and onto fixture backplate/over shade.
7. Attach top rim using 5/64" allen wrench (NOT PROVIDED) and 2 5/64" screws (PROVIDED)..



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com