

## ASSEMBLY INSTRUCTIONS FOR

121906 (S15400-1)

**IMPORTANT**

TURN OFF THE POWER AT THE MAIN  
FUSE OR CIRCUIT BREAKER BOX  
BEFORE STARTING INSTALLATION


CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE  
NOT INCLUDED



**DO NOT REMOVE CANOPY  
LOOPS OR REINFORCEMENT  
PLATE FROM CANOPY**

— THIS IS A 2 PERSON JOB —

1. Attach crossbar to jbox. FIG.A
2. Attach fixture chains to shade loops and canopy loops. FIG.B
3. Place fixture wire through fixture chain and canopy. FIG.B
4. Wire as per local electrical code.
5. Place canopy (with fixture) onto crossbar nipple to ceiling, screw finial onto crossbar nipple and tighten to canopy. FIG.B

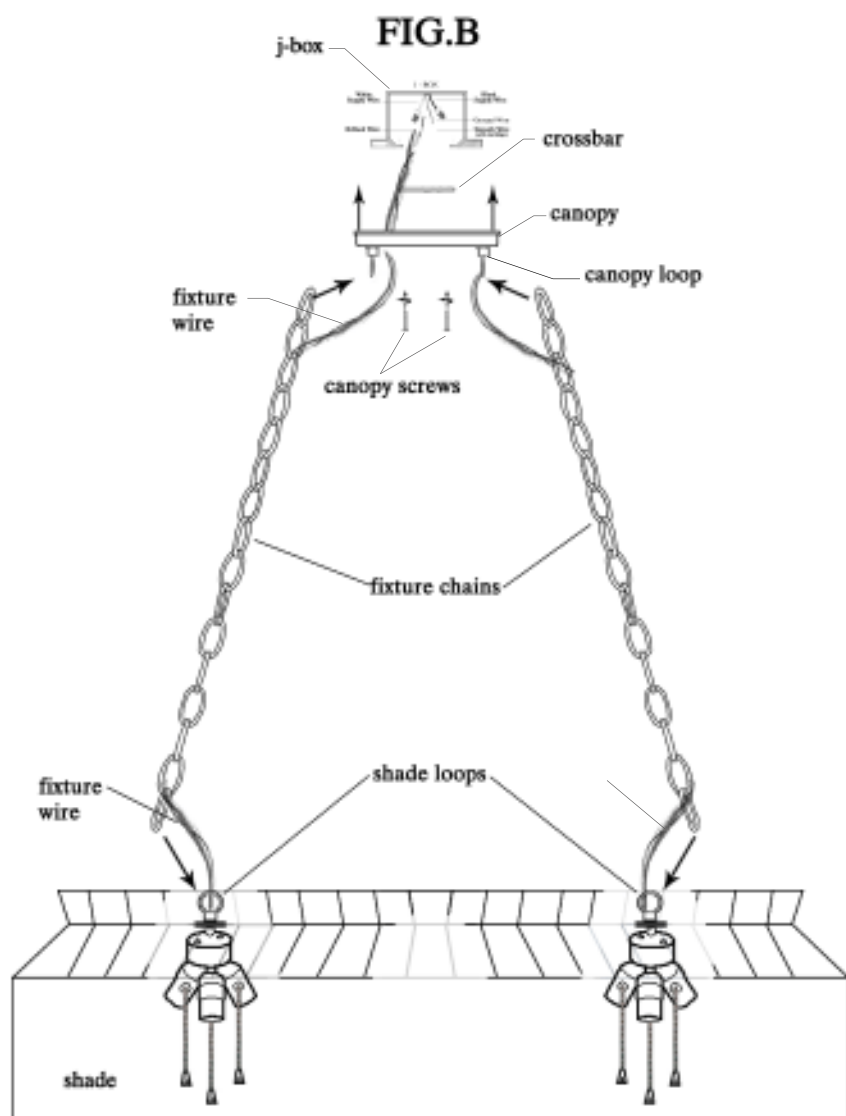

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)