


ASSEMBLY INSTRUCTIONS FOR #122836 (50286-158)

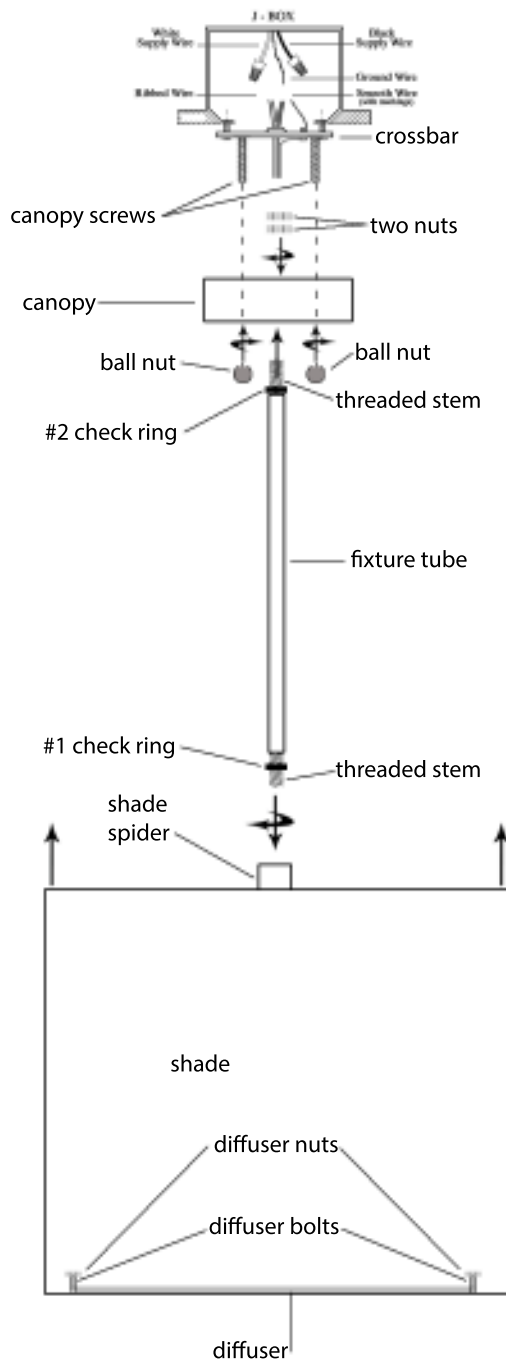

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

*When placing fixture wire through threaded stem be careful not to lose plastic wire protectors.

1. Remove canopy from threaded stem (2) nuts.
 2. Place fixture wire through threaded stem. Screw threaded stem into shade spider and tighten.
 3. Place #1 check ring then fixture tube onto threaded stem, place #2 check ring onto fixture tube.
 4. Place canopy onto threaded stem and secure with (2) nuts.
 5. Attach crossbar with canopy screws to jbox.
- * If relamping from bottom of fixture you must remove the diffuser nuts located on the inside of shade, diffuser panels are held in place by the diffuser bolts. If relamping from top of fixture Do Not remove diffuser nuts.
6. Wire as per local electrical code.
 7. Place canopy/fixture onto canopy screws and secure with ball nuts.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com