

ASSEMBLY INSTRUCTIONS FOR #69227 (1-0243152054-2

-TR871-05R-1)

FIG.A


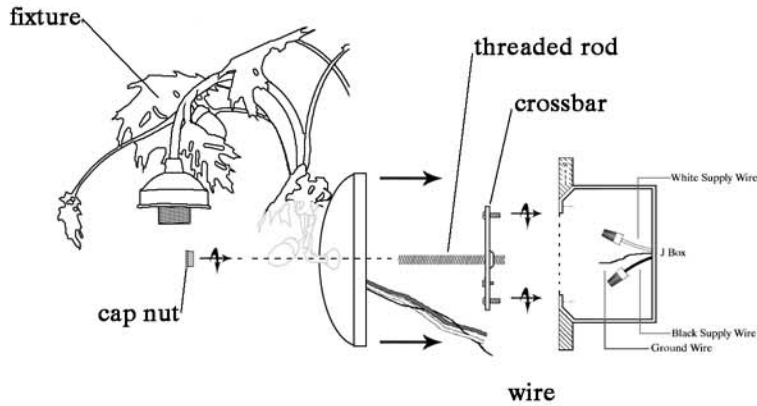


FIG.B

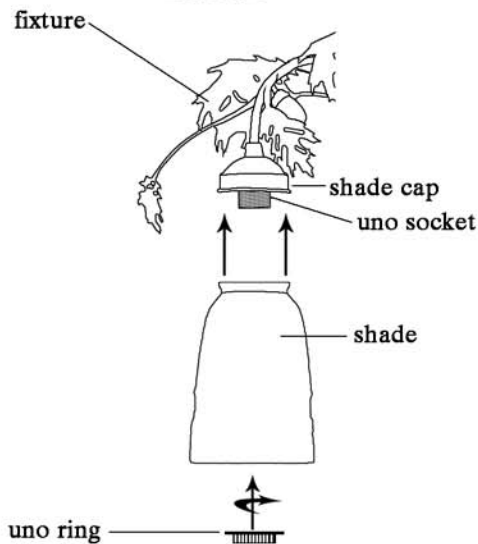

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar with threaded rod to jbox. FIG.A
2. Wire as per local electrical code.
3. Place fixture onto threaded rod and attach with cap nut. FIG.A
4. Place shade up and onto uno socket (seat shade into shade cap), screw uno ring onto uno socket and tighten to shade. FIG.B
5. Repeat step #4 with remaining shade. FIG.B



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com