

# ASSEMBLY INSTRUCTIONS FOR #69286 (54156-2)


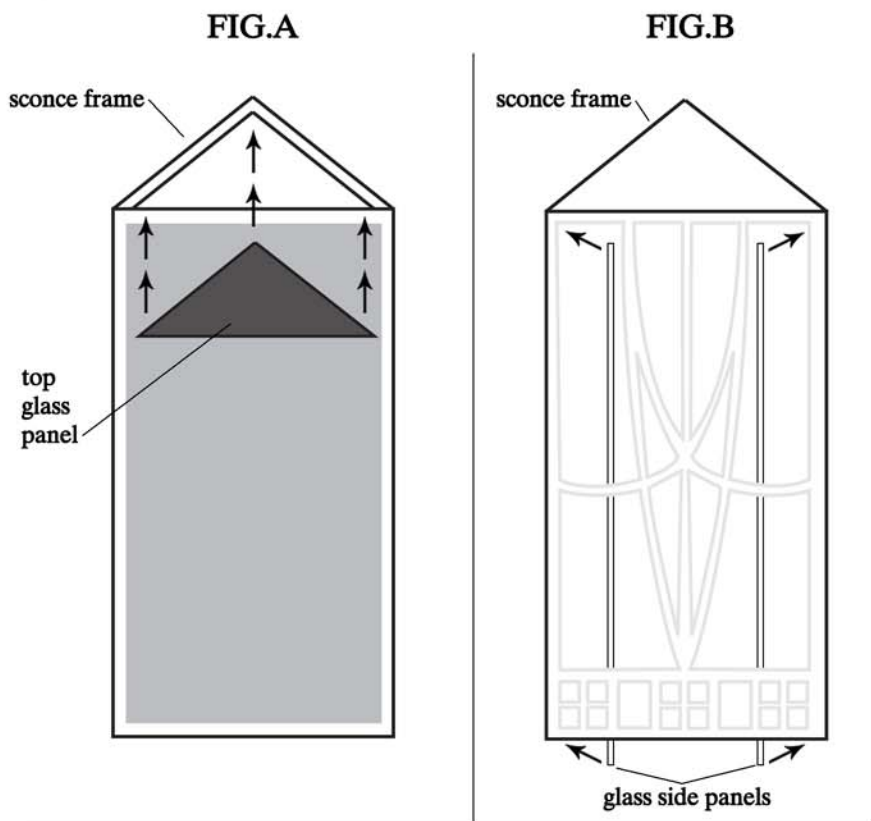


FIG.C

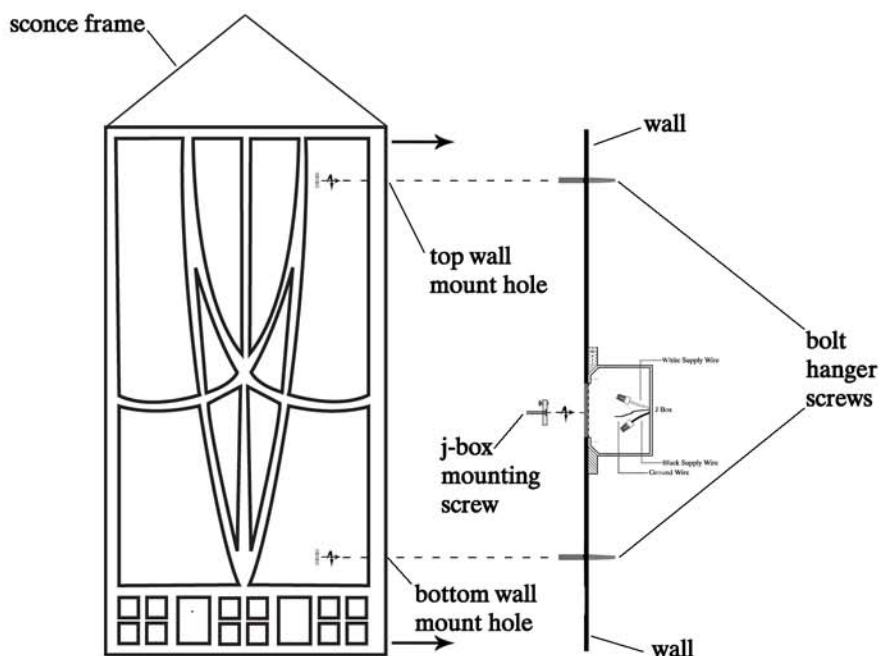

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Place top glass panel into place and secure into place with thumb nuts provided. FIG.A
2. Place glass side panels into frame and secure into place with thumb nuts provided. FIG.B
3. Measure distance from j-box mounting screws to top and bottom wall mount holes, screw bolt hanger screws into wall at these points leaving enough steel screw exposed to attach sconce. FIG.C
4. Wire as per local electrical code.
5. Attach sconce to wall using bolt hanger and j-box mounting screws.
6. Place front panel of glass into front of frame and secure with thumb nuts.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)