


ASSEMBLY INSTRUCTIONS FOR #70715 (35613-10CFL)

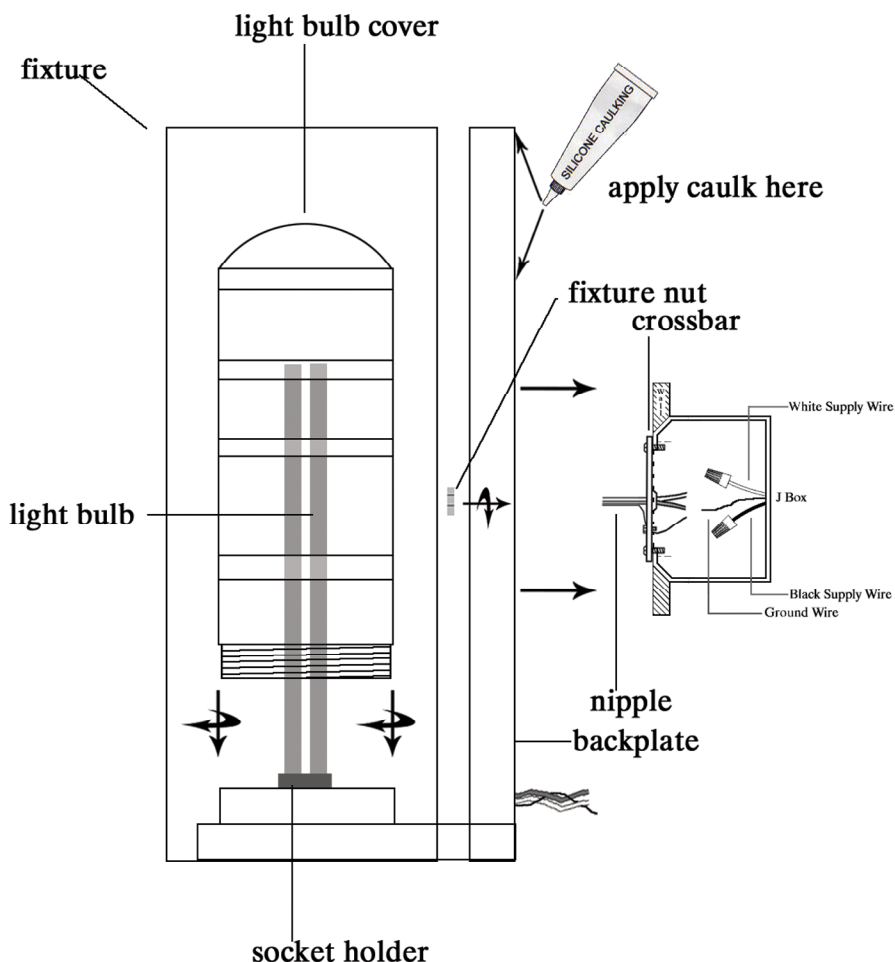

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY.

1. Screw crossbar into J-Box.
2. Screw nipple into crossbar. Make sure nipple extends through backplate approx. 1/4" to accommodate fixture nut.
3. Wire as per local electrical code
4. Place caulking around entire edge of backplate.
5. Place fixture to wall surface (seat backplate w/caulk tightly to wall).
6. Screw fixture nut to nipple and tighten.
7. Place light bulb into socket.
8. Screw light bulb cover into socket holder.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com