

ASSEMBLY INSTRUCTIONS FOR #99851 (38259-11)

FIG.A

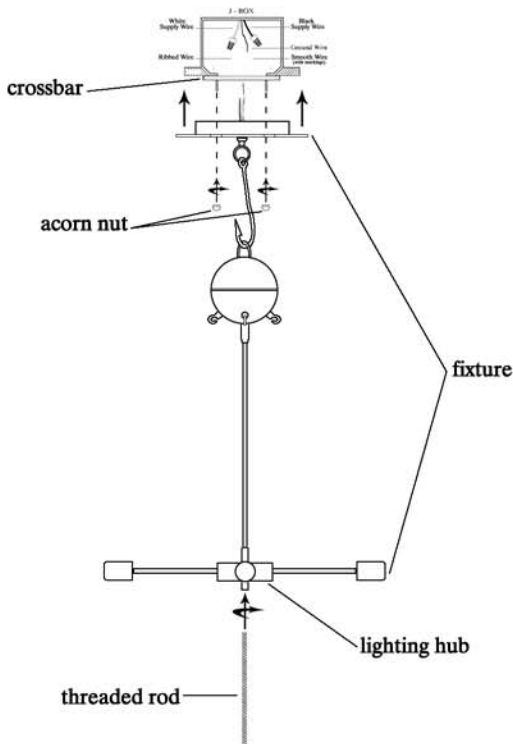


FIG.B

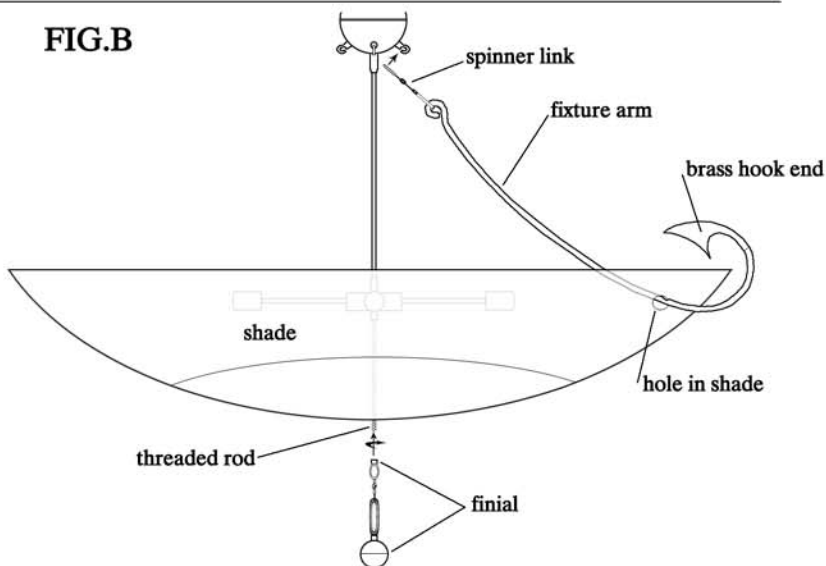


FIG.C

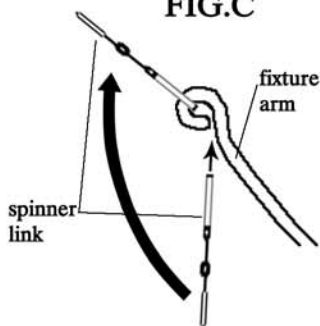


FIG.D

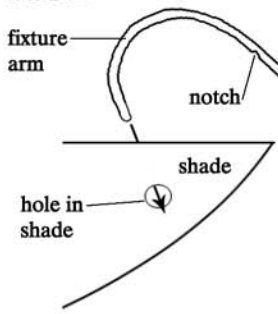


FIG.E


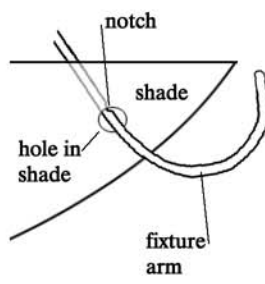


FIG.F

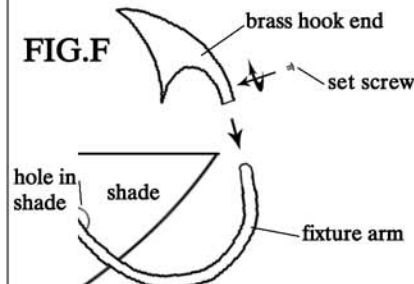

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw crossbar to canopy. FIG.A
2. Wire as per local electrical code.
3. Attach fixture to crossbar with acorn nuts provided. FIG.A
4. Screw threaded rod into bottom of lighting hub. FIG.A
5. Remove brass hook end from fixture arm (each brass hook end **MUST** be reattached to the fixture arm it was removed from), place fixture arm through hole in shade. Replace brass hook end onto fixture arm it was removed from. FIG. D,E & F
6. Attach spinner link to fixture arm, be sure to attach large loop to fixture rod end. FIG.C
7. Attach shade to fixture hub with threaded rod through center hole in bottom of shade. FIG.B
8. Screw finial onto threaded rod and tighten to shade. FIG.B

* Make sure that notch located in fixture arm seats into hole in shade to insure proper fixture balance see FIG.E



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com